

Lockheed Environmental Systems & Technologies Co.  
Lockheed Analytical Services  
975 Kelly Johnson Drive Las Vegas, Nevada 89119-3705  
Telephone 702-361-0220 800-582-7605 Facsimile 702-361-8146


0044368

LK4467

LOCKHEED MARTIN

June 12, 1995

Ms. Joan Kessner  
Bechtel Hanford, Inc.  
345 Hills  
P.O. Box 969  
Richland, WA 99352

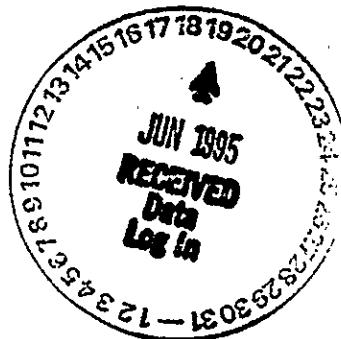

RE: Log-in No.: L4467  
Quotation No.: Q400000-B  
SAF: B95-050  
Document File No.: 0509596  
BHI Document File No.: 220  
SDG No.: LK4467

The attached data report contains the analytical results of samples that were submitted to Lockheed Analytical Services on 9 May 1995.

The temperature of the cooler upon receipt was 2°C. Sample containers received agree with the chain-of-custody documentation. Sample containers were received intact. Samples were received in time to meet the analytical holding time requirements.

The case narratives included in the following attachments provide a detailed description of all events that occurred during sample preparation, analysis, and data review specific to the samples and analytical methods requested.

A list of data qualifiers, chain-of-custody forms, sample receiving checklist, and log-in report are also enclosed representing the samples received within this group.

If you have any questions concerning the analysis or the data please call Kathleen Hall at (509) 943-4423.

002

*Lockheed Analytical Services*

Log-in No.: L4467  
Quotation No.: Q400000-B  
SAF: B95-050  
Document File No.: 0509596  
BHI Document File No.: 220  
SDG No.: LK4467  
Page1

Release of this data report has been authorized by the Laboratory Director or the Director's designee as evidenced by the following signature:

" I certify that this data package is in compliance with the SOW, both technically and for completeness, for other than the conditions detailed above. Release of the data contained in this hard copy data package has been authorized by the Laboratory Manager or a designee, as verified by the following signature."

Sincerely,

*Karen Hermann for KMH*

Kathleen M. Hall  
Client Services Representative

cc: Client Services  
Document Control

## CASE NARRATIVE RADIOCHEMICAL ANALYSES

The routine calibration and quality control analyses performed for this batch include as applicable: instrument calibration, initial and continuing calibration verification, quench monitoring standards, instrument background analysis, method blanks, yield tracer, laboratory control samples, matrix spike samples, duplicate samples.

### Holding Time Requirements

All holding time requirements were met.

**Chemical Recoveries and MDAs**, where applicable, can be found on the preparation and calculation sheets of the attached raw data for each method.

### Analytical Method

#### Gamma Spectrum Analysis

The gamma spectrum analysis was performed using LAL-91-SOP-0063. The second sample duplicate analysis for Cs-137 was out of limits; however, since the first duplicate was within limits, the data is considered acceptable, and all other QC criteria were met.

#### Technetium-99

The technetium-99 analysis was performed using LAL-91-SOP-0169. The second sample duplicate analysis was out of limits; however, since the first duplicate was within limits, the data is considered acceptable, and all other QC criteria were met.

Yvonne M. Jacoby  
Prepared By

June 12, 1995  
Date

*Lockheed Analytical Services*  
**DATA QUALIFIERS FOR RADIOCHEMICAL ANALYSES**  
*[Revised 08/28/92]*

**For Use on the Analytical Data Reporting Forms**

<b>B</b>	Any constituent that was also detected in the associated blank whose concentration was greater than the reporting detection limit (RDL) and/or minimum detectable activity (MDA).
<b>C</b>	Presence of high TDS in sample required reduction of sample size which increased the MDA.
<b>D</b>	Constituent detected in the diluted sample.
<b>E</b>	Constituent concentration exceeded the calibration or attenuation curve range.
<b>F</b>	<i>For Alpha Spectrometry Only-- FWHM exceeded acceptance limits.</i>
<b>H</b>	Sample analysis performed outside of method-specified maximum holding time requirement.
<b>Y</b>	Chemical yield exceeded acceptance limits.

**For Use on the QC Data Reporting Forms**

*	QC data (i.e., percent recovery data for laboratory control standard and matrix spike; and RPD for replicate analyses) exceeded acceptance limits.
a <sup>1</sup>	The spike recovery and/or RPD for matrix spike and duplicates cannot be evaluated due to insufficient spiking level compared to the elevated sample analyte concentration.
b <sup>1</sup>	The RPD cannot be computed because the sample and/or duplicate concentration was below the MDA.

<sup>1</sup> Used as foot note designations on the QC summary form.

LOGIN CHAIN OF CUSTODY REPORT (ln01)  
May 09 1995, 10:58 am

Login Number: L4467  
Account: 596 Bechtel Hanford, Inc. \* Richland, WA  
Project: BECHTEL-HANFORD Bechtel Hanford Project

Laboratory Sample Number	Client Sample Number	Collect Date	Receive Date	Due PR Date
L4467-1 temp 2; SAF# B95-050 Location: 157 Water	1 S SCREENING	BOFBK3	06-MAY-95 09-MAY-95	13-JUN-95
			Hold:02-NOV-95	
L4467-2 temp 2; SAF# B95-050, GAMMA SPEC TO INCLUDE Co-60 Location: 157 Water	1 S GAMMA SPEC LAL-0063	BOFBK3	06-MAY-95 09-MAY-95	13-JUN-95
			Hold:02-NOV-95	
L4467-3 temp 2; SAF# B95-050, GAMMA SPEC TO INCLUDE Co-60 Location: 157		BOFBK3	06-MAY-95 09-MAY-95	13-JUN-95
L4467-4 temp 2; SAF# B95-050, GAMMA SPEC TO INCLUDE Co-60 Location: 157		BOFBK3	06-MAY-95 09-MAY-95	13-JUN-95
L4467-5 temp 2; SAF# B95-050, GAMMA SPEC TO INCLUDE Co-60 Location: 157		BOFBK3	06-MAY-95 09-MAY-95	13-JUN-95
L4467-6 temp 2; SAF# B95-050 Location: 157 Water	1 S TC-99 LAL-0169	BOFBK3	06-MAY-95 09-MAY-95	13-JUN-95
			Hold:02-NOV-95	
L4467-7 temp 2; SAF# B95-050 Location: 157		BOFBK3	06-MAY-95 09-MAY-95	13-JUN-95
L4467-8 temp 2; SAF# B95-050 Location: 157		BOFBK3	06-MAY-95 09-MAY-95	13-JUN-95
L4467-9 temp 2; SAF# B95-050 Location: 157		BOFBK3	06-MAY-95 09-MAY-95	13-JUN-95
L4467-10 Location: Water	1 S EDD - DISK DEL.	REPORT TYPE	09-MAY-95 09-MAY-95	13-JUN-95
Water	1 S RAD RPT TYPE 2			

007

Page 1

Signature: Marilyn

Date: 5-9-95

C5E9544

Bechtel Hanford, Inc.

L4467

## CHAIN OF CUSTODY/SAMPLE ANALYSIS REQUEST

Page 1 of 1

Data Turnaround

 Priority Normal

Collector DAVE St John		Company Contact G.L. Kasza				Telephone (509) 372-9675						
Project Designation 200-BP-5 Groundwater Round 3		Sampling Location 200 East				SAF No. B95-050						
Ice Chest No. GWS-141		Field Logbook No. EFZ-1125				Method of Shipment Federal Express						
Shipped To Lockheed		Offsite Property No. W95-0-0001-096				Bill of Lading/Air Bill No. R9046-R7686						
Possible Sample Hazards/Remarks		Preservation	HNO <sub>3</sub>	HCl	Cool 4°							
		Type of Container	P/G	P	P							
		No. of Container(s)	4	4	1							
Special Handling and/or Storage Maintain samples between 2°C and 6°C.		Volume	1L	1L	20mL							
SAMPLE ANALYSIS												
Sample No.	Matrix*	Date Sampled	Time Sampled									
B0FBK3	W	5-6-95	1050	X	X	X						
CHAIN OF POSSESSION		Sign/Print Names				SPECIAL INSTRUCTIONS				Matrix*		
Relinquished By John EPC	Date/Time 05-08-95 0830	Received By John EPC	Date/Time 0830									S = Soil
Relinquished By John EPC	Date/Time 1000	Received By John EPC	Date/Time									SE = Sediment
Relinquished By John EPC	Date/Time	Received By	Date/Time									SO = Solid
Relinquished By John EPC	Date/Time	Received By	Date/Time									SL = Sludge
LABORATORY SECTION	Received By M. Miller	Title Sample Custodian		Date/Time 5-9-95 / 0830								W = Water
FINAL SAMPLE DISPOSITION	Disposal Method	Disposed By		Date/Time								O = Oil

Environmental  
Restoration  
Contractor

***ERC Team***

***Interoffice Memorandum***

Job No. 22192  
Written Response Required: NO  
CCN: N/A  
OU: 300-BP-5  
TSD: N/A  
ERA: N/A  
Subject Code: 1995 Round 3 Sampling

TO: W. S. Thompson N3-06 DATE: April 21, 1995  
COPIES: D. B. Erb H6-01 FROM: S. K. De Mers  
Radiological Controls  
N3-06/376-2764  
SUBJECT: 1995 Round 3 sampling for 200-BP-5

There is no need to perform total activities prior to offsite shipment to NRC licensed labs of samples taken from the attached list of wells.

The wells listed in the attachment were reviewed for radiological content based on the previous 4 years of sampling data. No well listed has a  $\beta$  activity in excess of 100,000 pCi/l ( $<.1$  uCi/sample based on a 1 liter sample size) nor any  $\alpha$  activity in excess of 10,000 pCi/l ( $<.01$  uCi/l based on a 1 liter sample). All wells show activities  $< 2,000$  pCi/gm ( $< 2$  nCi/gm D.O.T. limit). The highest activity in recent samples is 17,000 pCi/l  $\beta$  and 170 pCi/l  $\alpha$ .

Radiological monitoring during sampling will only be required if the wells are located in radiological areas or if the wells themselves are labeled with radiological stickers. Monitoring requirements for down hole work such as pump removal will be determined based on the history of each well on a case by case basis.

skd

009

C509591

# Sample Login

## Login Review Checklist

Lot Number L4467

The login review should be conducted by that person logging in the samples as well as a peer. Please use this checklist to ensure that such reviews occur in a uniform basis. Please sign and date below to verify that a login review has occurred. This checklist should be affixed to each login package prior to distribution.

For an effective login review, as a minimum, five reports from the login process are required. These are the chain of custody (or equivalent), the login chain of custody report, the sample summary report, the sample receiving checklist, and the login quotation. Before beginning a review, ensure that these five components are available. For jobs with single component samples, the sample summary report may be omitted.

### Sample Summary Report

N/A

Yes    No   

1. Are all sample IDs correct? X
2. Are all samples present? X
3. Are all matrices correct?  
(e.g., TCLP analyses should be on a TCLP leachate, field blanks should be water) X
4. Are all analyses on the chain of custody/login quotation included? X
5. Are analyses logged in for the correct container?  
(e.g., analyses requiring preservation logged in for a preserved container and vice versa) X
6. Are samples logged in according to laboratory batching procedures?  
(e.g., TCLP regular leaching and associated metals/semivolatile organics should be logged in on the same bottle) X

### Login Chain of Custody Report

1. Are the Collect, Receive, and Due dates correct for every sample? X
2. Have appropriate sample comments been included?  
(e.g., MS/MSD designation, comments from the client concerning method modifications) X

### Sample Receiving Checklist

1. Are any discrepancies between the chain of custody and the login noted?  
(e.g., client IDs different on chains of custody and bottle labels, samples not sent, samples lost from breakage)       M/J

Miller 5-9-95 Park Davis 5-09-95

Primary review signature

Date

Secondary review signature

Date

010

5295916

# WHC/BHI SAMPLE CHECK-IN LIST

Date/Time Received: 5-9-95/0830 SDG #: Bethel - Hanford

Work Order Number: MJ SAF #: B95-050

Shipping Container ID: GWS-141 Chain of Custody #: MJ

1. Custody Seals on shipping container intact? Yes  No
2. Custody Seals dated and signed? Yes  No
3. Chain-of-Custody record present? Yes  No
4. Cooler temperature 2°C
5. Vermiculite/packing materials is Wet  Dry
6. Number of samples in shipping container: 9
7. Sample holding times exceeded: Yes  No
8. Samples have: tape hazard labels  
 custody seals  appropriate sample labels
9. Samples are:  in good condition  leaking  
 broken  have air bubbles
10. Were any anomalies identified in sample receipt? Yes  No
11. Description of anomalies (include sample numbers):  
\_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_

Sample Custodian: Anthony Miller On: 5-9-95/1100

Telephoned To: Kathleen Hall On 5-9-95/1100 By Anthony Miller

## Lockheed Analytical Services

Page 1 of

## Sample Receiving Checklist

Client Name: Bechtel - Hanford

Job No. L4467

Cooler ID: VAP-T<sup>M</sup><sub>5-24</sub> GWS-141

## COOLER CONDITION UPON RECEIPT

Temperature of cooler upon receipt:

2°C

temperature of temp. blank upon receipt:

	Yes	No	* Comments/Discrepancies
custody seals intact	X		
chain of custody present	X		
blue ice (or equiv.) present/frozen	X		
rad survey completed	X		

## SAMPLE CONDITION UPON RECEIPT

	Yes	No	* Comments/Discrepancies
all bottles labeled	X		
samples intact	X		
proper container used for sample type	X		
sample volume sufficient for analysis	X		
proper pres. indicated on the COC	X		
VOA's contain headspace			N/A
are samples bi-phasic (if so, indicate sample ID'S):			N/A

## MISCELLANEOUS ITEMS

	Yes	No	* Comments/Discrepancies
samples with short holding times		X	
samples to subcontract		X	

## ADDITIONAL COMMENTS/DISCREPANCIES

Completed by / date: Miller 5-9-95

Sent to the client (date/initials):

\*\* Client's signature upon receipt:

Notes: \* = contact the appropriate CSR of any discrepancies immediately upon receipt

\*\* = please review this information and return via facsimile to the appropriate CSR (702) 361-8146

012

Lockheed Analytical Laboratory  
SAMPLE SUMMARY REPORT (su02)  
Bechtel Hanford, Inc. \* Richland, WA

Client Sample Number	LAL Sample Number	SDG Number	Matrix	Method
B0FBK3—	L4467-1 L4467-2 L4467-6	Water Water Water		SCREENING — GAMMA SPEC LAL-C TC-99 LAL-0169 —
REPORT TYPE —	L4467-10 L4467-10	Water Water		EDD - DISK DEL. RAD RPT TYPE 2

## LOCKHEED ANALYTICAL SERVICES

## RAD DATA REPORT (ra01)

Bechtel Hanford, Inc. \* Richland, WA

Bechtel Hanford Project (Project BECHTEL-HANFORD)

Client Sample ID: B0FBK3

LAL Sample ID: L4467-2

Date Collected: 06-MAY-95

Date Received: 09-MAY-95

Matrix: Water

Login Number: L4467

SDG: LK4467

Constituent	Analyzed	Batch	Activity	Result	NDA	Datastat	Units
Ac-228(Ra-228)	30-MAY-95	GAMMA SPEC	LAL-0063_23211	15.	26.	40.	pCi/L
Co-58	30-MAY-95	GAMMA SPEC	LAL-0063_23211	3.9	5.3	8.7	pCi/L
Co-60	30-MAY-95	GAMMA SPEC	LAL-0063_23211	1.4	5.1	8.1	pCi/L
Cs-137	30-MAY-95	GAMMA SPEC	LAL-0063_23211	2.9	8.1	10.	pCi/L
Eu-152	30-MAY-95	GAMMA SPEC	LAL-0063_23211	1.	12.	41.	pCi/L
Eu-154	30-MAY-95	GAMMA SPEC	LAL-0063_23211	-2.	13.	34.	pCi/L
Eu-155	30-MAY-95	GAMMA SPEC	LAL-0063_23211	-6.7	6.3	19.	pCi/L
Fe-59	30-MAY-95	GAMMA SPEC	LAL-0063_23211	8.	10.	22.	pCi/L
Pb-212	30-MAY-95	GAMMA SPEC	LAL-0063_23211	2.	11.	16.	pCi/L
Pb-214(Ra-226)	30-MAY-95	GAMMA SPEC	LAL-0063_23211	9.	14.	19.	pCi/L
Ra-226(GAMMA)	30-MAY-95	GAMMA SPEC	LAL-0063_23211	10	140	200	pCi/L
U-235(GAMMA)	30-MAY-95	GAMMA SPEC	LAL-0063_23211	-20.	23.	45.	pCi/L

## LOCKHEED ANALYTICAL SERVICES

## RAD DATA REPORT (ra01)

Bechtel Hanford, Inc. \* Richland, WA

Bechtel Hanford Project (Project BECHTEL-HANFORD)

Client Sample ID: BOFBK3

LAL Sample ID: L4467-6

Date Collected: 06-MAY-95

Date Received: 09-MAY-95

Matrix: Water

Login Number: L4467

SDG: LK4467

Constituent	Analyzed	Batch	Activity	Error	MDA	Dataqual	Units
Tc-99	31-MAY-95	TC-99 LAL-0169_23139	45.4	8.8	6.0		pCi/L

016

Client BECHTEL  
 Client ID BOFBK3  
 Filename 232111.CHN  
 LAL parent ID 23211DUP1  
 Batch 6323211  
 Live Time 10800  
 Detector 1 LAS Detector 1, GMX-30200-P, Ser. No. 30-TN10223A  
 Geometry N  
 Aliquot ( gms/L) 0.475  
 Count date 5/31/95 10:49  
 Collection Date 5/6/95  
 delta T to midpoint of count 26.1 days  
 Efficiency data file N194  
 Background, Library files WBKG1149 whc

V94093

Nuclide	keV	halflife (days)	chnl	GROSS	BKG	NET	Hand Calc. NET	Sample cnts/sec	1 sig % err
Ra-226	186.1	5.84E+05	372	218	76	142	0.0131636	12.1	
U-235	185.7	2.57E+11	372	218	76	142	0.0131636	12.1	
	143.8	2.57E+11	288	161	123	38	0.0035185	44.3	
	163.3	2.57E+11	327	133	106	27	0.0025	57.3	
Pb-214(Ra-226)	351.9	5.84E+05	704	103	55	48	0.0044444	26.2	
	295.1	5.84E+05	591	89	89	0	3.086E-05	3998.7	
Fe-59	1099.2	4.51E+01	2198	14	8	6	0.0005401	80.7	
	1291.6	4.51E+01	2583	10	16	-6	-0.000586	81.0	
Co-58	810.8	7.08E+01	1622	18	23	-5	-0.000494	120.5	
Ac-228(Ra-228)	911.2	2.10E+03	1822	41	21	20	0.0018171	40.2	
	969	2.10E+03	1938	20	26	-6	-0.000556	113.0	
Pb-212	238.6	5.11E+12	478	144	80	65	0.0059722	23.2	
	300.1	5.11E+12	600	68	72	-4	-0.00037	295.8	
Co-60	1332.5	1924	2665	12	15	-3	-0.000278	173.2	
	1173.3	1924	2347	16	26	-10	-0.00088	67.8	
Cs-137	661.7	10950	1324	39	33	6	0.0005247	150.1	
Eu-155	105.3	1810	211	142	140	2	0.0001852	839.6	
Eu-152	1408.1	4.64E+03	2816	11	14	-3	-0.000278	166.7	
	344.3	4.64E+03	689	55	60	-5	-0.000417	237.8	
Eu-154	723.3	3.11E+03	1447	32	33	-1	-6.17E-05	1206.2	
	1004.8	3.11E+03	2009	11	28	-17	-0.001574	36.7	
	1274.5	3.11E+03	2549	13	14	-1	-9.26E-05	519.6	

Client	BECHTEL
Client ID	B0FBK3
Filename	232111.CHN
LAL parent ID	23211DUP1
Batch	6323211
Live Time	10800
Detector	1
Geometry	N
Aliquot ( gms/L)	0.475
Count date	5/31/95 10:49
Collection Date	5/6/95
delta T to midpoint of count	26.1
Efficiency data file	N194
Background, Library files	WBKG1149

Nuclide	keV	WBKG cnts/sec	1 sig % err	NET		NET		Branch
				Sample cnts/sec	1 sig % err	Efficiency	1 sigma % Eff err	
Ra-226	186.1	0.012097	5.6	-0.00967	23.36	0.055308	5	0.035
U-235	185.7	0.012097	5.6	0.00107	211.83	0.055389	5	0.575
	143.8	0.002617	23.1	0.00090	240.14	0.063815	5	0.109
	163.3	0.000867	65.4	0.00163	122.36	0.059981	5	0.05
Pb-214(Ra-226)	351.9	0.0016	27.7	0.00284	56.51	0.03237	5	0.358
	295.1	0.001333	36.4	-0.00130	132.06	0.037986	5	0.185
Fe-59	1099.2	3.06E-05	771.7	0.00051	131.83	0.011918	5	0.565
	1291.6	0.000208	91.7	-0.00079	35.74	0.010338	5	0.432
Co-58	810.8	-0.00024	110.1	-0.00049	120.55	0.015465	5	0.9945
Ac-228(Ra-228)	911.2	0.001046	30.0	0.00077	135.54	0.014001	5	0.266
	969	0.00045	65.7	-0.00101	33.04	0.013285	5	0.1617
Pb-212	238.6	0.006375	9.3	-0.00040	490.99	0.045721	5	0.4365
	300.1	0.0001	430.1	-0.00047	141.47	0.037416	5	0.03344
Co-60	1332.5	0.000267	79.1	-0.00054	49.65	0.010051	5	0.999
	1173.3	0.000317	72.0	-0.00120	30.81	0.011258	5	0.999
Cs-137	661.7	-0.00023	143.3	0.00052	150.09	0.018405	5	0.8521
Eu-155	105.3	0.000581	95.8	-0.00040	533.92	0.06833	5	0.218
Eu-152	1408.1	0.000225	75.7	-0.00050	58.19	0.009557	5	0.212
	344.3	-0.00014	304.6	-0.00042	237.79	0.033022	5	0.27
Eu-154	723.3	-0.00037	84.1	-0.00006	1206.23	0.017049	5	0.197
	1004.8	-0.00018	134.0	-0.00157	36.74	0.012878	5	0.176
	1274.5	-9.4E-05	200.9	-0.00009	519.62	0.010462	5	0.355

Client	BECHTEL
Client ID	B0FBK3
Filename	232111.CHN
LAL parent ID	23211DUP1
Batch	6323211
Live Time	10800
Detector	1
Geometry	N
Aliquot ( gms/L)	0.475
Count date	5/31/95 10:49
Collection Date	5/6/95
delta T to midpoint of count	26.1
Efficiency data file	N194
Background, Library files	WBKG1149

Nuclide	keV	Bq	pCi/L	MDA pCi/L	Decay factor	Corrected pCi/L	error 1 sigma	Corrected MDA pCi/L
Ra-226	186.1	-4.995864	-283.9754	189.04	1.000031	-283.98	67.83	189.05
U-235	185.7	0.033482	1.903199	11.49	1	1.903	4.03	11.49
	143.8	0.129653	7.369749	45.32	1	7.370	17.70	45.32
	163.3	0.544616	30.95712	92.40	1	30.957	37.91	92.40
Pb-214(Ra-226)	351.9	0.245458	13.95237	19.19	1.000031	13.953	7.92	19.19
	295.1	-0.185343	-10.53527	37.39	1.000031	-10.536	13.92	37.39
Fe-59	1099.2	0.075674	4.301494	12.71	1.492975	6.422	8.47	18.98
	1291.6	-0.177957	-10.111544	26.82	1.492975	-15.102	5.45	40.04
Co-58	810.8	-0.032109	-1.825116	8.17	1.290933	-2.356	2.84	10.54
Ac-228(Ra-228)	911.2	0.207099	11.77192	41.39	1.008644	11.874	16.10	41.75
	969	-0.468105	-26.60809	69.93	1.008644	-26.838	8.97	70.53
Pb-212	238.6	-0.020182	-1.147198	15.65	1	-1.147	5.63	15.65
	300.1	-0.375943	-21.36939	178.62	1	-21.369	30.25	178.62
Co-60	1332.5	-0.054221	-3.082048	11.73	1.009439	-3.1111	1.55	11.84
	1173.3	-0.106366	-6.046055	12.97	1.009439	-6.1031	1.90	13.09
Cs-137	661.7	0.033456	1.901698	9.58	1.001652	1.9048	2.86	9.60
Eu-155	105.3	-0.026542	-1.508704	20.83	1.010036	-1.524	8.136	21.037
Eu-152	1408.1	-0.248155	-14.10565	56.00	1.003904	-14.16	8.27	56.22
	344.3	-0.046733	-2.656375	22.50	1.003904	-2.67	6.34	22.59
Eu-154	723.3	-0.018379	-1.044687	43.29	1.005838	-1.05	12.68	43.54
	1004.8	-0.694482	-39.47583	61.40	1.005838	-39.71	14.72	61.76
	1274.5	-0.02493	-1.417077	27.58	1.005838	-1.43	7.41	27.74

## 232111.XLS

Client BECHTEL  
 Client ID BOFBK3  
 Filename 232111.CHN  
 LAL parent ID 23211DUP1  
 Batch 6323211  
 Live Time 10800  
 Detector 1  
 Geometry N  
 Aliquot ( gms/L) 0.475  
 Count date 5/31/95 10:49  
 Collection Date 5/6/95  
 delta T to midpoint of count 26.1  
 Efficiency data file N194  
 Background, Library files WBKG1149

Nuclide	keV	Counting	FINAL	Total	MDA
		Error	RESULT	Error	
Ra-226	186.1	132.66	-283.98	135.67	189.05
U-235	185.7	8.06	1.90	8.07	11.49
	143.8	25.28	11.59	32.08	45.32
	163.3				92.40
Pb-214(Ra-226)	351.9	8.28	7.97	13.76	19.19
	295.1				37.39
Fe-59	1099.2	6.07	-8.80	9.17	18.98
	1291.6				40.04
Co-58	810.8	5.68	-2.36	5.69	10.54
Ac-228(Ra-228)	911.2	11.35	-17.68	15.67	41.75
	969				70.53
Pb-212	238.6	3.12	-1.15	11.27	15.65
	300.1		-21.37	60.50	178.62
Co-60	1332.5	2.25	-4.31	2.41	11.84
	1173.3				13.09
Cs-137	661.7	5.72	1.90	5.72	9.60
Eu-155	105.3	16.27	-1.52	16.27	21.04
Eu-152	1408.1	7.83	-6.92	10.07	56.22
	344.3				22.59
Eu-154	723.3	5.44	-7.42	11.73	43.54
	1004.8				61.76
	1274.5				27.74

$\text{Ra-226} \rightarrow \left( \frac{2.94 - 1.90}{8.14 + 5.72} \right) = .08$   
 $\text{Cs-137} \rightarrow \left( \frac{8.79 - 7.97}{13.65 + 13.76} \right) = .03$

$\text{Pb-214} \rightarrow \left( \frac{8.79 - 7.97}{13.65 + 13.76} \right) = .03$

 6/1/95

Client	BECHTEL								
Client ID	B0FKH6								
Filename	232112.CHN								
LAL parent ID	23211DUP2								
Batch	6323211								
Live Time	7200								
Detector	1	LAS Detector 1, GMX-30200-P, Ser. No. 30-TN10223A							
Geometry	N								
Aliquot ( gms/L)	0.5								
Count date	5/30/95 18:25								
Collection Date	5/9/95								
delta T to midpoint of count	22.2	days							
Efficiency data file	N194								
Background, Library files	WBKG1149	whc							
								V94093	
Nuclide	keV	halflife (days)	chnl	GROSS	BKG	NET	Hand Calc NET	Sample cnts/sec	1 sig % err
Ra-226	186.1	5.84E+05	372	171	63	108	0.0149537	14.2	
U-235	185.7	2.57E+11	372	171	63	108	0.0149537	14.2	
	143.8	2.57E+11	288	118	86	32	0.0044444	44.6	
	163.3	2.57E+11	327	63	63	0	0	0.0	
Pb-214(Ra-226)	351.9	5.84E+05	704	53	31	22	0.0030556	41.7	
	295.1	5.84E+05	591	55	41	14	0.0019676	69.1	
Fe-59	1099.2	4.51E+01	2198	9	12	-3	-0.00037	170.5	
	1291.6	4.51E+01	2583	10	2	8	0.0010648	45.8	
Co-58	810.8	7.08E+01	1622	16	16	0	-4.63E-05	1705.9	
Ac-228(Ra-228)	911.2	2.10E+03	1822	21	23	-2	-0.000208	439.7	
	969	2.10E+03	1938	19	18	1	0.0001389	608.3	
Pb-212	238.6	5.11E+12	478	114	56	59	0.008125	22.3	
	300.1	5.11E+12	600	45	28	17	0.0023611	50.3	
Co-60	1332.5	1924	2665	41	8	34	0.0046528	20.8	
	1173.3	1924	2347	39	14	26	0.0035417	28.4	
Cs-137	661.7	10950	1324	34	24	10	0.0013889	76.2	
Eu-155	105.3	1810	211	84	80	4	0.0005556	320.2	
Eu-152	1408.1	4.64E+03	2816	5	7	-2	-0.000278	173.2	
	344.3	4.64E+03	689	39	46	-7	-0.000903	141.4	
Eu-154	723.3	3.11E+03	1447	32	37	-5	-0.000741	156.1	
	1004.8	3.11E+03	2009	13	19	-6	-0.000787	99.3	
	1274.5	3.11E+03	2549	11	7	4	0.0005556	106.1	

Client	BECHTEL							
Client ID	B0FKH6							
Filename	232112.CHN							
LAL parent ID	23211DUP2							
Batch	6323211							
Live Time	7200							
Detector	1							
Geometry	N							
Aliquot ( gms/L)	0.5							
Count date	5/30/95 18:25							
Collection Date	5/9/95							
delta T to midpoint of count	22.2							
Efficiency data file	N194							
Background, Library files	WBKG1149							
Nuclide	keV	WBKG cnts/sec	NET 1 sig % err	Sample cnts/sec	NET 1 sig % err	Efficiency	1 sigma % Eff err	Branch
Ra-226	186.1	0.012097	5.6	0.00286	97.95	0.055308	5	0.035
U-235	185.7	0.012097	5.6	0.00286	97.95	0.055389	5	0.575
	143.8	0.002617	23.1	0.00183	141.65	0.063815	5	0.109
	163.3	0.000867	65.4	-0.00087	65.44	0.059981	5	0.05
Pb-214(Ra-226)	351.9	0.0016	27.7	0.00146	117.92	0.03237	5	0.358
	295.1	0.001333	36.4	0.00063	290.98	0.037986	5	0.185
Fe-59	1099.2	3.06E-05	771.7	-0.00040	98.67	0.011918	5	0.565
	1291.6	0.000208	91.7	0.00086	79.26	0.010338	5	0.432
Co-58	810.8	-0.00024	110.1	-0.00005	1705.87	0.015465	5	0.9945
Ac-228(Ra-228)	911.2	0.001046	30.0	-0.00125	47.99	0.014001	5	0.266
	969	0.00045	65.7	-0.00031	366.63	0.013285	5	0.1617
Pb-212	238.6	0.006375	9.3	0.00175	137.23	0.045721	5	0.4365
	300.1	0.0001	430.1	0.00226	71.50	0.037416	5	0.03344
Co-60	1332.5	0.000267	79.1	0.00439	26.86	0.010051	5	0.999
	1173.3	0.000317	72.0	0.00323	38.27	0.011258	5	0.999
Cs-137	661.7	-0.00023	143.3	0.00139	76.16	0.018405	5	0.8521
Eu-155	105.3	0.000581	95.8	-0.00003	9338.86	0.06833	5	0.218
Eu-152	1408.1	0.000225	75.7	-0.00050	61.81	0.009557	5	0.212
	344.3	-0.00014	304.6	-0.00090	141.42	0.033022	5	0.27
Eu-154	723.3	-0.00037	84.1	-0.00074	156.12	0.017049	5	0.197
	1004.8	-0.00018	134.0	-0.00079	99.31	0.012878	5	0.176
	1274.5	-9.4E-05	200.9	0.00056	106.07	0.010462	5	0.355

## 232112.XLS

Client	BECHTEL							
Client ID	BOFKH6							
Filename	232112.CHN							
LAL parent ID	23211DUP2							
Batch	6323211							
Live Time	7200							
Detector	1							
Geometry	N							
Aliquot ( gms/L)	0.5							
Count date	5/30/95 18:25							
Collection Date	5/9/95							
delta T to midpoint of count	22.2							
Efficiency data file	N194							
Background, Library files	WBKG1149							
Nuclide	keV	Bq	pCi/L	MDA pCi/L	Decay factor	Corrected pCi/L	error 1 sigma	Corrected MDA pCi/L
Ra-226	186.1	1.475626	79.68383	231.47	1.000026	79.69	78.15	231.47
U-235	185.7	0.08969	4.843242	14.07	1	4.843	4.75	14.07
	143.8	0.262767	14.18941	54.26	1	14.189	20.11	54.26
	163.3	-0.28898	-15.60492	103.54	1	-15.605	10.24	103.54
Pb-214(Ra-226)	351.9	0.125606	6.782707	21.38	1.000026	6.783	8.01	21.38
	295.1	0.090256	4.873813	38.14	1.000026	4.874	14.18	38.14
Fe-59	1099.2	-0.05954	-3.215178	20.87	1.406284	-4.521	4.47	29.36
	1291.6	0.191779	10.35605	19.84	1.406284	14.564	11.57	27.90
Co-58	810.8	-0.00301	-0.162549	9.98	1.242654	-0.202	3.45	12.40
Ac-228(Ra-228)	911.2	-0.336753	-18.18465	56.77	1.007349	-18.318	8.84	57.19
	969	-0.144828	-7.82072	84.28	1.007349	-7.878	28.89	84.90
Pb-212	238.6	0.087688	4.735158	18.62	1	4.735	6.50	18.62
	300.1	1.807191	97.5883	165.62	1	97.588	69.95	165.62
Co-60	1332.5	0.436813	23.58789	12.68	1.008024	23.7772	6.50	12.79
	1173.3	0.286743	15.48413	14.12	1.008024	15.6084	6.02	14.24
Cs-137	661.7	0.088559	4.782211	11.81	1.001405	4.7889	3.65	11.83
Eu-155	105.3	-0.001678	-0.090628	22.85	1.008532	-0.091	8.536	23.040
Eu-152	1408.1	-0.248155	-13.40037	60.57	1.00332	-13.44	8.34	60.77
	344.3	-0.101254	-5.467704	28.37	1.00332	-5.49	7.76	28.46
Eu-154	723.3	-0.220545	-11.90943	67.21	1.004965	-11.97	18.70	67.55
	1004.8	-0.347241	-18.75102	73.09	1.004965	-18.84	18.74	73.45
	1274.5	0.14958	8.077341	29.08	1.004965	8.12	8.62	29.22

Client	BECHTEL				
Client ID	B0FKH6				
Filename	232112.CHN				
LAL parent ID	23211DUP2				
Batch	6323211				
Live Time	7200				
Detector	1				
Geometry	N				
Aliquot ( gms/L)	0.5				
Count date	5/30/95 18:25				
Collection Date	5/9/95				
delta T to midpoint of count	22.2				
Efficiency data file	N194				
Background, Library files	WBKG1149				
Nuclide	keV	Counting Error pCi/L	FINAL RESULT pCi/L	Total Error 2 sigma	MDA pCi/L
Ra-226	186.1	156.10	79.69	156.30	231.47
U-235	185.7	9.49	4.84	9.50	14.07
	143.8	11.25	-9.47	18.25	54.26
	163.3				103.54
Pb-214(Ra-226)	351.9	13.82	6.32	13.94	21.38
	295.1				38.14
Fe-59	1099.2	2.53	-2.04	8.33	29.36
	1291.6				27.90
Co-58	810.8	6.89	-0.20	6.89	12.40
Ac-228(Ra-228)	911.2	16.58	-17.42	16.90	57.19
	969				84.90
Pb-212	238.6	6.01	4.74	13.01	18.62
	300.1		97.59	139.90	165.62
Co-60	1332.5	8.52	19.39	8.83	12.79
	1173.3				14.24
Cs-137	661.7	7.29	4.79	7.31	11.83
Eu-155	105.3	17.07	-0.09	17.07	23.04
Eu-152	1408.1	10.40	-9.18	11.36	60.77
	344.3				28.46
Eu-154	723.3	1.46	1.11	14.45	67.55
	1004.8				73.45
	1274.5				29.22

Ref<sup>o</sup>

$$\text{Pb-214} \rightarrow \frac{(12.27 - 6.32)}{13.72 + 13.94} = 0.22$$

$$\text{Cs-137} \rightarrow \frac{-7.17 - 4.79}{-3.96 + 7.31} = 1.06$$

JFK 6/1/95

Client	BECHTEL									
Client ID	BOFBK3									
Filename	232115.CHN									
LAL parent ID	L4467-2									
Batch	6323211									
Live Time	10800									
Detector	2	LAS Detector 2, GMX-30200-P, Ser. No. 30-TN10348								
Geometry	N									
Aliquot (gms/L)	0.475									
Count date	5/30/95 18:36									
Collection Date	5/6/95									
delta T to midpoint of count	25.4	days								
Efficiency data file	N294									
Background, Library files	WBKG2149	whc								
									V94093	
Nuclide	keV	halflife (days)	chnl	GROSS	BKG	NET	Hand NET	Calc NET	Sample cnts/sec	1 sig % err
Ra-226	186.1	5.84E+05	372	241	94	147		0.0135957	12.5	
U-235	185.7	2.57E+11	372	241	94	147		0.0135957	12.5	
	143.8	2.57E+11	288	138	115	23		0.0021296	69.2	
	163.3	2.57E+11	327	113	114	-1		-9.26E-05	1506.7	
Pb-214(Ra-226)	351.9	5.84E+05	704	89	59	30		0.0027778	40.6	
	295.1	5.84E+05	591	106	77	29		0.0026852	46.6	
Fe-59	1099.2	4.51E+01	2198	19	14	5		0.000463	114.9	
	1291.6	4.51E+01	2583	13	7	6		0.0005556	74.5	
Co-58	810.8	7.08E+01	1622	23	14	9		0.0008333	67.6	
Ac-228(Ra-228)	911.2	2.10E+03	1822	41	23	19		0.001713	43.1	
	969	2.10E+03	1938	27	14	13		0.0012037	49.3	
Pb-212	238.6	5.11E+12	478	154	74	81		0.0074537	18.7	
	300.1	5.11E+12	600	67	72	-5		-0.000463	235.8	
Co-60	1332.5	1924	2665	11	5	7		0.0006019	60.6	
	1173.3	1924	2347	22	14	9		0.000787	70.1	
Cs-137	661.7	10950	1324	46	32	14		0.0012963	63.1	
Eu-155	105.3	1810	211	104	118	-14		-0.00125	110.2	
Eu-152	1408.1	4.64E+03	2816	12	4	9		0.000787	46.3	
	344.3	4.64E+03	689	62	63	-1		-9.26E-05	1118.0	
Eu-154	723.3	3.11E+03	1447	32	26	6		0.0005864	119.9	
	1004.8	3.11E+03	2009	17	30	-13		-0.001235	51.6	
	1274.5	3.11E+03	2549	9	8	1		7.716E-05	497.2	



Client BECHTEL  
 Client ID BOFBK3  
 Filename 232115.CHN  
 LAL parent ID L4467-2  
 Batch 6323211  
 Live Time 10800  
 Detector 2  
 Geometry N  
 Aliquot ( gms/L) 0.475  
 Count date 5/30/95 18:36  
 Collection Date 5/6/95  
 delta T to midpoint of count 25.4  
 Efficiency data file N294  
 Background, Library files WBKG2149

Nuclide	keV	WBKG cnts/sec	1 sig % err	NET	NET	1 sigma	% Eff err	Branch
				Sample cnts/sec	1 sig % err			
Ra-226	186.1	0.013392	5.0	0.00020	1156.50	0.055571	5	0.035
U-235	185.7	0.013392	5.0	0.00020	1156.50	0.055656	5	0.575
	143.8	0.003317	18.4	-0.00119	175.41	0.064542	5	0.109
	163.3	0.0015	37.2	-0.00159	52.57	0.060486	5	0.05
Pb-214(Ra-226)	351.9	0.001383	33.1	0.00139	113.62	0.032285	5	0.358
	295.1	0.000822	58.8	0.00186	93.21	0.03788	5	0.185
Fe-59	1099.2	-0.00011	200.0	0.00046	114.89	0.012002	5	0.565
	1291.6	-0.0005	39.2	0.00056	74.54	0.010402	5	0.432
Co-58	810.8	-3.9E-05	720.1	0.00083	67.59	0.01556	5	0.9945
Ac-228(Ra-228)	911.2	0.000713	40.5	0.00100	102.57	0.014097	5	0.266
	969	0.000667	42.4	0.00054	163.07	0.013378	5	0.1617
Pb-212	238.6	0.006775	8.8	0.00068	293.61	0.045685	5	0.4365
	300.1	0.00065	67.8	-0.00111	58.49	0.03731	5	0.03344
Co-60	1332.5	0.000283	78.7	0.00032	184.45	0.01011	5	0.999
	1173.3	0.000642	35.9	0.00015	538.16	0.011335	5	0.999
Cs-137	661.7	0.000483	63.7	0.00081	138.45	0.018483	5	0.8521
Eu-155	105.3	0.000494	113.6	-0.00174	46.79	0.068697	5	0.218
Eu-152	1408.1	0.000417	41.8	0.00037	145.41	0.009607	5	0.212
	344.3	-0.00018	247.8	-0.00009	1118.03	0.032933	5	0.27
Eu-154	723.3	-0.00084	33.9	0.00059	119.90	0.017137	5	0.197
	1004.8	-0.00031	78.5	-0.00123	51.60	0.012969	5	0.176
	1274.5	1.39E-05	1363.8	0.00006	905.71	0.010528	5	0.355

Client	BECHTEL							
Client ID	BOFBK3							
Filename	232115.CHN							
LAL parent ID	L4467-2							
Batch	6323211							
Live Time	10800							
Detector	2							
Geometry	N							
Aliquot ( gms/L)	0.475							
Count date	5/30/95 18:36							
Collection Date	5/6/95							
delta T to midpoint of count	25.4							
Efficiency data file	N294							
Background, Library files	WBKG2149							
Nuclide	keV	Bq	pCi/L	MDA pCi/L	Decay factor	Corrected pCi/L	error 1 sigma	Corrected MDA pCi/L
Ra-226	186.1	0.104891	5.962239	201.78	1.00003	5.96	68.96	201.78
U-235	185.7	0.006375	0.362368	12.26	1	0.362	4.19	12.26
	143.8	-0.168731	-9.591034	44.75	1	-9.591	16.83	44.75
	163.3	-0.526603	-29.9332	97.05	1	-29.933	15.81	97.05
Pb-214(Ra-226)	351.9	0.120647	6.857857	19.44	1.00003	6.858	7.80	19.44
	295.1	0.26584	15.11093	34.40	1.00003	15.111	14.10	34.40
Fe-59	1099.2	0.068272	3.880732	15.00	1.47754	5.734	6.59	22.16
	1291.6	0.123632	7.027517	10.00	1.47754	10.383	7.76	14.77
Co-58	810.8	0.053851	3.061025	6.75	1.282413	3.925	2.66	8.66
Ac-228(Ra-228)	911.2	0.266807	15.16586	39.67	1.008419	15.294	15.70	40.00
	969	0.248254	14.11128	58.68	1.008419	14.230	23.22	59.18
Pb-212	238.6	0.034035	1.934608	15.58	1	1.935	5.68	15.58
	300.1	-0.892057	-50.7064	185.81	1	-50.706	29.77	185.81
Co-60	1332.5	0.031535	1.792537	8.07	1.009193	1.8090	3.34	8.15
	1173.3	0.012838	0.729719	11.03	1.009193	0.7364	3.96	11.13
Cs-137	661.7	0.051619	2.934117	10.39	1.001609	2.9388	4.07	10.40
Eu-155	105.3	-0.116483	-6.621127	19.06	1.009775	-6.686	3.146	19.251
Eu-152	1408.1	0.181844	10.3364	40.99	1.003802	10.38	15.10	41.15
	344.3	-0.010413	-0.591909	23.11	1.003802	-0.59	6.64	23.20
Eu-154	723.3	0.1737	9.873466	33.77	1.005686	9.93	11.92	33.96
	1004.8	-0.540854	-30.74327	61.93	1.005686	-30.92	16.03	62.28
	1274.5	0.016929	0.962277	22.70	1.005686	0.97	8.77	22.83

Client BECHTEL  
 Client ID BOFBK3  
 Filename 232115.CHN  
 LAL parent ID L4467-2  
 Batch 6323211  
 Live Time 10800  
 Detector 2  
 Geometry N  
 Aliquot ( gms/L) 0.475  
 Count date 5/30/95 18:36  
 Collection Date 5/6/95  
 delta T to midpoint of count 25.4  
 Efficiency data file N294  
 Background, Library files WBKG2149

Nuclide		Counting keV	FINAL Error pCi/L	Total RESULT 2 sigma pCi/L	MDA pCi/L
Ra-226		186.1	137.91	5.96 137.91	201.78
U-235		185.7	8.38	0.36 8.38	12.26
		143.8	20.55	-20.40 23.04	44.75
		163.3			97.05
Pb-214(Ra-226)		351.9	12.67	8.79 13.65	19.44
		295.1			34.40
Fe-59		1099.2	9.61	7.68 10.05	22.16
		1291.6			14.77
Co-58		810.8	5.31	3.93 5.32	8.66
Ac-228(Ra-228)		911.2	25.98	14.96 26.02	40.00
		969			59.18
Pb-212		238.6	2.22	1.93 11.36	15.58
		300.1		-50.71 59.54	185.81
Co-60		1332.5	4.76	1.36 5.11	8.15
		1173.3			11.13
Cs-137		661.7	8.14	2.94 8.14	10.40
Eu-155		105.3	6.26	-6.69 6.29	19.25
Eu-152		1408.1	3.42	1.19 12.16	41.15
		344.3			23.20
Eu-154		723.3	1.49	-1.58 12.92	33.96
		1004.8			62.28
		1274.5			22.83

JF 6/1/95

Client	BECHTEL												
Client ID	BOFKH6												
Filename	232116.CHN												
LAL parent ID	L4482-8												
Batch	6323211												
Live Time	10800												
Detector	2	LAS Detector 2, GMX-30200-P, Ser. No. 30-TN10348											
Geometry	N												
Aliquot (gms/L)	0.5												
Count date	5/31/95 10:50												
Collection Date	5/9/95												
delta T to midpoint of count	23.1	days											
Efficiency data file	N294												
Background, Library files	WBKG2149	whc											
							V94093						
Nuclide	keV	halflife (days)	chnl	GROSS	BKG	NET	Hand Calc NET	Sample cnts/sec	1 sig % err				
Ra-226	186.1	5.84E+05	372	229	86	143	0.0132562	12.4					
U-235	185.7	2.57E+11	372	229	86	143	0.0132562	12.4					
	143.8	2.57E+11	288	139	123	16	0.0014815	101.2					
	163.3	2.57E+11	327	137	105	32	0.002963	48.6					
Pb-214(Ra-226)	351.9	5.84E+05	704	103	55	48	0.0044444	26.2					
	295.1	5.84E+05	591	99	82	17	0.0016049	77.5					
Fe-59	1099.2	4.51E+01	2198	16	12	4	0.0004012	121.4					
	1291.6	4.51E+01	2583	9	11	-2	-0.000139	294.4					
Co-58	810.8	7.08E+01	1622	23	16	7	0.0006173	94.1					
Ac-228(Ra-228)	911.2	2.10E+03	1822	37	28	9	0.0008218	90.9					
	969	2.10E+03	1938	37	18	19	0.0017593	39.0					
Pb-212	238.6	5.11E+12	478	189	96	93	0.0086111	18.2					
	300.1	5.11E+12	600	58	68	-10	-0.000926	112.2					
Co-60	1332.5	1924	2665	67	8	60	0.0055093	14.5					
	1173.3	1924	2347	72	18	54	0.005	17.6					
Cs-137	661.7	10950	1324	36	53	-17	-0.001605	54.5					
Eu-155	105.3	1810	211	121	123	-2	-0.000216	669.9					
Eu-152	1408.1	4.64E+03	2816	10	9	1	6.173E-05	659.5					
	344.3	4.64E+03	689	61	85	-24	-0.002238	50.0					
Eu-154	723.3	3.11E+03	1447	25	28	-3	-0.000278	242.7					
	1004.8	3.11E+03	2009	16	25	-9	-0.000787	74.9					
	1274.5	3.11E+03	2549	16	12	4	0.0004012	121.4					

Client	BECHTEL							
Client ID	BOFKH6							
Filename	232116.CHN							
LAL parent ID	L4482-8							
Batch	6323211							
Live Time	10800							
Detector	2							
Geometry	N							
Aliquot ( gms/L)	0.5							
Count date	5/31/95 10:50							
Collection Date	5/9/95							
delta T to midpoint of count	23.1							
Efficiency data file	N294							
Background, Library files	WBKG2149							
Nuclide	keV	WBKG cnts/sec	1 sig % err	NET Sample cnts/sec	NET 1 sig % err	Efficiency	1 sigma % Eff.err	Branch
Ra-226	186.1	0.013392	5.0	-0.00370	62.33	0.055571	5	0.035
U-235	185.7	0.013392	5.0	-0.00014	1702.80	0.055656	5	0.575
	143.8	0.003317	18.4	-0.00184	114.87	0.064542	5	0.109
	163.3	0.0015	37.2	0.00146	136.58	0.060486	5	0.05
Pb-214(Ra-226)	351.9	0.001383	33.1	0.00306	52.98	0.032285	5	0.358
	295.1	0.000822	58.8	0.00078	220.82	0.03788	5	0.185
Fe-59	1099.2	-0.00011	200.0	0.00040	121.38	0.012002	5	0.565
	1291.6	-0.0005	39.2	-0.00014	294.39	0.010402	5	0.432
Co-58	810.8	-3.9E-05	720.1	0.00062	94.07	0.01556	5	0.9945
Ac-228(Ra-228)	911.2	0.000713	40.5	0.00011	947.78	0.014097	5	0.266
	969	0.000667	42.4	0.00109	88.74	0.013378	5	0.1617
Pb-212	238.6	0.006775	8.8	0.00184	117.60	0.045685	5	0.4365
	300.1	0.00065	67.8	-0.00158	37.99	0.03731	5	0.03344
Co-60	1332.5	0.000283	78.7	0.00523	19.56	0.01011	5	0.999
	1173.3	0.000642	35.9	0.00436	25.45	0.011335	5	0.999
Cs-137	661.7	0.000483	63.7	-0.00209	27.17	0.018483	5	0.8521
Eu-155	105.3	0.000494	113.6	-0.00071	124.63	0.068697	5	0.218
Eu-152	1408.1	0.000417	41.8	-0.00035	163.73	0.009607	5	0.212
	344.3	-0.00018	247.8	-0.00224	50.03	0.032933	5	0.27
Eu-154	723.3	-0.00084	33.9	-0.00028	242.67	0.017137	5	0.197
	1004.8	-0.00031	78.5	-0.00079	74.87	0.012969	5	0.176
	1274.5	1.39E-05	1363.8	0.00039	174.64	0.010528	5	0.355

Client	BECHTEL							
Client ID	BOFKH6							
Filename	232116.CHN							
LAL parent ID	L4482-8							
Batch	6323211							
Live Time	10800							
Detector	2							
Geometry	N							
Aliquot ( gms/L)	0.5							
Count date	5/31/95 10:50							
Collection Date	5/9/95							
delta T to midpoint of count	23.1							
Efficiency data file	N294							
Background, Library files	WBKG2149							
Nuclide	keV	Bq	pCi/L	MDA pCi/L	Decay factor	Corrected pCi/L	error 1 sigma	Corrected MDA pCi/L
Ra-226	186.1	-1.903227	-102.7742	188.44	1.000027	-102.78	64.26	188.44
U-235	185.7	-0.004234	-0.228632	11.45	1	-0.229	3.89	11.45
	143.8	-0.260862	-14.08655	43.58	1	-14.087	16.20	43.58
	163.3	0.48374	26.12194	89.12	1	26.122	35.70	89.12
Pb-214(Ra-226)	351.9	0.264848	14.30177	18.00	1.000027	14.302	7.61	18.00
	295.1	0.111692	6.031355	33.50	1.000027	6.032	13.32	33.50
Fe-59	1099.2	0.059169	3.195136	13.07	1.42571	4.555	5.53	18.64
	1291.6	-0.030908	-1.669035	14.67	1.42571	-2.380	7.01	20.91
Co-58	810.8	0.03989	2.154054	6.87	1.253564	2.700	2.54	8.61
Ac-228(Ra-228)	911.2	0.029138	1.573431	40.72	1.007646	1.585	15.03	41.03
	969	0.505069	27.2737	60.22	1.007646	27.482	24.43	60.68
Pb-212	238.6	0.092075	4.972047	15.84	1	4.972	5.85	15.84
	300.1	-1.263129	-68.20897	172.27	1	-68.209	26.14	172.27
Co-60	1332.5	0.5174	27.93961	8.82	1.008348	28.1729	5.69	8.90
	1173.3	0.384884	20.78375	11.45	1.008348	20.9573	5.43	11.54
Cs-137	661.7	-0.132594	-7.160069	12.16	1.001462	-7.1705	1.98	12.17
Eu-155	105.3	-0.047442	-2.56188	18.52	1.008877	-2.585	3.224	18.680
Eu-152	1408.1	-0.174267	-9.410427	49.11	1.003454	-9.44	15.47	49.28
	344.3	-0.251653	-13.58924	25.38	1.003454	-13.64	6.86	25.47
Eu-154	723.3	-0.082279	-4.44306	33.98	1.005165	-4.47	10.84	34.16
	1004.8	-0.344794	-18.61889	52.77	1.005165	-18.72	14.04	53.04
	1274.5	0.103638	5.596461	25.01	1.005165	5.63	9.83	25.14

## 232116.XLS

047

Client	BECHTEL				
Client ID	BOFKH6				
Filename	232116.CHN				
LAL parent ID	L4482-8				
Batch	6323211				
Live Time	10800				
Detector	2				
Geometry	N				
Aliquot ( gms/L)	0.5				
Count date	5/31/95 10:50				
Collection Date	5/9/95				
delta T to midpoint of count	23.1				
Efficiency data file	N294				
Background, Library files	WBKG2149				
Nuclide	keV	Counting Error pCi/L	FINAL RESULT pCi/L	Total Error 2 sigma	MDA pCi/L
Ra-226	186.1	128.12	-102.78	128.53	188.44
U-235	185.7	7.79	-0.23	7.79	11.45
	143.8	12.70	-7.22	29.50	43.58
	163.3				89.12
Pb-214(Ra-226)	351.9	12.64	12.27	13.22	18.00
	295.1				33.50
Fe-59	1099.2	4.24	1.89	8.69	18.64
	1291.6				20.91
Co-58	810.8	5.08	2.70	5.09	8.61
Ac-228(Ra-228)	911.2	15.37	8.70	25.60	41.03
	969				60.68
Pb-212	238.6	3.59	4.97	11.71	15.84
	300.1		-68.21	52.27	172.27
Co-60	1332.5	7.57	24.40	7.86	8.90
	1173.3				11.54
Cs-137	661.7	3.90	-7.17	3.96	12.17
Eu-155	105.3	6.44	-2.58	6.45	18.68
Eu-152	1408.1	12.39	-12.95	12.54	49.28
	344.3				25.47
Eu-154	723.3	4.13	-3.12	12.93	34.16
	1004.8				53.04
	1274.5				25.14

JF 6/1/95



WHICH IS BEING MAILED TO YOU UNDER  
SEPARATE COVER

# National Institute of Standards & Technology

## Certificate

### Standard Reference Material 4275C Radioactivity Standard

#### MIXED-RADIONUCLIDE POINT-SOURCE STANDARD for the EFFICIENCY CALIBRATION OF GERMANIUM-SPECTROMETER SYSTEMS

Antimony-125-Tellurium-125m  
Europium-154  
Europium-155

Source identification SRM 4275C-62

Source description Point source on polyester tape <sup>(1)\*</sup>

Reference time 1200 EST September 1, 1988

This standard is intended for use in measuring the full-energy-peak efficiencies of spectrometry systems for x and gamma rays from 27 to 1596 keV, provided that the responses to radiations approximately 5 keV apart can be resolved. Emission rates are specified at 18 energies for photon radiations from a mixture of antimony-125-tellurium-125m, europium-154, and europium-155. Uncertainties are estimated and combined at a level corresponding to a standard deviation of the mean, with the intent that the user can propagate this uncertainty along with the other uncertainties in the spectrometer calibration. For a more conservative overall uncertainty corresponding to that given on other NIST radioactivity certificates, multiply the combined uncertainty by three.

Table 1 gives the energies, emission rates, and uncertainties for selected radiations. A footnote indicates how emission rates will change with time. If there are any changes in measured emission rates that would correspond to an emission rate 0.5 percent different from that calculated from Table 1, or in measured half lives that would cause a corresponding difference after five years, notification will be sent to purchasers of the standard.

Table 2 lists the estimates of component uncertainties which have been added in quadrature to give the combined uncertainty in each emission rate.

Notes on the use of this standard are appended. One of the tables in the supplemental notes gives relative emission rates for radiations close in energy to the certified radiations; for spectrometry systems of poorer resolution, it may be necessary to use a combined emission rate for some multiple peaks.

This Standard Reference Material was prepared in the Center for Radiation Research, Ionizing Radiation Division, Radioactivity Group, Dale D. Hoppes, Group Leader.

Gaithersburg, MD 20899  
September, 1988

Stanley D. Rasberry, Chief  
Office of Standard Reference Materials

061

TABLE 1

X-Ray and Gamma-Ray Energies, Emission Rates <sup>(2,3)</sup>,  
and Uncertainties for Standard Reference Material 4275C-62

Radionuclide	Photon Energy (keV)	Emission Rate ( $\times s^{-1}$ ) or ( $\gamma s^{-1}$ ) 1200 EST September 1, 1988	Total Estimated Uncertainty (%) <sup>*</sup>
$^{125}\text{Sb}-^{125m}\text{Te}$	K $\alpha$ , 27.4	$3.246 \times 10^4$	1.3
$^{154}\text{Eu}-^{155}\text{Eu}$	K $\alpha$ , 42.8	$1.915 \times 10^4$	1.3
$^{155}\text{Eu}$	86.5	$7.330 \times 10^3$	0.9
$^{155}\text{Eu}$	105.3	$5.104 \times 10^3$	1.3
$^{154}\text{Eu}$	123.1	$2.982 \times 10^4$	0.8
$^{125}\text{Sb}$	176.3	$3.562 \times 10^3$	0.6
$^{154}\text{Eu}$	247.7	$5.055 \times 10^3$	0.6
$^{125}\text{Sb}$	427.9	$1.548 \times 10^4$	0.8
$^{125}\text{Sb}$	463.4	$5.444 \times 10^3$	0.7
$^{154}\text{Eu}$	591.8	$3.618 \times 10^3$	0.6
$^{125}\text{Sb}$	600.6	$9.199 \times 10^3$	0.7
$^{125}\text{Sb}$	635.9	$5.878 \times 10^3$	0.6
$^{154}\text{Eu}$	723.3	$1.468 \times 10^4$	0.6
$^{154}\text{Eu}$	873.2	$8.910 \times 10^3$	0.7
$^{154}\text{Eu}$	996.3	$7.629 \times 10^3$	0.9
$^{154}\text{Eu}$	1004.7	$1.323 \times 10^4$	0.7
$^{154}\text{Eu}$	1274.5	$2.549 \times 10^4$	0.5
$^{154}\text{Eu}$	1596.4	$1.296 \times 10^3$	0.7

\* Estimated total uncertainties have the significance of one standard deviation of the mean. Components of these estimates are given in Table 2.

TABLE 2  
Estimates of the Component Uncertainties for  
Photon-Emission-Rate Values for SRM 4275C

TYPICAL UNCERTAINTY COMPONENTS (%)

Photon Energy (keV)	Number of Determinations	Std. Dev. of the Mean	Efficiency	Peak Analysis	Pile-up Compensation	Geometry	Other*	Combined Uncertainty**
27.4	6	0.3	1.0	0.7	0.3	0.1	0.3	1.3
42.8	12	0.05	1.0	0.7	0.1	0.1	0.3	1.3
86.5	12	0.06	0.70	0.5	0.1	0.1	0.3	0.9
105.3	12	0.06	1.2	0.5	0.1	0.1	0.4	1.3
123.1	6	0.08	0.6	0.4	0.1	0.08	0.4	0.8
176.3	6	0.09	0.5	0.2	0.2	0.1	0.4	0.6
247.7	6	0.04	0.5	0.3	0.1	0.08	0.4	0.6
427.9	6	0.23	0.7	0.2	0.2	0.08	0.4	0.8
463.4	7	0.22	0.58	0.2	0.2	0.08	0.4	0.7
591.8	6	0.12	0.45	0.3	0.1	0.08	0.4	0.6
600.6	7	0.20	0.42	0.4	0.2	0.08	0.4	0.7
635.9	6	0.19	0.42	0.2	0.2	0.08	0.4	0.6
723.3	6	0.05	0.54	0.2	0.1	0.08	0.4	0.6
873.2	5	0.12	0.63	0.3	0.1	0.08	0.4	0.7
996.3	5	0.11	0.54	0.75	0.1	0.08	0.4	0.9
1004.7	5	0.06	0.54	0.4	0.1	0.08	0.4	0.7
1274.5	5	0.06	0.45	0.1	0.1	0.08	0.4	0.5
1596.4	6	0.43	0.40	0.1	0.2	0.15	0.4	0.7

\* Includes contributions for the half lives for the Te x ray, for the decay schemes for the Gd x ray, and for gravimetric factors in the source preparation.

\*\*Components of the uncertainty have been added in quadrature. This is the uncertainty for a typical detector, and some of the values are slightly greater than those given in the last column in Table 1.

NOTES

- 1) Sample consists of a dried deposit of the radionuclides between two layers of polyester type 0.006-cm thick which are mounted on an aluminum annulus (3.8-cm inside diameter and 5.4-cm outside diameter).
- 2) These values are based on gamma-ray spectrometry measurements made at the National Institute of Standards and Technology, which are described in the reference: B.M. Coursey, D.D. Hoppes, and F.J. Schima, "Determination of the Photon Emission Rates of the NBS Long-Lived Mixed-Radionuclide Standard", Nuclear Instruments and Methods 193, 1 (1982).
- 3) Emission rates at later times can be calculated using the following evaluated half-life values and decay constants:

	<u>Half Life</u>	<u>Decay Constant</u>
$^{125}\text{Sb}$	$1008 \pm 2$ days	$6.876 \times 10^{-4} \text{ days}^{-1}$
$^{154}\text{Eu}$	$3141 \pm 12$ days	$2.207 \times 10^{-4} \text{ days}^{-1}$
$^{155}\text{Eu}$	$1738 \pm 4$ days	$3.986 \times 10^{-4} \text{ days}^{-1}$

- 4) For the 42.8-keV Gd K<sub>α</sub> x rays, the emission rate  $N_t$  is given by

$$N_t = N_0 \times (0.6724 e^{-2.207 \times 10^{-4} t} + 0.3276 e^{-3.986 \times 10^{-4} t}),$$

where  $N_0$  is the emission rate given in Table 1, and  $t$  is the time in days from 1200 EST September 1, 1988.

For further information contact Dr. F.J. Schima (301) 975-5537 or Dr. D.D. Hoppes (301) 975-5532.

# National Bureau of Standards

## Certificate

### Standard Reference Material 4288

#### Radioactivity Standard

Radionuclide	Technetium-99
Source identification	4288-83
Source description	Liquid in NBS borosilicate-glass ampoule
Solution composition	59.31 $\mu\text{g}$ of Tc(VII) as potassium pertechnetate per gram of approximately 0.001 molar KOH (1)*
Mass	4.910 grams
Radioactivity concentration	$3.759 \times 10^4 \text{ Bq g}^{-1}$
Reference time	November, 1982
Measuring instrument	Liquid-scintillation counter (2)
Random uncertainty	0.27 percent (3)
Systematic uncertainty	1.35 percent (4)
Total uncertainty (Random plus systematic)	1.62 percent
Photon-emitting impurities	None observed (5)
Half life	$(2.111 \pm 0.036) \times 10^5 \text{ years}$ (6)

This Standard Reference Material was prepared in the Center for Radiation Research, Nuclear Radiation Division, Radioactivity Group, Dale D. Roppe, Group Leader.

Washington, D.C. 20234  
November, 1982

George A. Uriano, Chief  
Office of Standard Reference Materials

\*Notes on back  
079

## FOOTNOTES

- (1) The  $\text{KTcO}_4$  was prepared by M.W. Heitzmann of the U.S. Food and Drug Administration from  $\text{NH}_4\text{TcO}_4$  obtained from Oak Ridge National Laboratory. The solution density is  $0.998 \text{ g cm}^{-3}$  at  $21.8^\circ\text{C}$ , and the  $\text{KTcO}_4$  concentration is 0.00060 molar. The UV spectrum of this material exhibited only the characteristic doublets at 243 and 287 nm (A). <sup>#</sup>
- (2) Two liquid-scintillation counters were calibrated using the method of J.A.B. Gibson (B,C,D). Three different radionuclides were used as the standard:  $^3\text{H}$ ,  $^{14}\text{C}$ , and  $^{60}\text{Co}$ . The results obtained using the three radionuclides agreed to within 0.32 percent. The  $^{14}\text{C}$  result was used for confirmation only. The value given here is the unweighted mean of the  $^3\text{H}$  and  $^{60}\text{Co}$  results.
- (3) Half the 99-percent confidence interval for the average of the  $^3\text{H}$  result and the  $^{60}\text{Co}$  result. The standard deviation of the mean of the  $^3\text{H}$  result is 0.15 percent based on 6 degrees of freedom, and the standard deviation of the mean of the  $^{60}\text{Co}$  result is 0.09 percent based on 9 degrees of freedom.
- (4) The systematic uncertainty is the average of that for the  $^3\text{H}$  result, 1.20 percent, and that for the  $^{60}\text{Co}$  result, 1.49 percent. These values are linear sums of estimated upper limits of uncertainties due to the following:

	$^3\text{H}$	$^{60}\text{Co}$
a) reference material for standard radionuclide	0.63	0.68
b) source preparation	0.07	0.17
c) theoretical model	0.30	0.20
d) gamma-ray contribution to beta-particle detector		0.24
e) quenching	0.10	0.10
f) interpolation from calibration curve	<u>0.10</u>	<u>0.10</u>
	1.20	1.49

- (5) The master solution from which these standards were prepared was examined with germanium gamma-ray spectrometers and no impurity was found. Limits of detection as a ratio of gamma-ray-emission rate to technetium-99 activity are

$$1 \times 10^{-6} \quad \text{between } 90 \text{ and } 300 \text{ keV}$$

$$1 \times 10^{-7} \quad \text{between } 300 \text{ and } 1900 \text{ keV.}$$

- (6) NBS-measured half life based on the formula  $T_{1/2} = N \ln(2)/A$ , where  $N$  is the number of atoms, computed using an atomic mass for technetium-99 of  $98.906254 \pm 0.000002$  grams and the gravimetrically determined mass of technetium-99, and  $A$  is the activity determined by liquid-scintillation counting. The value recommended by the Oak Ridge Nuclear Data Project is  $(2.13 \pm 0.05) \times 10^5$  years. (E)

<sup>#</sup> References on last page

The following individuals and organizations contributed to the characterization of this Standard Reference Material.

J.A.B. Gibson  
Atomic Energy Research Establishment  
Environmental and Medical Sciences Division  
Harwell  
United Kingdom

M.W. Heitzmann  
U.S. Food and Drug Administration  
Division of Drug Chemistry  
Washington, D.C.

J.C. Leak  
U.S. Food and Drug Administration  
Division of Oncology and  
Radiopharmaceutical Drug Products  
Rockville, MD

For further information please contact Dr. Bert M. Coursey at (301) 921-2383.

REFERENCES

- A. Boyd, G.E., J. Chem. Ed., 36, 3 (1959).
- B. Gale, H.J. and Gibson, J.A.B., Atomic Energy Research Establishment Report AERE-R5067 (1965), Harwell, United Kingdom.
- C. Gibson, J.A.B. and Marshall, M., Int. J. Appl. Radiat. Isotopes, 23, 321 (1972).
- D. Gibson, J.A.B., Computed counting efficiencies as a function of merit figure for 14 beta-particle-emitting radionuclides (July, 1980). Unpublished data.
- E. Kocher, D.C., Radioactive Decay Data Tables DOC/TIC-11026, p. 108 (1981). Available from NTIS, Springfield, VA.

## ISOTOPE WEIGHT DILUTION RECORD

Isotope: Tc - 99Vendor: NISTTotal Received Activity:  $1.85 \pm 5$  Bq

SRM.

Wt. Received: 4.91 (0.001 m KOH)Vendor ID: 4288NIST Traceable Y/N Source Gert. # 4288-83Activity in Units/g:  $3.759 \times 10^4$  Bq/g  
 $\times \frac{60}{2.22} = 1.016 \pm 6$  pci/g  
Activity converted (dpm/g):  $4.988 \times 10^6$  dpm/gReference Date: Nov 1982Receive Date: 1-23-93 3-30-1992Halflife (Yrs or days)  $t_{1/2}$  = 2.11 ± 5 yrsReceiver's Name: J. MoralesPRIMARY DILUTION:Balance wt. check done (✓)a: Source activity:  $1.016 \pm 6$  pCi/g dpm/g \* (if  $t_{1/2} < 100$  yr decay to prep. date)b: Wt. of Source transferred: 4.8696 g

AA0128

Diluent used: 0.1 M NH<sub>4</sub>OH

Diluted

c: Total diluted weight: 146.81 gd: Activity of dilution (a\*b/c):  $3.37 \pm 4$  pCi/g dpm/g r<sub>1/2</sub>

100 mL = 99.56 g

e: Calculated density of solution: .9956 g/mL (4M HNO<sub>3</sub>)U.S. Department of Commerce  
National Institute of Standards  
and Technology AA0128f: Activity by volume = (d\*e):  $3.355 \pm 4$  pCi/mL dpm/mL r<sub>1/2</sub>Dilution Log Book ID: LAL-92-353-100-199Tc Radioactivity Standard  
Amount  $3.759 \times 10^4$  Bq g<sup>-1</sup>  
Date November 1, 1982Preparation Date: 6/16/93 Preparer's Name: R. Morales

SRM 4288

CAUTION  
RADIOACTIVESECONDARY OR WORKING LEVEL DILUTIONBalance wt. check done (✓)Log Book ID of source being diluted: LAL-92-353-100-1a: Source activity:  $3.355 \pm 4$  pCi/mL dpm/mL r<sub>1/2</sub> \* (if  $t_{1/2} < 100$  yr decay to prep. date)b: Wt. of Source transferred: 2.3211 gDiluent used: 0.1 M NH<sub>4</sub>OHc: Total diluted weight: 71.89 gd: Activity of dilution (a\*b/c):  $10.83$  pCi/mL dpm/mL r<sub>1/2</sub>e: Calculated density of solution: .94 g/mL (4M HNO<sub>3</sub>, =  $1.1294 \pm .0007$  g/mL)f: Activity by volume = (d\*e):  $10.83$  pCi/mL dpm/mL r<sub>1/2</sub>Dilution Log Book ID: LAL-92-353-100-2Preparer's Name: R. Morales Preparation Date: 6/16/93Reviewed By: Douglas Wong Review Date: 6/16/93

# SECONDARY/WORKING LEVEL STANDARD DILUTION RECORD

Dilution Source Information	
Isotope:	<u>Tc - 99</u>
Parent Barcode Number	<u>AA0128</u>
Vendor or Certificate I.D. # of Parent Standard:	<u>SRM 4288</u>
Diluted Source Logbook I.D. #:	<u>92-353-100-1</u>
Balance Verification?:	<u>yes</u>
Diluent Used:	<u>0.1 M NH<sub>4</sub>OH</u>

Dilution	
*Diluent:	<u>0.1 M NH<sub>4</sub>OH</u>
*Density of diluent (g/ml):	<u>0.9956</u> g/ml
a: Parent Specific Activity:	<u>3.355 E 4</u> pCi/g
b: Amount of Source Transferred:	<u>36.0938</u> g
c: Total amount of Dilution:	<u>123.36</u> g
d: Total Volume of Dilution:	<u>N/A</u> ml
e: Activity of Dilution (a * b / c):	<u>N/A</u> pCi/g
f: Activity of Dilution (a * b / d):	<u>9816.37</u> pCi/ml
Dilution Logbook I.D. #:	<u>94-671-17-1</u>

Prepared By:

Pyres Wong

Preparation Date:

11-16-94

Reviewed By:

Joe Hatch

Review Date:

11/17/94

\*If the diluent remains unchanged from the diluent used for the dilution source, then a weight dilution of a volume unit source can be performed without a density conversion. If the diluent changes, a weighted proportion density conversion is necessary.

# CERTIFICATE OF CALIBRATION BETA STANDARD SOLUTION

Radionuclide Tc-99  
Half Life:  $(2.13 \pm 0.05) \times 10^5$  years  
Catalog No.: 7099  
Source No.: 389-22-1

Customer: LOCKHEED ENGINEERING & SCIENCES Co.  
P.O.No.: 06LAB1036  
Reference Date: September 1 1991 12:00 PST.  
Contained Radioactivity: 1.003  $\mu\text{Ci}$ .

#### Description of Solution

a. Mass of solution: 4.9929 grams.  
b. Chemical form: NH<sub>4</sub>TcO<sub>4</sub> in 0.1M NH<sub>4</sub>OH  
c. Carrier content: None added  
d. Density: 0.9974 gram/ml @ 20°C.

#### Radioimpurities

None detected

#### Radioactive Daughters

None

#### Radionuclide Concentration

0.201  $\mu\text{Ci}/\text{gram}$ .

#### Method of Calibration

Weighed aliquots of the solution were assayed using a liquid scintillation counter.

#### Uncertainty of Measurement

a. Systematic uncertainty in instrument calibration:  $\pm 2.1\%$   
b. Random uncertainty in assay:  $\pm 1.0\%$   
c. Random uncertainty in weighing(s):  $\pm 0.0\%$   
d. Total uncertainty at the 99% confidence level:  $\pm 3.1\%$

#### NIST Traceability

This calibration is implicitly traceable to the National Institute of Standards and Technology.

#### Notes

1. Nuclear data were taken from "Table of Isotopes", Seventh Edition, edited by Virginia S. Shirley.
2. IPL participates in an NIST measurement assurance program to establish and maintain implicit traceability for a number of nuclides, based on the blind assay (and later NIST certification) of Standard Reference Materials. (As in NRC Regulatory Guide 4.15)



ISOTOPE PRODUCTS LABORATORIES  
1800 No. Keystone Street.,  
Burbank, California 91504  
(818) 843 - 7000

  
QUALITY CONTROL

1A004 /  
ISOTOPE WEIGHT DILUTION RECORD

AA0047

Isotope: Tc - 99Vendor: IPLTotal Received Activity: ~1 uCiVendor ID: 389-22-1Wt. Received: ~5 gNIST Traceable Y N Cert. # implicitlyActivity in Units/g: 0.20 0.20 /  $\mu$ Ci/gReference Date: 9-1-91

Activity converted (dpm/g): \_\_\_\_\_ dpm/g

Receive Date: N/A 10-30-199Halflife (Yrs or days)  $t_{1/2} = 2.13 \times 10^5$  yearsReceiver's Name: Jimmy MirelPRIMARY DILUTION:Balance wt. check done (✓)a: Source activity:  $2.01 \times 10^5$  pCi/g dpm/g N/A (if  $t_{1/2} < 100$  yr decay to prep. date)b: Wt. of Source transferred: 4.9320 gDiluent used: 0.1 M NH4OHc: Total diluted weight: 100 ml N/A g-RWd: Activity of dilution (a\*b/c): N/A dpm/ge: Calculated density of solution: N/A g/mL (4M HNO<sub>3</sub> = 1.1294 ± .0007 g/mL)f: Activity by volume = (d\*e): 9910 pCi/ml dpm/ml N/ADilution Log Book ID: 91-225-41-1Preparation Date: 1-23-92 Preparer's Name: Joe HutchinsonSECONDARY OR WORKING LEVEL DILUTIONBalance wt. check done (  )Log Book ID of source being diluted: 91-225-42-1a: Source activity: 9910 pCi/ml dpm/g \* (if  $t_{1/2} < 100$  yr decay to prep. date)b: Wt. of Source transferred: 1.0051 gDiluent used: 0.1M H4O4c: Total diluted weight: 50.621 gd: Activity of dilution (a\*b/c): N/A dpm/ge: Calculated density of solution: 1.997 g/ml g/mL (4M HNO<sub>3</sub> = 1.1294 ± .0007 g/mL)f: Activity by volume = (d\*c): 196.8 pCi/ml dpm/mlDilution Log Book ID: 91-225-42-1Preparer's Name: Joe Hutchinson Preparation Date: 1-27-92Reviewed By: rgb Review Date: 4/8/93

# SECONDARY / WORKING LEVEL STANDARD DILUTION RECORD

## Dilution Source Information

Isotope:

Tc - 99

From NIST traceable standard?:

Implicitly

Vendor or Certificate I.D. # of parent standard:

AA0047

Diluted source logbook I.D. #:

91-225-41-1

Balance verification?:

yes

Diluent used:

0.1M NH<sub>4</sub>OH

## Dilution

Diluent:

0.1M NH<sub>4</sub>OH

Density of diluent (g/ml):

N/A

a. Parent standard activity:

99/5 pCi/ml

b. Amount of standard transferred:

2.8759 g

c. Total amount of dilution:

254.69 g

d. Activity of dilution [a \* b / c]:

111.90 pCi/ml as of 9-1-

Dilution logbook I.D. #:

93-474-96-1

Prepared by:

Doris Wong

Preparation date:

8-17-94

Reviewed by:

Joe Hutchinson

Review date:

8/25/94

If the diluent remains unchanged from the diluent used for the dilution source, then a weight dilution of a volume unit source can be performed without a density conversion. If the diluent changes, a weighted proportion density conversion is necessary.

**LAL-91-SOP-0174**

# SECONDARY / WORKING LEVEL STANDARD DILUTION RECORD

## Dilution Source Information

Isotope:

Tc-99

From NIST traceable standard?:

Implicitly

Vendor or Certificate I.D. # of parent standard:

A A004T

Diluted source logbook I.D. #:

91-225 - 41 - 1

Balance verification?:

Yes

Diluent used:

0.1 M NH<sub>4</sub>OH

## Dilution

Diluent:

0.1 M NH<sub>4</sub>OH

Density of diluent (g/ml):

N/A

a. Parent standard activity:

99/0 pCi / ml

b. Amount of standard transferred:

1.9605 g

c. Total amount of dilution:

166.25 g

d. Activity of dilution [a \* b / c]:

116.86 pCi / ml as of 9-1-94

Dilution logbook I.D. #:

93-474 - 97 - 1

Prepared by:

Dyne Wong

Preparation date:

8-17-94

Reviewed by:

Joe H. Helman

Review date:

8/25/94

If the diluent remains unchanged from the diluent used for the dilution source, then a weight dilution of a volume unit source can be performed without a density conversion. If the diluent changes, a weighted proportion density conversion is necessary.

LAL-91-SOP-0174



**Los Alamos Technical Associates, Inc.**

8633 Gage Blvd. / Kennewick, WA 99336 / Telephone (509) 783-4369 / FAX (509) 783-9661

July 14, 1995  
LATA95-142



Ms. Joan Kessner  
CH2M Hill  
345 Hills  
Richland, WA 99352

Subject: VB403.65, SDG LK4467-LAS

Dear Ms. Kessner:

Attached is the data validation report for analytical results for 200-BP-5 Groundwater Round 3 (SDG LK4467-LAS). The package was received by Los Alamos Technical Associates on June 26, 1995.

If you have any questions, please let me know.

Sincerely,

*Marsha C. Webb*

Marsha C. Webb  
Deputy Project Manager

Attachment

cc: Jeanette Duncan, CH2M Hill  
DJ Smith, LATA  
VB403.65  
MCW/lb

In



**DATA VALIDATION REPORT  
for  
200-BP-5 Groundwater Round 3  
Radiochemistry Analysis  
SDG LK4467-LAS  
LATA VB403.65**

Bechtel Hanford Inc.  
P.O. Box 969  
Richland, Washington

## Table of Contents

Data Validation Narrative .....	000002
INTRODUCTION .....	000002
ANALYSES REQUESTED .....	000003
DATA QUALITY OBJECTIVES .....	000002
REFERENCES .....	000004
GLOSSARY OF VALIDATION APPLIED QUALIFIERS (RADIOCHEMISTRY) ..	000005
GLOSSARY OF LABORATORY APPLIED QUALIFIERS .....	000006
Qualification Summary Table .....	000007
Data Summary Table .....	000009
Sample Results .....	000011
Checklist .....	000014
Laboratory Case Narrative .....	000021
Chain-of-Custody Information .....	000023
Supplemental Information .....	000026
END OF PACKAGE .....	000028

**200-BP-5 Groundwater Round 3  
Data Validation Narrative**

**INTRODUCTION**

All samples in Sample Delivery Group (SDG) LK4467-LAS (VB403.65) were validated at level "C" as defined in the Data Validation Procedures for Radiochemical Analyses (WHC-SD-EN-SPP-001, Rev. 1).

The analyses were performed by Lockheed Analytical Services.

**ANALYSES REQUESTED**

See Table 1.

**DATA QUALITY OBJECTIVES**

<b>Precision:</b>	Goals for precision were met.
<b>Accuracy:</b>	Goals for accuracy were met.
<b>Sample Result Verification:</b>	Not applicable to summary data packages that contain no raw data.
<b>Detection Limits:</b>	Detection limit goals were met for all sample results as specified in the <i>Quality Assurance Program Plan for 200-BP-5 Groundwater Operable Unit</i> , DOE/RL 88-32, Rev. 1.
<b>Completeness:</b>	The data package was 100% complete for all requested analyses.

**MAJOR DEFICIENCIES**

No major deficiencies were identified during data validation which required qualification of data as unusable.

**MINOR DEFICIENCIES**

No minor deficiencies were identified during data validation which required qualification of data as unusable.

**Table 1**  
**Chain-of-Custody**  
**Analysis Request**

LATA ID #: VB403.65

SDG: LK4467-LAS

Sample Information							Analyses Requested		
SAMPLE NO.	DATE COLLECTED	MATRIX	SAF	SAMPLING LOCATION	FIELD QC INFO	TEMP °C	1	2	3
B0FBK3	6-May-95	WATER	B95-050	299-E33-30	Split w/ B0FBJ5	2	X	X	X

**Method References:**

Analysis	Method
1. Gamma Spec (Co-60)	LAL-91-SOP-0063
2. Technetium-99	LAL-91-SOP-0169
3. Activity Scan	Lab Specific

**NOTES:**

1. The Rad Screen before shipment was deemed unnecessary.
2. The field QC split will be evaluated in SDG W0553-QES.

## **REFERENCES**

WHC 1993, *Data Validation Procedures for Radiochemical Analyses*, WHC-SD-EN-SPP-001, Rev. 1, Westinghouse Hanford Company, Richland, Washington.

DOE 1994, *Quality Assurance Program Plan for 200-BP-5 Operable Unit*, DOE/RL 88-32, Rev. 1, Department of Energy-Hanford, Richland, Washington.

## **GLOSSARY OF VALIDATION APPLIED QUALIFIERS (RADIOCHEMISTRY)**

Qualifiers which may be applied by data validators in compliance with the procedures herein are as follows.

- U-** Indicates the constituent was analyzed for, but was not detected at a concentration above the Minimum Detectable Activity (MDA). The concentration reported is the sample result corrected for sample aliquot size, dilution factors, and percent solids (in the case of solid matrices) by the laboratory. The associated data should be considered usable for decision making purposes.
- UJ-** Indicates the constituent was analyzed for and was not detected at a concentration above the Minimum Detectable Activity (MDA). Due to a quality control deficiency identified during data validation, the result reported may not accurately reflect the sample concentration. The associated data should be considered usable for decision making purposes.
- J-** Indicates a constituent was analyzed for and detected. The associated value is estimated due to a quality control deficiency identified during validation. The data should be considered usable for decision making purposes.
- R-** Indicates the constituent was analyzed for and detected; however, due to an identified quality control deficiency the data should be considered unusable for decision making purposes.
- UR-** Indicates the constituent was analyzed for and not detected; however, due to an identified quality control deficiency the data should be considered unusable for decision making purposes.

## **GLOSSARY OF LABORATORY APPLIED QUALIFIERS**

Qualifiers which may be applied by the laboratory in compliance with applicable requirements are as follows.

Commonly used laboratory radiochemistry qualifiers:

- U-** Indicates the analyte was analyzed for but not detected in the sample.
- J-** Indicates the value reported is estimated due to the presence of interference.

## **Qualification Summary Table**

### Qualification Summary Table

#### Radiochemistry

ANALYTE	TYPE	QUALIFIER	SAMPLES AFFECTED	DQO	REASON
No qualifiers were added by the validator.					

**Comments:**

1. The "U" qualifiers added to the Data Summary Tables and Form Is are laboratory concentration qualifiers to indicate that the results are <MDA and have not been applied by the validator.
2. The RPD problem discussed in the laboratory case narrative applies to a sample that is not part of this work order.

## **Data Summary Table**

40365RAD.NAR; Printed: 12-Jul-95, 11:09 am

**000009**

**RADIOCHEMISTRY**  
**DATA SUMMARY TABLE**

LATA ID#: VB403.65		HEIS #:	B0FBK3	
		Date:	6-May-95	
		Matrix:	WATER	
Constituent	CAS #	Units	Results	Q
Technetium-99	14133-76-7	pCi/L	45.4	
<b>GAMMA-SCAN</b>				
Actinium-228 (Ra-228)	15262-20-1	pCi/L	15	U
Cesium-137	10045-97-3	pCi/L	2.9	U
Cobalt-58	13981-38-9	pCi/L	3.9	U
Cobalt-60	10198-40-0	pCi/L	1.4	U
Europium-152	14683-23-9	pCi/L	1	U
Europium-154	15585-10-1	pCi/L	-2	U
Europium-155	14391-16-3	pCi/L	-6.7	U
Iron-59	14596-12-4	pCi/L	8	U
Lead-212	PB-212	pCi/L	2	U
Lead-214 (Ra-226)	PB-214	pCi/L	9	U
Radium-226 (gamma)	13982-63-3	pCi/L	10	U
Uranium-235 (gamma)	15117-96-1	pCi/L	-20	U

## **Sample Results (Form I's)**

## LOCKHEED ANALYTICAL SERVICES

## RAD DATA REPORT (ra01)

Bechtel Hanford, Inc.\* Richland, WA

Bechtel Hanford Project (Project BECHTEL-HANFORD)

Client Sample ID: B0FBK3

LAL Sample ID: L4467-2

Date Collected: 06-MAY-95

Date Received: 09-MAY-95

Matrix: Water

Login Number: L4467

SDG: LK4467

Constituent	Analyzed	Method	Acceptable Range	Error	MDL	Data Qual.	Units
Ac-228(Ra-228)	30-MAY-95	GAMMA SPEC LAL-0063_23211	15.	26.	40.	U	pCi/L
Co-58	30-MAY-95	GAMMA SPEC LAL-0063_23211	3.9	5.3	8.7	U	pCi/L
Co-60	30-MAY-95	GAMMA SPEC LAL-0063_23211	1.4	5.1	8.1	U	pCi/L
Cs-137	30-MAY-95	GAMMA SPEC LAL-0063_23211	2.9	8.1	10.	U	pCi/L
Eu-152	30-MAY-95	GAMMA SPEC LAL-0063_23211	1.	12.	41.	U	pCi/L
Eu-154	30-MAY-95	GAMMA SPEC LAL-0063_23211	-2.	13.	34.	U	pCi/L
Eu-155	30-MAY-95	GAMMA SPEC LAL-0063_23211	-6.7	6.3	19.	U	pCi/L
Fe-59	30-MAY-95	GAMMA SPEC LAL-0063_23211	8.	10.	22.	U	pCi/L
Pb-212	30-MAY-95	GAMMA SPEC LAL-0063_23211	2.	11.	16.	U	pCi/L
Pb-214(Ra-226)	30-MAY-95	GAMMA SPEC LAL-0063_23211	9.	14.	19.	U	pCi/L
Ra-226(GAMMA)	30-MAY-95	GAMMA SPEC LAL-0063_23211	10	140	200	U	pCi/L
U-235(GAMMA)	30-MAY-95	GAMMA SPEC LAL-0063_23211	-20.	23.	45.	U	pCi/L

7-11-95  
015

000012

## LOCKHEED ANALYTICAL SERVICES

## RAD DATA REPORT (ra01)

Bechtel Hanford, Inc.\* Richland, WA

Bechtel Hanford Project (Project BECHTEL-HANFORD)

Client Sample ID: B0FBK3

LAL Sample ID: L4467-6

Date Collected: 06-MAY-95

Date Received: 09-MAY-95

Matrix: Water

Login Number: L4467

SDG: LK4467

Constituent	Analyzed	Batch	Activity	Error	MDA	Data	Units
Tc-99	31-MAY-95	TC-99 LAL-0169_23139	45.4	8.8	6.0		pCi/L

*mu*  
7-11-95

016

# **Checklist**

40365RAD.NAR; Printed: 12-Jul-95, 11:55 am

**000014**

**LATA RADIOCHEMISTRY  
DATA VALIDATION CHECKLIST**

VALIDATION LEVEL:	A	B	C	D	E
VALIDATION PROCEDURE:	<input type="checkbox"/> WHC-CM-5-3, Rev. 0		<input checked="" type="checkbox"/> WHC-SD-EN-SPP-001, Rev. 1		
PROJECT:	200-BP-5 ROUND 3		SDG:	LK4467-LAS	
VALIDATOR:	MC WEBB <i>7-12-95</i>	LATA NO:	VB403.65	DATE:	11-Jul-95
REVIEWER:	BJ MORRIS <i>7-12-95</i>	LAB:	LAS	CASE:	N/A
SAF NO:	B95-050	QAPP NO:	N/A	SAP NO:	DOE/RL 88-32 R1
ANALYSES REQUESTED					
<input checked="" type="checkbox"/> Gamma Spec LAL-91-SOP-0063	<input checked="" type="checkbox"/> Technetium-99 LAS-91-SOP-0169				
SAMPLE NO.	MATRIX	COMMENTS:			
B0FBK3	WATER				

**1. DATA PACKAGE COMPLETENESS AND CASE NARRATIVE**

YES    NO    N/A

Is technical verification documentation present?

<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>

Is a case narrative present?

**2. HOLDING TIMES**

YES    NO    N/A

Are sample holding times acceptable?

<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>

Are samples preserved correctly?

See HOLDING TIME SUMMARY form

**3. INSTRUMENT PERFORMANCE AND CALIBRATIONS**

YES    NO    N/A

Were instruments/detectors calibrated within one year of sample analysis?

<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>
<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>
<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>
<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>

Are initial calibrations acceptable?

Are standards NIST traceable?

Are standards acceptable?

Comments:

---

**LATA RADIOCHEMISTRY  
DATA VALIDATION CHECKLIST**

**4. CONTINUING CALIBRATION**

Background checked at proper frequency?

YES	NO	N/A
<input type="checkbox"/>	<input type="checkbox"/>	X
<input type="checkbox"/>	<input type="checkbox"/>	X
<input type="checkbox"/>	<input type="checkbox"/>	X
<input type="checkbox"/>	<input type="checkbox"/>	X
<input type="checkbox"/>	<input type="checkbox"/>	X
<input type="checkbox"/>	<input type="checkbox"/>	X
<input type="checkbox"/>	<input type="checkbox"/>	X

Background check acceptable?

Efficiency checked at proper frequency?

Efficiency check acceptable?

Calibration check standards NIST traceable?

Calibration check standards acceptable?

If NO(s) are checked, see CALIBRATION DATA SUMMARY form

**5. BLANKS**

Were method blanks analyzed?

YES	NO	N/A
X	<input type="checkbox"/>	<input type="checkbox"/>
X	<input type="checkbox"/>	<input type="checkbox"/>
X	<input type="checkbox"/>	<input type="checkbox"/>
<input type="checkbox"/>	<input type="checkbox"/>	X

Are the method blanks free of analytes?

Were method blank results acceptable?

Validation calculation/transcription checks were performed and are acceptable.

If NO(s) are checked, see BLANK DATA SUMMARY form

**6. ACCURACY**

Were spike samples analyzed at the proper frequency?

YES	NO	N/A
<input type="checkbox"/>	<input type="checkbox"/>	X
<input type="checkbox"/>	<input type="checkbox"/>	X
X	<input type="checkbox"/>	<input type="checkbox"/>
X	<input type="checkbox"/>	<input type="checkbox"/>
<input type="checkbox"/>	<input type="checkbox"/>	X

Are all spike sample recoveries acceptable?

Were laboratory control standards (LCS) analyzed at the proper frequency?

Are all LCS recoveries acceptable?

Was a tracer/chemical carrier added?

Was the tracer/chemical carrier recovery acceptable?

Are standard sources traceable?

Are standards acceptable?

Validation calculation checks were performed and are acceptable.

If NO(s) are checked, see ACCURACY DATA SUMMARY form

**7. PRECISION**

Were laboratory duplicates analyzed at the proper frequency?

YES	NO	N/A
X	<input type="checkbox"/>	<input type="checkbox"/>
X	<input type="checkbox"/>	<input type="checkbox"/>
<input type="checkbox"/>	<input type="checkbox"/>	X

Are all duplicate RPD values acceptable?

Validation calculation checks were performed and are acceptable.

If NO(s) are checked, see PRECISION DATA SUMMARY form

**LATA RADIOCHEMISTRY  
DATA VALIDATION CHECKLIST**

**8. FIELD QC SAMPLES**

Were field QC samples (field/trip blanks, duplicates, splits, performance audit) identified?

YES	NO	N/A
<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>
<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>
<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>
<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>

Are field/trip blank results acceptable? (see Blank Data Summary form)

Are field duplicate RPD values acceptable? (see Field QC calculations)

Are field split RPD values acceptable? (see Field QC calculations)

Are performance audit sample results acceptable?

**Comments:** B0FBK3 is a split with B0FBJ5. B0FBJ5 is in SDG W0553-QES. The split will be evaluated in SDG W0553-QES.

---



---

**9. REPORTED RESULTS AND DETECTION LIMITS**

Are results reported for all requested analyses?

YES	NO	N/A
<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>
<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>
<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>

Are all results supported in the raw data?

Are results calculated properly?

Do MDAs meet the RDLs?

Validation calculation checks were performed and are acceptable.

**Comments:**

---



---



---

**VALIDATION SUMMARY**

For deficiencies (major and minor) and comments, please refer to the Qualification Summary Table.

**LATA RADIOCHEMISTRY  
DATA VALIDATION CHECKLIST**

**HOLDING TIME SUMMARY**

SDG: LK4467-LAS			VALIDATOR: MC WEBB					DATE: 11-Jul-95		
PROJECT: 200-BP-5 ROUND 3			REVIEWER: BJ MORRIS					LATA NO.: VB403.65		
HEIS-SN	MATRIX CODE	ANALYSIS	DATE COLLECTED	PREP DATE	ANALYSIS DATE	PREP HT (days)	Required HT (days)	ANALYSIS HT (days)	Required HT (days)	VAL Q
BOFBK3	WATER	Gamma Scan	6-May-95	N/A	30-May-95	N/A	N/A	24	180	NONE
BOFBK3	WATER	Tc-99	6-May-95	N/A	31-May-95	N/A	N/A	25	180	NONE

**LATA RADIOCHEMISTRY  
DATA VALIDATION CHECKLIST**

**PRECISION DATA SUMMARY**

SDG: LK4467-LAS						VALIDATOR: MC WEBB				DATE: 11-Jul-95	
PROJEC 200-BP-5 ROUND 3						REVIEWER: BJ MORRIS				LATA NO.: VB403.65	
HEIS-SN	ANALYTE	ORIG RESULTS	LAB Q	DUPE RESULTS	LAB Q	UNITS	RDL	DUPE RPD %	DUPE CRDL dif	SAMPLES AFFECTED	VAL Q
B0FBK3	Tc-99	45.4		50.6		pCi/L	15	N/A	5.2	NONE	NONE
B0FBK3	Cs-137	2.94	U	1.9	U	pCi/L	15	N/A	N/A	NONE	NONE

**000019**

PNO-DVF-015, R2

40365RAD.XLS, PRECISION  
7/12/95, 4:57 AM

## LOCKHEED ANALYTICAL SERVICES

## RADIOCHEMISTRY ANALYTES

## QC Data Summary For Duplicate Sample Analysis

SDG: LK4467

Analyte	Batch ID	Client ID	LAL ID	Date Analyzed	Sample Result	Error 2 Sigma	Duplicate Result	Error 2 Sigma	RER	ReD	Q
Tc-99	23139	B0FBK3	L4467-6	05/31/95	45.4	8.78	50.6	9.29	1.57	10.8	
Tc-99	23139	B0FKH6	L4482-17	05/31/95	1560	128	2020	163	1.57	25.7	*
Cs-137	23211	B0FBK3	L4467-2	05/31/95	2.94	8.14	1.9	5.72	0.08	43	
Pb-214(Ra-2)	23211	B0FBK3	L4467-2	05/31/95	8.79	13.7	7.97	13.8	0.03	9.79	
Cs-137	23211	B0FKH6	L4482-8	05/30/95	-7.17	3.96	4.79	7.31	1.06	1010	*
Pb-214(Ra-2)	23211	B0FKH6	L4482-8	05/30/95	12.3	13.2	6.32	13.9	0.22	64.2	

mcw  
7-12-95

020

000020

# **Laboratory Case Narrative**

40365RAD.NAR; Printed: 12-Jul-95, 11:55 am

**000021**

## CASE NARRATIVE RADIOCHEMICAL ANALYSES

The routine calibration and quality control analyses performed for this batch include as applicable: instrument calibration, initial and continuing calibration verification, quench monitoring standards, instrument background analysis, method blanks, yield tracer, laboratory control samples, matrix spike samples, duplicate samples.

### Holding Time Requirements

All holding time requirements were met.

**Chemical Recoveries and MDAs**, where applicable, can be found on the preparation and calculation sheets of the attached raw data for each method.

### Analytical Method

#### Gamma Spectrum Analysis

The gamma spectrum analysis was performed using LAL-91-SOP-0063. The second sample duplicate analysis for Cs-137 was out of limits; however, since the first duplicate was within limits, the data is considered acceptable, and all other QC criteria were met.

#### Technetium-99

The technetium-99 analysis was performed using LAL-91-SOP-0169. The second sample duplicate analysis was out of limits; however, since the first duplicate was within limits, the data is considered acceptable, and all other QC criteria were met.

Yvonne M. Jacoby  
Prepared By

June 12, 1995  
Date

7-11-95  
004  
**000022**

## **Chain-of-Custody Information**

40365RAD.NAR; Printed: 12-Jul-95, 11:55 am

**000023**

Bechtel Hanford, Inc.

L4467

## CHAIN OF CUSTODY/SAMPLE ANALYSIS REQUEST

Page 1 of 1

Data Turnaround

 Priority Normal

Collector <i>DAVE St Sohn</i>	Company Contact G.L. Kasza	Telephone (509) 372-9675										
Project Designation 200-BP-5 Groundwater Round 3	Sampling Location 200 East	SAF No. B95-050										
Ice Chest No. <i>GWS-141</i>	Field Logbook No. <i>EFZ-1125</i>	Method of Shipment Federal Express										
Shipped To Lockheed	Offsite Property No. <i>W95-0-0001-005</i>	Bill of Lading/Air Bill No. <i>R904627686</i>										
Possible Sample Hazards/Remarks	Preservation HNO3 P/G	HCl P Cool 4°										
	Type of Container <i>5-6-55-005</i> P/G		P	P								
	No. of Container(s) 4		4	1								
Special Handling and/or Storage Maintain samples between 2°C and 6°C.	Volume 1L		1L	20mL								
SAMPLE ANALYSIS				Gamma Spec to include Co-60	Tc-99	Activity Scan						
Sample No.	Matrix*	Date Sampled	Time Sampled									
BOFBK3	W	5-6-75	1050	X	X	X						
CHAIN OF POSSESSION	Sign/Print Names				SPECIAL INSTRUCTIONS							
Relinquished By <i>David J. John ERE</i>	Date/Time 05-08-95 0830	Received By <i>B. Whitten</i>	Date/Time 0830									
Relinquished By <i>ERE</i>	Date/Time 1000	Received By	Date/Time									
Relinquished By <i>B. Whitten 5-8-95</i>	Date/Time	Received By	Date/Time									
Relinquished By <i>ERE</i>	Date/Time	Received By	Date/Time									
LABORATORY SECTION	Received By <i>M. Miller</i>	Title <i>Sample Custodian</i>			Date/Time 5-9-95 0830							
FINAL SAMPLE DISPOSITION	Disposal Method		Disposed By		Date/Time							

Lockheed Analytical Services  
Sample Receiving Checklist

Page 1 of

Client Name: Bechtel - Hanford

Job No. L4467

Cooler ID: VAP-<sup>MS</sup><sub>5-215</sub> GWS-141

**COOLER CONDITION UPON RECEIPT**

Temperature of cooler upon receipt:

2 °C

temperature of temp. blank upon receipt:

Yes	No	* Comments/Discrepancies
-----	----	--------------------------

custody seals intact

X

chain of custody present

X

blue ice (or equiv.) present/frozen

X

rad survey completed

X

**SAMPLE CONDITION UPON RECEIPT**

Yes	No	* Comments/Discrepancies
-----	----	--------------------------

all bottles labeled

X

samples intact

X

proper container used for sample type

X

sample volume sufficient for analysis

X

proper pres. indicated on the COC

X

VOA's contain headspace

N/A

are samples bi-phasic (if so, indicate sample ID'S):

MM-

**MISCELLANEOUS ITEMS**

Yes	No	* Comments/Discrepancies
-----	----	--------------------------

samples with short holding times

X

samples to subcontract

X

**ADDITIONAL COMMENTS/DISCREPANCIES**

Completed by / date: Miller 5-9-95

Sent to the client (date/initials):

\*\* Client's signature upon receipt:

Notes: \* = contact the appropriate CSR or any discrepancies immediately upon receipt

\*\* = please review this information and return via facsimile to the appropriate CSR (702) 361-8146

0000025

012  
S-11-11-11

## **Supplemental Information**

40365RAD.NAR; Printed: 12-Jul-95, 11:55 am

**000026**

Environmental  
Restoration  
Contractor

# ERC Team

## Interoffice Memorandum

Job No. 22192  
Written Response Required: NO  
CCN: N/A  
OU: 200-BP-5  
TSD: N/A  
ERA: N/A  
Subject Code: 1995 Round 3 Sampling

TO: W. S. Thompson N3-06 DATE: April 21, 1995  
COMES: D. B. Erb H6-01 FROM: S. K. De Mers  
Radiological Controls  
N3-06/376-2764  
SUBJECT: 1995 Round 3 sampling for 200-BP-5

There is no need to perform total activities prior to offsite shipment to NRC licensed labs of samples taken from the attached list of wells.

The wells listed in the attachment were reviewed for radiological content based on the previous 4 years of sampling data. No well listed has a  $\beta$  activity in excess of 100,000 pCi/l ( $<.1$  uCi/sample based on a 1 liter sample size) nor any  $\alpha$  activity in excess of 10,000 pCi/l ( $<.01$  uCi/l based on a 1 liter sample). All wells show activities  $< 2,000$  pCi/gm ( $< 2$  nCi/gm D.O.T. limit). The highest activity in recent samples is 17,000 pCi/l  $\beta$  and 170 pCi/l  $\alpha$ .

Radiological monitoring during sampling will only be required if the wells are located in radiological areas or if the wells themselves are labeled with radiological stickers. Monitoring requirements for down hole work such as pump removal will be determined based on the history of each well on a case by case basis.

skd

009

000027

7-11-95

C-704596

**END OF PACKAGE**