# SAF-RC-001 Industrial Hygiene Sampling FINAL DATA

NO DISTRIBUTION REQUIRED

CO	M	MI	EN	TS:

SDG <u>06I-0787-02</u> SAF-RC-001

Rad only X Chem only Rad & Chem

X Complete Partial

300 Area 333 Bldg







#### Cover Page

Report Identification Number: 06I-0787-02

Subcontract Number: 0000X-BO-G0058-B-Mod#4

Name of Industrial Hygienist: Denise A. Pitts / Henry W. Ruby

Laboratory Identification Number: DCHM

SAF#: RC-001 / R33300 J451

Payroll#: 73513



Web Page: www.datachem.com

E-mail: lab@datachem.com

**Sample Information** 

Sample Date	Customer Sample Number	Laboratory Sample Number	Method	Analytical Batch Identification	Sample Matrix
21 Feb 2006	J10T79	06I06522	NMAM 7300M	G061Q035	MCE
21 Feb 2006	J10T81	06I06523	NMAM 7300M	G061Q035	MCE
21 Feb 2006	J10T85	06I06524	NMAM 7300M	G061Q035	MCE
21 Feb 2006	J10T84	06I06525	NMAM 7300M	G061Q035	MCE
21 Feb 2006	J10T78	06106526	NMAM 7300M	G061Q035	MCE
21 Feb 2006	J10T82	06I06527	NMAM 7300M	G061Q035	MCE

I certify that this electronic image and all hardcopies produced from this image accurately represent the data and are in compliance with the contract specific requirements, both technically and for completeness, other than the conditions detailed above or in the sample data package narrative. Release, by submission through email, the data contained in this electronic image and the computer-readable EDD (as applicable), has been authorized by the laboratory Manager or the Manager's designee.

Phone: (801) 266-7700

FAX: (801) 268-9992

Name: Lisa M. Reid Title: Chemist

Date: March 03, 2006





### Case Narrative Page

Report Identification Number: 06I-0787-02

Subcontract Number: 0000X-BO-G0058-B-Mod#4

Name of Industrial Hygienist: Denise A. Pitts / Henry W. Ruby

Laboratory Identification Number: DCHM

SAF#: RC-001 / R33300 J451

Payroll#: 73513

General Set Information: There are 8 samples in set 06I-0784-01, 6 samples in set 06I-0785-01 and 6 samples in set 06I-0787-02 which were analyzed for beryllium, lead and cadmium on MCE filter. No problems were encountered with the receipt of these samples and no contact with the CTR was required.

Method Summary: Samples were transferred to 50 ml centrifuge tubes and digested in the presence of 10 mL of 1:1 (v/v) nitric acid. Samples were digested in a hot block set at 110°C for 40 minutes. Samples were then diluted to a 25 mL volume with ASTM Type II Water. Samples were shaken and delivered for ICP analysis.

Sample Preparation: All samples were prepared in accordance with DCL SOP "IH-AN-021" and NIOSH method NMAM 7300 modified for hot block digestion.

**Holding Times:** The holding times were met for both sample preparation and analysis.

Instrument Calibration: Instrument calibration was performed in accordance with NIOSH method NMAM 7300.

Initial and Continuing Calibration Verification Analysis: Beryllium, cadmium and lead recoveries in all Initial Calibration Verification (ICV) and Continuing Calibration Verification (CCV) samples are within the quality control limits of +/- 10%.

Initial and Continuing Calibration Blank Analysis: No beryllium results were found in the Initial Calibration Blank (ICB) or Continuing Calibration Blanks (CCB) at levels above the Limit of Quantitation (LOQ) of 0.02 ug/sample. No cadmium results were found in the Initial Calibration Blank (ICB) or Continuing Calibration Blanks (CCB) at levels above the Limit of Quantitation (LOQ) of 0.08 ug/sample. No lead results were found in the Initial Calibration Blank (ICB) or Continuing Calibration Blanks (CCB) at levels above the Limit of Quantitation (LOQ) of 2. ug/sample.

Method Blank Analysis: No beryllium, cadmium or lead was found in the media blank sample above the Contract Required Detection Limit (CRDL).

Dilution(s): NA.

DataChem Laboratories, Inc. 960 West Levoy Drive Salt Lake City, Utah 84123-2547 Phone: (801) 266-7700 FAX: (801) 268-9992

Web Page: www.datachem.com E-mail: lab@datachem.com



### Case Narrative Page

Laboratory Control Sample and Duplicate Analysis: Two Laboratory Control Samples (LCSs) and two Laboratory Control Sample Duplicates (LCSDs) were prepared and analyzed with the sample batch. The LCS result was within the control limit of +/- 20%. The Relative Percent Differences (RPD) between the LCSs and the LCSDs were within the control limit of 20%.

Replicate Analysis: Two samples were replicated with this analysis run. The RPD between the sample and the replicate was within the control limit of 20%. If the result of the sample or replicate is below the CRDL, replicate analysis is negligible.

Flagging Codes: None

Nonconformance/Corrective Action Report (NC/CAR): N/A

**Sample Calculation:** The final results are calculated by the following equation:

Final result for aqueous samples ( $\mu$ g/sample) = (A) x (B) x (C)

Where:

A = Analyte concentration from instrument determination ( $\mu g/L$ )

B = Concentration factor from sample preparation

= Final Volume of Digestate (L) Sample

C = Dilution performed at time of analysis

Example Calculation:  $(1 \mu g/L) \times (0.025 L/sample) \times (1) = 0.025 \mu g/sample$ 

Phone: (801) 266-7700

FAX: (801) 268-9992

Web Page: www.datachem.com E-mail: lab@datachem.com

Miscellaneous Comments: None.





### Report Page

Report Identification Number: 06I-0787-02

Subcontract Number: 0000X-BO-G0058-B-Mod#4
Name of Industrial Hygienist: Denise A. Pitts / Henry W. Ruby

Laboratory Identification Number: DCHM

SAF#: RC-001 / R33300 J451

Payroll#: 73513

Customer Sample Number	Laboratory Sample Number	Date Analyzed	Berylliun µg/sampl		Berylliun µg/m³	n	Air Volume L
J10T79	06I06522	23 Feb 2006	< 0.02	U	**	1	0.00
J10T81	06I06523	23 Feb 2006	< 0.02	U	**		0.00
J10T85	06I06524	23 Feb 2006	< 0.02	U	< 0.031	U	641.
J10T84	06I06525	23 Feb 2006	< 0.02	U	<0.021	U	931.
J10T78	06I06526	23 Feb 2006	< 0.02	U	< 0.030	U	674.
J10T82	06I06527	23 Feb 2006	< 0.02	U	< 0.024	U	817.
	Limit of D	Detection (LOD)	0.	02			. <del></del>
R	equired Detecti	on Limit (RDL)					

Customer Sample Number	Laboratory Sample Number	Date Analyzed	Lead µg/sampl	e	Lead μg/m³		Cadmiun µg/sampl	
J10T79	06106522	23 Feb 2006	<2.	U	**		< 0.08	U
J10T81	06I06523	23 Feb 2006	<2.	U	**		< 0.08	Ū
J10T85	06I06524	23 Feb 2006	<2.	U	<3.1	U	< 0.08	U
J10T84	06I06525	23 Feb 2006	<2.	U	<2.1	U	<0.08	U
J10T78	06I06526	23 Feb 2006	<2.	U	<3.0	U	<0.08	U
J10T82	06I06527	23 Feb 2006	<2.	U	<2.4	U	< 0.08	Ū
	Limit of D	Detection (LOD)		2.			0.	.08
R	equired Detecti	on Limit (RDL)						

Phone: (801) 266-7700

FAX: (801) 268-9992

Web Page: www.datachem.com

Customer Sample Number	Laboratory Sample Number	Date Analyzed	Cadmiun μg/m³	n
J10T79	06I06522	23 Feb 2006	**	
J10T81	06I06523	23 Feb 2006	**	
J10T85	06I06524	23 Feb 2006	< 0.12	U
J10T84	06I06525	23 Feb 2006	< 0.086	U
J10T78	06106526	23 Feb 2006	< 0.12	Ü
J10T82	06106527	23 Feb 2006	< 0.098	U



Web Page: www.datachem.com E-mail: lab@datachem.com



## Report Page

Phone: (801) 266-7700

FAX: (801) 268-9992

Customer Sample Number	Laboratory Sample Number	Date Analyzed	Cadmium µg/m³
	Limit of I	Detection (LOD)	
R	equired Detecti	on Limit (RDL)	

U - Parameter not detected above LOD.

J - Parameter between LOD and RDL.





### QC Summary Page

Report Identification Number: 06I-0787-02

Subcontract Number: 0000X-BO-G0058-B-Mod#4

Name of Industrial Hygienist: Denise A. Pitts / Henry W. Ruby

Laboratory Identification Number: DCHM

SAF: RC-001 / R33300 J451

Payroll#: 73513

Batch ID: G061Q035

	QC				Parent		Percent	Relative Percent
QC Sample ID	Type	Analyte	Units	Result	Result	Target	Rec.	Diff.
BL-241741-1	MB	Beryllium	μg/sample	ND	NA	NA	NA	NA
BL-241741-1	MB	Lead	μg/sample	ND	NA	NA	NA	NA
BL-241741-1	MB	Cadmium	μg/sample	ND	NA	NA	NA	NA
QC-241741-1	LCS	Beryllium	μg/sample	11.0	NA	10.0	110.	NA
QC-241741-1	LCS	Lead	μg/sample	109.	NA	100.	109.	NA
QC-241741-1	LCS	Cadmium	μg/sample	33.3	NA	30.0	111.	NA
QD-241741-1	LCSD	Beryllium	μg/sample	11.1	11.0	10.0	111.	0.791
QD-241741-1	LCSD	Lead	μg/sample	109.	109.	100.	109.	0.505
QD-241741-1	LCSD	Cadmium	μg/sample	33.1	33.3	30.0	110.	0.602
BL-241741-2	MB	Beryllium	μg/sample	ND	NA	NA	NA	NA
BL-241741-2	MB	Lead	μg/sample	ND	NA	NA	NA	NA
BL-241741-2	MB	Cadmium	μg/sample	ND	NA	NA	NA	NA
QC-241741-2	LCS	Beryllium	μg/sample	10.6	NA	10.0	106.	NA
QC-241741-2	LCS	Lead	μg/sample	106.	NA	100.	106.	NA
QC-241741-2	LCS	Cadmium	μg/sample	32.3	NA	30.0	108.	NA
QD-241741-2	LCSD	Beryllium	μg/sample	10.9	10.6	10.0	109.	3.43
QD-241741-2	LCSD	Lead	μg/sample	108.	106.	100.	108.	2.50
QD-241741-2	LCSD	Cadmium	μg/sample	32.9	32.3	30.0	110.	1.76

MB - Method Blank

LCS - Laboratory Control Sample

LCSD - Laboratory Control Sample Duplicate

MS - Matrix Spike

MSD - Matrix Spike Duplicate

LD - Laboratory Duplicate

NA - Not Applicable

ND - Parameter not detected above LOD

LCS, LCSD Percent Rec. = (Result / Target) \* 100.0

DataChem Laboratories, Inc. 960 West Levoy Drive

Salt Lake City, Utah 84123-2547

Phone: (801) 266-7700

FAX: (801) 268-9992

Web Page: www.datachem.com





### QC Summary Page

Phone: (801) 266-7700

FAX: (801) 268-9992

Web Page: www.datachem.com

E-mail: lab@datachem.com

MS, MSD Percent Rec. = ((Result – Parent) / Target) \* 100.0

LCS, LCSD Relative Percent Diff. = ((|LCS - LCSD|) / ((LCS + LCSD)/2.0)) \* 100. MS, MSD Relative Percent Diff. = ((|MS - MSD|) / ((MS + MSD)/2.0)) \* 100. LD Relative Percent Diff. = ((|Parent - LD|) / ((Parent + LD)/2.0)) \* 100



# **COC** Page

	_	_			,		• •	# * *												٠.
			,										À							
			!	24 May 2		20	2	 	Air Ca	-				20.5	3					
72		Data Terramonal	į	74.7	j	18	2		38	×	×	×	,	1	× ×	×	~	×	+	77 8 7
ح	5				1 6	255	2		20 St	*	×	. *	×	-	< ×	×	X	¥	<b>~</b>	2
5	2				WAFBIRN.	- 1	2	]	Mod	9	2	ď	2	1	\$ 5	2	2	2	ş	
~ N よなにいてす。 M		Project Coordinator Jone H. Konney	SAF No. RC-001	12		0577	ž		Beryttium Wipe	×	×	×	×	-	×	*	*	×	×	ļ ,
~	SIS REO	2 9			<b>] 28</b>	[	2		Berytlian	5	Ω		~!	~						
	ANALY	<b>3</b> 80	wided		<b>BLIF</b> ILL):		ž		Lead	Matours99				144	-			=	<u>&gt;=</u>	
	MPLE	Telephone No. 531-1229	UCTIONS	J. 1951	1300 C		£		Astestos Airtorae	) Old				2-2-64					3	
	CHAIN OF CUSTODY/SAMPLE ANALYSIS REQUIREN		SPECIAL INSTRUCTIONS All reforms COAs must be provided.	R33900 JUST	NIOSH 1300		e, cooling etc.)	-	Commercial	Blank	ړ	Man Mark	Of PA MS Nest	11 S	See Shoots	Mark San In	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	OF AND	A light	
	OF CUS	1		••	<u> </u>		Preservation (Le., cooling required, etc.)		3	Glo	Blank	15°6 ₽1.	VG 724	A PAGE	38 4	3 P	1 2	S C C	早日	
	CHAIN	nd Honry W. i	5 J	Shabling	% - 2%				VOLUNE (L) or Area	<b>4</b>	₹ Ž	toolount tothe Mr. Manhel		:					100cm - 333-400 of light	
		Company Contact Denine A. Pitts and Honry W. Ruby	Serpting Location 300 Arcts.	S35 Building	Wipe Sample Media: Glood BY Yes Other		AR AR XIPE X OTHER	SAMPLE ANALYSES	SAMPLE DATE Y	2-21-06			-			+		<b>+</b>	2-21-06 1	
		D Joyes		æs		WZARDARBZARKS	Vor Storage		MATRIX	3		_	-				+	<b>→</b>	7	(500)
		الع ي	1353	Ar to taxors	Soft Com	POSSIBLE SAMPLE HAZARDARBLARKS	Special Handling author Storage NA		SAMPLE NO.	JIOTEI ;	510TF2 :	J115x2:	J115x3 ?	TIOTY3 >	510790	T10T44 .	JIOTAI ?	J10705	J113P1 •	WCH-SH-202 (04/29/2005)


Phone: (801) 266-7700

FAX: (801) 268-9992

Web Page: www.datachem.com



## **COC** Page

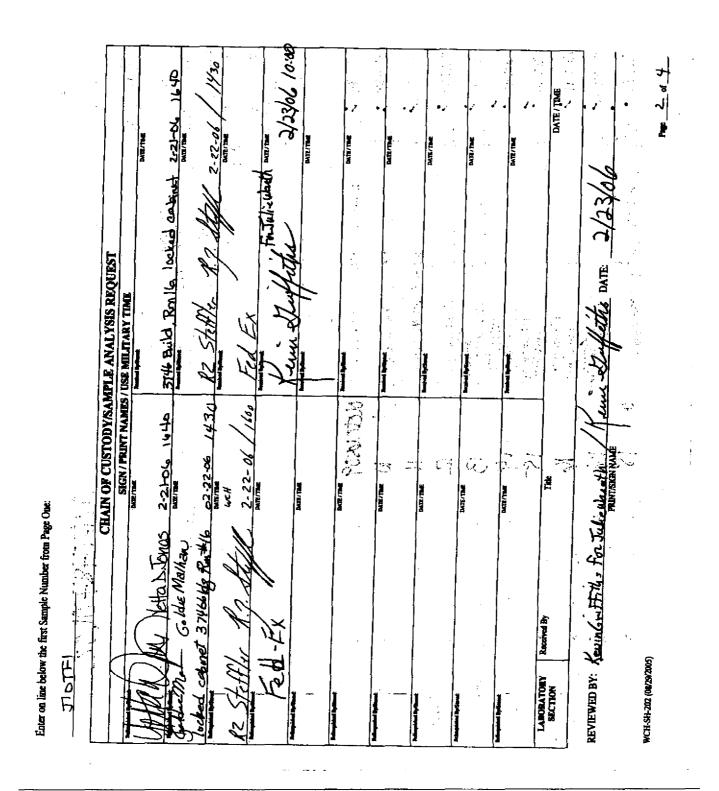

DataChem Laboratories, Inc. 960 West Levoy Drive Salt Lake City, Utah 84123-2547

Phone: (801) 266-7700 FAX: (801) 268-9992

Web Page: www.datachem.com




# **COC** Page

ln									2	F)	14	12×6	Net-0787-01,02	
1		}		CHAIN	CHAIN OF CUSTODY/SAMPLE ANALYSIS REQUEST	AMPLE	ANALY	SIS RE	VEST	<u>ا</u> ا				
KHED Topes	1	3 4	Party Conta	Company Contact Denice A. Pitts and Henry W. Ruby	·	Telephone No. 531-1229	<b>∄</b> \$1		Project Coordinator John H. Kesener			Data Terrorand	Deno	
Nagata #:   1.2(7.5).3		IW.	September 1	. d	$\vdash$	SPECIAL INSTRUCTIONS		***	SAF No.			:	-	•
Type of Sample:	\   	T	3	3.55 Build		R33300 JUST	<u>کا</u>		Method of Supera			. 51	24-HOUR	
Saute Cherry		<b>1</b>	Wipe Sample Media	i G	ANALYSIS	ANALYSIS METHOD (SPECIFIC)		<u> ==</u>	BIOLINE ALBINO	E LI		- 1		
Salf lake Che	4	8		2	<u>}</u>	<u> </u>	γ	:	prod		>chb	40	5	
COSSIBLE SAMPLE HAZA	RDATEMARKS		MATRIX	-				1		1	3	0)	ی	
Special Handling and/or Songe		<¥×	· AR OTHER		Preservation (i.e., cooling required, etc.)	ž	2	ž	2	2	£	£	£	
		SAMPLE ANALYSE	NALYSES											
SAMPLE NO.	MATTECK	SAMPLE DATE	<del></del>	VOLUNE (L) or	Comments	Airborne	Lend Airborne	Beryllium Airborne	Beryliann Wipe	Mod	3.2	ಶ್ರಕ್ಷ	Airborne Airborne	
J. 39611	3	% नि	┼─┤	1 1	EDS condensarie		datolosi	256	×	2	<	×	9	
IN 38 & L	3			100 cm²-	(zx 55) ekch, conduit		7	8	×	2	×	×	T	35
J. PNE 1.	2			COem <sup>2</sup>	and the Sadder		>	to	×	اع	~	<		2-00
110T79	4			42	Blank.	్రభ	٨	*		ਡ	OLETO GIZZ	22	×	
J10781 -		-		٦ ٩	Blank	7.0	×	<b>×</b>				22	×	
310T85°				न्त्र च	personal	γ	×	×		**		75	×	
510T84		-	$-\dagger$	931	Personal	38	×	×		2-27-04		8	×	
JIOT78				4	personal	ş	×	×				25	×	
710182	. 4	2-21-06	+	817	Tereoral	8	×	<b>×</b>			- <b>-</b>	7	×	
-\					2-2-26						1	$\overline{}$		
WCH-SH-202 (04/29/2005)	•		•	! 			1				10	7 5 W 2 4		1

Phone: (801) 266-7700 FAX: (801) 268-9992

Web Page: www.datachem.com E-mail: lab@datachem.com



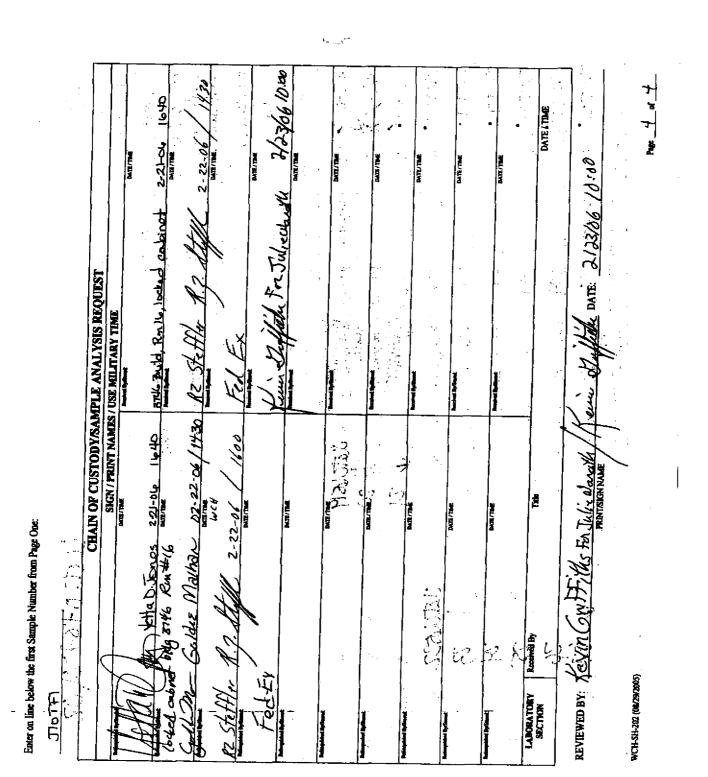

DataChem Laboratories, Inc. 960 West Levoy Drive Salt Lake City, Utah 84123-2547 Phone: (801) 266-7700 FAX: (801) 268-9992

Web Page: www.datachem.com E-mail: lab@datachem.com