




0079540

REV. 1

EBERLINE ANALYTICAL CORPORATION
2030 Wright Avenue
Richmond, California 94804-3849
Phone (510) 235-2633 Fax (510) 235-0438
Toll Free (800) 841-5487
www.eberlineservices.com

June 2, 2008

Mr. Steve Trent
Fluor Hanford Inc.
1200 Jadwin Avenue
Richland, WA 99352

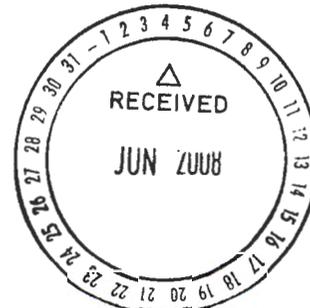

Reference: **P.O. #33677**
Eberline Services R8-02-194-70, SDG H3643
R8-05-102-7044

Dear Mr. Trent:

Enclosed is the updated report for one solid (soil) sample designated under SAF No. F08-035 received at Eberline Services on February 27, 2008. Results were originally reported on April 9, 2008; this report includes the subsequently ordered Np-237 analysis results.

Please call if you have any questions concerning this report.

Sincerely,

Melissa C. Mannion
Senior Program Manager

MCM/njv

Enclosure: Data Package

RECEIVED
DEC 16 2008
EDMC

REVISED
6-4-08

00000001

1.0 GENERAL

Fluor Hanford Inc. (FH) Sample Delivery Group H3643 was composed of one solid (soil) sample designated under SAF No. F08-035 with a Project Designation of: 200-BP-5 OU Characterization for 299-E33-343 - Soil.

The sample was received as stated on the Chain-of-Custody document. Any discrepancies were noted on the Eberline Services Sample Receipt Checklist included in the original report.

2.0 ANALYSIS NOTES

2.1 Tritium Analysis

No problems were encountered during the course of the analyses.

2.2 Carbon-14 Analysis

No problems were encountered during the course of the analyses.

2.3 Nickel-63 Analysis

No problems were encountered during the course of the analyses.

2.4 Technetium-99 Analysis

No problems were encountered during the course of the analyses.

2.5 Iodine-129 Analysis

No problems were encountered during the course of the analyses.

2.6 Isotopic Thorium Analysis

No problems were encountered during the course of the analyses.

2.7 Neptunium-237 Analysis

No problems were encountered during the course of the analyses.

3.0 Case Narrative Certification Statement

"I certify that this data package is in compliance with the SOW, both technically and for completeness, for other than the conditions detailed above. Release of the data obtained in this hard copy data package has been authorized by the Laboratory Manager or a designee, as verified by the following signature."

Melissa Mannion
Melissa C. Mannion
Senior Program Manager

06/07/08
Date

EBERLINE SERVICES / RICHMOND
SAMPLE DELIVERY GROUP H3643

SDG 7044
Contact Melissa C. Mannion

Client Hanford
Contract No. 630
Case no SDG_H3643

S U M M A R Y D A T A S E C T I O N

T A B L E O F C O N T E N T S				
About this section	.	.	.	1
Sample Summaries	.	.	.	3
Prep Batch Summary	.	.	.	5
Work Summary	.	.	.	6
Method Blanks	.	.	.	8
Lab Control Samples	.	.	.	10
Duplicates	.	.	.	12
Data Sheets	.	.	.	13
Method Summaries	.	.	.	14
Report Guides	.	.	.	21
End of Section	.	.	.	35


Prepared by

Melissa Mannion
Reviewed by

Lab id EBRLNE
Protocol Fluor
Version Ver 1.0
Form DVD-TOC
Version 3.06
Report date 06/02/08

EBERLINE SERVICES / RICHMOND

SAMPLE DELIVERY GROUP H3643

SDG 7044
 Contact Melissa C. Mannion

REPORT GUIDE

Client Hanford
 Contract No. 630
 Case no SDG_H3643

ABOUT THE DATA SUMMARY SECTION

The Data Summary Section of a Data Package has all data, in several useful orders, necessary for first level, routine review of the data package for a Sample Delivery Group (SDG). This section follows the Data Package Narrative, which has an overview of the data package and a discussion of special problems. It is followed by the Raw Data Section, which has full details.

The Data Summary Section has several groups of reports:

SAMPLE SUMMARIES

The Sample and QC Summary Reports show all samples, including QC samples, reported in one SDG. These reports cross-reference client and lab sample identifiers.

PREPARATION BATCH SUMMARY

The Preparation Batch Summary Report shows all preparation batches (lab groupings reflecting how work was organized) relevant to the reported SDG with information necessary to check the completeness and consistency of the SDG.

WORK SUMMARY

The Work Summary Report shows all samples and work done on them relevant to the reported SDG.

METHOD BLANKS

The Method Blank Reports, one for each Method Blank relevant to the SDG, show all results and primary supporting information for the blanks.

LAB CONTROL SAMPLES

The Lab Control Sample Reports, one for each Lab Control Sample relevant to the SDG, show all results, recoveries and primary supporting information for these QC samples.

REPORT GUIDES

Page 1

SUMMARY DATA SECTION

Page 1

Lab id EBRLNE
 Protocol Fluor
 Version Ver 1.0
 Form DVD-RG
 Version 3.06
 Report date 06/02/08

00000004

EBERLINE SERVICES / RICHMOND

SAMPLE DELIVERY GROUP H3643

SDG 7044
Contact Melissa C. Mannion

GUIDE , c o n t .

Client Hanford
Contract No. 630
Case no SDG_H3643

ABOUT THE DATA SUMMARY SECTION

DUPLICATES

The Duplicate Reports, one for each Duplicate and Original sample pair relevant to the SDG, show all results, differences and primary supporting information for these QC samples.

MATRIX SPIKES

The Matrix Spike Reports, one for each Spiked and Original sample pair relevant to the SDG, show all results, recoveries and primary supporting information for these QC samples.

DATA SHEETS

The Data Sheet Reports, one for each client sample in the SDG, show all results and primary supporting information for these samples.

METHOD SUMMARIES

The Method Summary Reports, one for each test used in the SDG, show all results, QC and method performance data for one analyte on one or two pages. (A test is a short code for the method used to do certain work to the client's specification.)

REPORT GUIDES

The Report Guides, one for each of the above groups of reports, have documentation on how to read the associated reports.

REPORT GUIDES

Page 2

SUMMARY DATA SECTION

Page 2

Lab id EBRLNE
Protocol Fluor
Version Ver 1.0
Form DVD-RG
Version 3.06
Report date 06/02/08

00000005

EBERLINE SERVICES/RICHMOND

SAMPLE DELIVERY GROUP H3643

SDG 7044
 Contact Melissa C. Mannion

Client Hanford
 Contract No. 630
 Case no SDG H3643

LAB SAMPLE SUMMARY

LAB	CLIENT SAMPLE ID	LOCATION	MATRIX	LEVEL	SAF NO	CHAIN OF CUSTODY	COLLECTED
R802194-01	B1T1R2	1-110	SOLID		F08-035	F08-035-004	02/08/08 11:15
R802194-02	Lab Control Sample		SOLID		F08-035		
R802194-03	Method Blank		SOLID		F08-035		
R802194-04	Duplicate (R802194-01)	1-110	SOLID		F08-035		02/08/08 11:15
R803054-03	Lab Control Sample		SOLID		F08-035		
R803054-04	Method Blank		SOLID		F08-035		

LAB SUMMARY

Page 1

SUMMARY DATA SECTION

Page 3

Lab id EBRLNE
 Protocol Fluor
 Version Ver 1.0
 Form DVD-LS
 Version 3.06
 Report date 06/02/08

00000006

EBERLINE SERVICES/RICHMOND

SAMPLE DELIVERY GROUP H3643

SDG 7044
 Contact Melissa C. Mannion

QC SUMMARY

Client Hanford
 Contract No. 630
 Case no SDG H3643

QC BATCH	CHAIN OF CUSTODY	CLIENT SAMPLE ID	MATRIX	% SOLIDS	SAMPLE AMOUNT	BASIS AMOUNT	DAYS SINCE RECEIVED	LAB COLL SAMPLE ID	DEPARTMENT SAMPLE ID
7044	F08-035-004	BIT1R2	SOLID	86.6	218 g		02/27/08 19	R802194-01	7044-001
		Method Blank	SOLID					R802194-03	7044-003
		Lab Control Sample	SOLID					R802194-02	7044-002
		Duplicate (R802194-01)	SOLID	86.6	218 g		02/27/08 19	R802194-04	7044-004
7058		Method Blank	SOLID					R803054-04	7058-004
		Lab Control Sample	SOLID					R803054-03	7058-003

QC SUMMARY

Page 1

SUMMARY DATA SECTION

Page 4

Lab id EBRLNE
 Protocol Fluor
 Version Ver 1.0
 Form DVD-QS
 Version 3.06
 Report date 06/02/08

00000007

EBERLINE SERVICES/RICHMOND

SAMPLE DELIVERY GROUP H3643

SDG 7044
 Contact Melissa C. Mannion

PREP BATCH SUMMARY

Client Hanford
 Contract No. 630
 Case no SDG H3643

TEST	MATRIX	METHOD	PREPARATION ERROR		PLANCHETS ANALYZED				QUALI- FIERS	
			BATCH	2σ %	CLIENT	MORE	RE	BLANK		LCS
Alpha Spectroscopy										
NP	SOLID	Neptunium in Solids	6145-140	14.8	1			1	1	1/1
TH	SOLID	Thorium, Isotopic in Solids	6145-088	8.0	1			1	1	1/1
Beta Counting										
TC	SOLID	Technetium 99 in Solids	6145-088	13.2	1			1	1	1/1
Gamma Spectroscopy										
I	SOLID	Iodine 129 in Solids	6145-088	19.4	1			1	1	1/1
Liquid Scintillation Counting										
C	SOLID	Carbon 14 in Solids	6145-088	10.0	1			1	1	1/1
H	SOLID	Tritium in Solids	6145-088	10.0	1			1	1	1/1
NI_L	SOLID	Nickel 63 in Solids	6145-088	11.2	1			1	1	1/1

Duplicates and Matrix Spikes are those with original (Client) sample in this Sample Delivery Group.
 Blank and LCS planchets are those in the same preparation batch as some Client, Duplicate or Spike sample.

Lab id EBRLNE
 Protocol Fluor
 Version Ver 1.0
 Form DVD-PBS
 Version 3.06
 Report date 06/02/08

00000008

EBERLINE SERVICES/RICHMOND

SAMPLE DELIVERY GROUP H3643

SDG 7044
 Contact Melissa C. Mannion

Client Hanford
 Contract No. 630
 Case no SDG H3643

LAB WORK SUMMARY

LAB SAMPLE	CLIENT SAMPLE ID					SUF-				
COLLECTED	LOCATION		MATRIX							
RECEIVED	CUSTODY	SAF No		PLANCHET	TEST	FIX	ANALYZED	REVIEWED	BY	METHOD
R802194-01	B1T1R2			7044-001	C		04/02/08	04/04/08	BW	Carbon 14 in Solids
02/08/08	1-110		SOLID	7044-001	H		04/01/08	04/04/08	BW	Tritium in Solids
02/27/08	F08-035-004	F08-035		7044-001	I		04/02/08	04/04/08	BW	Iodine 129 in Solids
				7044-001	NI_L		03/28/08	04/01/08	BW	Nickel 63 in Solids
				7044-001	NP		05/23/08	05/28/08	BW	Neptunium in Solids
				7044-001	TC		03/24/08	03/26/08	BW	Technetium 99 in Solids
				7044-001	TH		03/26/08	03/26/08	BW	Thorium, Isotopic in Solids
R802194-02	Lab Control Sample			7044-002	C		04/02/08	04/04/08	BW	Carbon 14 in Solids
			SOLID	7044-002	H		04/01/08	04/04/08	BW	Tritium in Solids
		F08-035		7044-002	I		04/02/08	04/04/08	BW	Iodine 129 in Solids
				7044-002	NI_L		03/28/08	04/01/08	BW	Nickel 63 in Solids
				7044-002	TC		03/24/08	03/26/08	BW	Technetium 99 in Solids
				7044-002	TH		03/26/08	03/26/08	BW	Thorium, Isotopic in Solids
R802194-03	Method Blank			7044-003	C		04/02/08	04/04/08	BW	Carbon 14 in Solids
			SOLID	7044-003	H		04/01/08	04/04/08	BW	Tritium in Solids
		F08-035		7044-003	I		04/02/08	04/04/08	BW	Iodine 129 in Solids
				7044-003	NI_L		03/28/08	04/01/08	BW	Nickel 63 in Solids
				7044-003	TC		03/24/08	03/26/08	BW	Technetium 99 in Solids
				7044-003	TH		03/26/08	03/26/08	BW	Thorium, Isotopic in Solids
R802194-04	Duplicate (R802194-01)			7044-004	C		04/02/08	04/04/08	BW	Carbon 14 in Solids
02/08/08	1-110		SOLID	7044-004	H		04/01/08	04/04/08	BW	Tritium in Solids
02/27/08		F08-035		7044-004	I		04/03/08	04/04/08	BW	Iodine 129 in Solids
				7044-004	NI_L		03/28/08	04/01/08	BW	Nickel 63 in Solids
				7044-004	NP		05/23/08	05/28/08	BW	Neptunium in Solids
				7044-004	TC		03/25/08	03/26/08	BW	Technetium 99 in Solids
				7044-004	TH		03/26/08	03/26/08	BW	Thorium, Isotopic in Solids
R803054-03	Lab Control Sample			7058-003	NP		05/23/08	05/28/08	BW	Neptunium in Solids
			SOLID							
		F08-035								
R803054-04	Method Blank			7058-004	NP		05/23/08	05/28/08	BW	Neptunium in Solids
			SOLID							
		F08-035								

WORK SUMMARY

Page 1

SUMMARY DATA SECTION

Page 6

Lab id EBRLNE
 Protocol Fluor
 Version Ver 1.0
 Form DVD-LWS
 Version 3.06
 Report date 06/02/08

00000009

EBERLINE SERVICES/RICHMOND

SAMPLE DELIVERY GROUP H3643

SDG 7044
 Contact Melissa C. Mannion

WORK SUMMARY, cont.

Client Hanford
 Contract No. 630
 Case no SDG_H3643

COUNTS OF TESTS BY SAMPLE TYPE

TEST	SAF No	METHOD	REFERENCE	CLIENT	MORE	RE	BLANK	LCS	DUP SPIKE	TOTAL
C	F08-035	Carbon 14 in Solids	C14_COX_LSC	1			1	1	1	4
H	F08-035	Tritium in Solids	TRITIUM_COX_LSC	1			1	1	1	4
I	F08-035	Iodine 129 in Solids	I129_SEP_LEPS_GS	1			1	1	1	4
NI_L	F08-035	Nickel 63 in Solids	NI63_LSC	1			1	1	1	4
NP	F08-035	Neptunium in Solids	NP237_LLE_PLATE_AEA	1			1	1	1	4
TC	F08-035	Technetium 99 in Solids	TC99_TR_SEP_GPC	1			1	1	1	4
TH	F08-035	Thorium, Isotopic in Solids	THISO_IE_PLATE_AEA	1			1	1	1	4
TOTALS				7			7	7	7	28

WORK SUMMARY

Page 2

SUMMARY DATA SECTION

Page 7

Lab id EBRLNE
 Protocol Fluor
 Version Ver 1.0
 Form DVD-LWS
 Version 3.06
 Report date 06/02/08

00000010

EBERLINE SERVICES / RICHMOND
 SAMPLE DELIVERY GROUP H3643

7044-003

Method Blank

METHOD BLANK

SDG <u>7044</u>	Client/Case no <u>Hanford</u>	SDG <u>H3643</u>
Contact <u>Melissa C. Mannion</u>	Contract <u>No. 630</u>	
Lab sample id <u>R802194-03</u>	Client sample id <u>Method Blank</u>	
Dept sample id <u>7044-003</u>	Material/Matrix <u>SOLID</u>	
	SAF No <u>F08-035</u>	

ANALYTE	CAS NO	RESULT pCi/g	2σ ERR (COUNT)	MDA pCi/g	RDL pCi/g	QUALI- FIERS	TEST
Tritium	10028-17-8	-1.73	3.3	5.73	400	U	H
Carbon 14	14762-75-5	1.17	2.1	3.47	50.0	U	C
Nickel 63	13981-37-8	-0.353	1.7	2.85	30.0	U	NI_L
Technetium 99	14133-76-7	0.109	0.27	0.667	12.0	U	TC
Thorium 228	14274-82-9	0	0.20	0.488	1.00	U	TH
Thorium 230	14269-63-7	-0.051	0.20	0.388	1.00	U	TH
Thorium 232	TH-232	0	0.10	0.388	1.00	U	TH
Iodine 129	15046-84-1	-0.069	0.43	0.987	2.00	U	I

200BP5 OU Charactrzn299-E33-343-Soil

QC-BLANK #65000

Lab id <u>EBRLNE</u>
Protocol <u>Fluor</u>
Version <u>Ver 1.0</u>
Form <u>DVD-DS</u>
Version <u>3.06</u>
Report date <u>06/02/08</u>

EBERLINE SERVICES / RICHMOND
SAMPLE DELIVERY GROUP H3643

7058-004

Method Blank

METHOD BLANK

SDG <u>7044</u>	Client/Case no <u>Hanford</u>	SDG <u>H3643</u>
Contact <u>Melissa C. Mannion</u>	Contract No. <u>630</u>	
Lab sample id <u>R803054-04</u>	Client sample id <u>Method Blank</u>	
Dept sample id <u>7058-004</u>	Material/Matrix <u>SOLID</u>	
	SAF No <u>F08-035</u>	

ANALYTE	CAS NO	RESULT pCi/g	2σ ERR (COUNT)	MDA pCi/g	RDL pCi/g	QUALI- FIERS	TEST
Tritium	10028-17-8	N.A.			400		H
Carbon 14	14762-75-5	N.A.			50.0		C
Nickel 63	13981-37-8	N.A.			30.0		NI_L
Neptunium 237	13994-20-2	0	<u>0.20</u>	0.132	1.00	U	NP
Technetium 99	14133-76-7	N.A.			12.0		TC
Thorium 228	14274-82-9	N.A.			1.00		TH
Thorium 230	14269-63-7	N.A.			1.00		TH
Thorium 232	TH-232	N.A.			1.00		TH
Iodine 129	15046-84-1	N.A.			2.00		I

200BP5 OU Charactrzn299-E33-343-Soil

QC-BLANK #65128

Lab id <u>EBRLNE</u>
Protocol <u>Fluor</u>
Version <u>Ver 1.0</u>
Form <u>DVD-DS</u>
Version <u>3.06</u>
Report date <u>06/02/08</u>

00000012

EBERLINE SERVICES/RICHMOND

SAMPLE DELIVERY GROUP H3643

7044-002

Lab Control Sample

LAB CONTROL SAMPLE

SDG <u>7044</u>	Client/Case no <u>Hanford</u>	SDG <u>H3643</u>
Contact <u>Melissa C. Mannion</u>	Contract No. <u>63f</u>	
Lab sample id <u>R802194-02</u>	Client sample id <u>Lab Control Sample</u>	
Dept sample id <u>7044-002</u>	Material/Matrix <u>SOLID</u>	
	SAF No <u>F08-035</u>	

ANALYTE	RESULT pCi/g	2σ ERR (COUNT)	MDA pCi/g	RDL pCi/g	QUALI- FIERS	TEST	ADDED pCi/g	2σ ERR pCi/g	REC %	3σ LMTS (TOTAL)	PROTOCOL LIMITS
Tritium	608	14	5.33	400		H	620	25	98	84-116	80-120
Carbon 14	1580	15	3.55	50.0		C	1600	64	99	84-116	80-120
Nickel 63	245	6.3	3.00	30.0		NI_L	266	11	92	83-117	80-120
Technetium 99	113	3.4	0.580	12.0		TC	120	4.8	94	80-120	80-120
Thorium 230	45.1	6.6	0.608	1.00		TH	40.0	1.6	113	71-129	80-120
Iodine 129	134	1.3	1.73	2.00		I	127	5.1	106	69-131	80-120

200BP5 OU Charactrzn299-E33-343-Soil

QC-LCS #64999

Lab id EBRLNE
 Protocol Fluor
 Version Ver 1.0
 Form DVD-LCS
 Version 3.06
 Report date 06/02/08

00000013

EBERLINE SERVICES/RICHMOND

SAMPLE DELIVERY GROUP H3643

7058-003

Lab Control Sample

LAB CONTROL SAMPLE

SDG <u>7044</u>	Client/Case no <u>Hanford</u>	<u>SDG H3643</u>
Contact <u>Melissa C. Mannion</u>	Contract No. <u>630</u>	
Lab sample id <u>R803054-03</u>	Client sample id <u>Lab Control Sample</u>	
Dept sample id <u>7058-003</u>	Material/Matrix <u>SOLID</u>	
	SAF No <u>F08-035</u>	

ANALYTE	RESULT pCi/g	2σ ERR (COUNT)	MDA pCi/g	RDL pCi/g	QUALI- FIERS TEST	ADDED pCi/g	2σ ERR pCi/g	REC %	3σ LMITS (TOTAL)	PROTOCOL LIMITS
Tritium	N.A.			400	H					80-120
Carbon 14	N.A.			50.0	C					80-120
Nickel 63	N.A.			30.0	NI_L					80-120
Neptunium 237	22.1	0.93	0.041	1.00	NP	19.8	0.79	112	74-126	80-120
Technetium 99	N.A.			12.0	TC					80-120
Thorium 230	N.A.			1.00	TH					80-120
Iodine 129	N.A.			2.00	I					80-120

200BP5 OU Charactrzn299-E33-343-Soil

QC-LCS #65127

LAB CONTROL SAMPLES

Page 2

SUMMARY DATA SECTION

Page 11

Lab id EBRLNE
 Protocol Fluor
 Version Ver 1.0
 Form DVD-LCS
 Version 3.06
 Report date 06/02/08

00000014

EBERLINE SERVICES/RICHMOND

SAMPLE DELIVERY GROUP H3643

7044-004

BIT1R2

DUPLICATE

SDG <u>7044</u>	Client/Case no <u>Hanford</u>	SDG <u>H3643</u>
Contact <u>Melissa C. Mannion</u>	Contract No. <u>630</u>	
DUPLICATE	ORIGINAL	
Lab sample id <u>R802194-04</u>	Lab sample id <u>R802194-01</u>	Client sample id <u>BIT1R2</u>
Dept sample id <u>7044-004</u>	Dept sample id <u>7044-001</u>	Location/Matrix <u>1-110</u> <u>SOLID</u>
	Received <u>02/27/08</u>	Collected/Weight <u>02/08/08 11:15</u> <u>218 g</u>
% solids <u>86.6</u>	% solids <u>86.6</u>	Custody/SAF No <u>F08-035-004</u> <u>F08-035</u>

ANALYTE	DUPLICATE		MDA	RDL	QUALI-	TEST	ORIGINAL		MDA	QUALI-	RPD	3σ	DER
	pCi/g	2σ ERR (COUNT)					pCi/g	(COUNT)					
Tritium	-2.19	3.2	5.60	400	U	H	-1.68	3.3	5.79	U	-	0.2	
Carbon 14	0.361	2.0	3.31	50.0	U	C	3.07	2.1	3.40	U	-	1.9	
Nickel 63	-0.609	1.9	3.28	30.0	U	NI_L	-0.653	1.9	3.30	U	-	0	
Neptunium 237	0.157	<u>0.21</u>	0.157	1.00		NP	0	0.085	0.323	U	200	435 1.4	
Technetium 99	1.57	0.25	0.436	12.0		TC	1.75	0.30	0.650		11	45 0.7	
Thorium 228	0.407	0.65	<u>1.09</u>	1.00	U	TH	0.847	0.66	0.873	U	-	0.9	
Thorium 230	1.21	0.66	0.619	1.00		TH	0.908	0.53	0.496		29	121 0.7	
Thorium 232	0.486	0.33	0.619	1.00	U	TH	0.714	0.40	0.496		38	131 0.9	
Iodine 129	-0.583	0.64	1.46	2.00	U	I	-0.226	0.83	1.89	U	-	0.7	

200BP5 OU Charactrzn299-E33-343-Soil

QC-DUP#1 65001

DUPLICATES

Page 1

SUMMARY DATA SECTION

Page 12

Lab id <u>EBRLNE</u>
Protocol <u>Fluor</u>
Version <u>Ver 1.0</u>
Form <u>DVD-DUP</u>
Version <u>3.06</u>
Report date <u>06/02/08</u>

00000015

EBERLINE SERVICES / RICHMOND
SAMPLE DELIVERY GROUP H3643

7044-001

B1T1R2

DATA SHEET

SDG <u>7044</u>	Client/Case no <u>Hanford</u>	SDG <u>H3643</u>
Contact <u>Melissa C. Mannion</u>	Contract No. <u>630</u>	
Lab sample id <u>R802194-01</u>	Client sample id <u>B1T1R2</u>	
Dept sample id <u>7044-001</u>	Location/Matrix <u>1-110</u>	<u>SOLID</u>
Received <u>02/27/08</u>	Collected/Weight <u>02/08/08 11:15</u>	<u>218 g</u>
% solids <u>86.6</u>	Custody/SAF No <u>F08-035-004</u>	<u>F08-035</u>

ANALYTE	CAS NO	RESULT pCi/g	2σ ERR (COUNT)	MDA pCi/g	RDL pCi/g	QUALI- FIERS	TEST
Tritium	10028-17-8	-1.68	3.3	5.79	400	U	H
Carbon 14	14762-75-5	3.07	2.1	3.40	50.0	U	C
Nickel 63	13981-37-8	-0.653	1.9	3.30	30.0	U	NI_L
Neptunium 237	13994-20-2	0	0.085	0.323	1.00	U	NP
Technetium 99	14133-76-7	1.75	0.30	0.650	12.0		TC
Thorium 228	14274-82-9	0.847	0.66	0.873	1.00	U	TH
Thorium 230	14269-63-7	0.908	0.53	0.496	1.00		TH
Thorium 232	TH-232	0.714	0.40	0.496	1.00		TH
Iodine 129	15046-84-1	-0.226	0.83	1.89	2.00	U	I

200BP5 OU Charactrzn299-E33-343-Soil

DATA SHEETS

Page 1

SUMMARY DATA SECTION

Page 13

Lab id <u>EBRLNE</u>
Protocol <u>Fluor</u>
Version <u>Ver 1.0</u>
Form <u>DVD-DS</u>
Version <u>3.06</u>
Report date <u>06/02/08</u>

00000016

EBERLINE SERVICES/RICHMOND

SAMPLE DELIVERY GROUP H3643

Test TH Matrix SOLID
 SDG 7044
 Contact Melissa C. Mannion

Client Hanford
 Contract No. 630
 Contract SDG H3643

LAB METHOD SUMMARY

THORIUM, ISOTOPIC IN SOLIDS
 ALPHA SPECTROSCOPY

RESULTS

LAB RAW SUF- Thorium 230
 SAMPLE ID TEST FIX PLANCHET CLIENT SAMPLE ID

Preparation batch 6145-088

R802194-01	7044-001	B1T1R2	0.908
R802194-02	7044-002	Lab Control Sample	ok
R802194-03	7044-003	Method Blank	U
R802194-04	7044-004	Duplicate (R802194-01)	ok

Nominal values and limits from method RDLs (pCi/g) 1.00
 200BP5 OU Charactrzn299-E33-343-Soil

METHOD PERFORMANCE

LAB	RAW	SUF-	MAX MDA	ALIQ	PREP	DILU-	YIELD	EFF	COUNT	FWHM	DRIFT	DAYS	ANAL-		
SAMPLE ID	TEST FIX	CLIENT SAMPLE ID	pCi/g	g	FAC	TION	%	%	min	keV	KeV	HELD	PREPARED	YZED	DETECTOR
Preparation batch 6145-088			2σ prep error 8.0 %			Reference Lab Notebook #6145, pg. 83									
R802194-01		B1T1R2	0.873	0.250			44		166			47	03/25/08	03/26	SS-035
R802194-02		Lab Control Sample	0.608	0.250			35		166				03/25/08	03/26	SS-036
R802194-03		Method Blank	0.488	0.250			53		166				03/25/08	03/26	SS-037
R802194-04		Duplicate (R802194-01)	<u>1.09</u>	0.250			36		166			47	03/25/08	03/26	SS-038

Nominal values and limits from method 1.00 0.250 20-105 150 180

PROCEDURES	REFERENCE	THISO_IE_PLATE_AEA
SPP-061	Determination of Moisture Content in Solid Samples rev 0	
SPP-070	Soil Dissolution, < 1.0g Aliquot, rev 7	
CP-900	Thorium in Water and Dissolved Solid Samples by Extraction Chromatography, rev 1	
CP-008	Heavy Element Electroplating, rev 9	

AVERAGES ± 2 SD	MDA	<u>0.765 ± 0.540</u>
FOR 4 SAMPLES	YIELD	<u>42 ± 17</u>

METHOD SUMMARIES

Page 2

SUMMARY DATA SECTION

Page 15

Lab id EBRLINE
 Protocol Fluor
 Version Ver 1.0
 Form DVD-IMS
 Version 3.06
 Report date 06/02/08

00000018

EBERLINE SERVICES/RICHMOND

SAMPLE DELIVERY GROUP H3643

Test TC Matrix SOLID
 SDG 7044
 Contact Melissa C. Mannion

Client Hanford
 Contract No. 630
 Contract SDG H3643

LAB METHOD SUMMARY

TECHNETIUM 99 IN SOLIDS
 BETA COUNTING

RESULTS

LAB RAW SUF- Technetium
 SAMPLE ID TEST FIX PLANCHET CLIENT SAMPLE ID 99

Preparation batch 6145-088

R802194-01		7044-001	B1T1R2	1.75
R802194-02		7044-002	Lab Control Sample	ok
R802194-03		7044-003	Method Blank	U
R802194-04		7044-004	Duplicate (R802194-01)	ok

Nominal values and limits from method RDLs (pCi/g) 12.0
 200BP5 OU Charactrzn299-E33-343-Soil

METHOD PERFORMANCE

LAB RAW SUF- MDA ALIQ PREP DILU- YIELD EPF COUNT FWHM DRIFT DAYS ANAL-
 SAMPLE ID TEST FIX CLIENT SAMPLE ID pCi/g g FAC TION % % min keV KeV HELD PREPARED YZED DETECTOR

Preparation batch 6145-088 2σ prep error 13.2 % Reference Lab Notebook #6145, pg. 83

R802194-01		B1T1R2	0.650	1.00	84	50	45	03/21/08	03/24	GRB-201
R802194-02		Lab Control Sample	0.580	1.00	88	50		03/21/08	03/24	GRB-202
R802194-03		Method Blank	0.667	1.00	76	50		03/21/08	03/24	GRB-203
R802194-04		Duplicate (R802194-01)	0.436	1.00	85	87	46	03/21/08	03/25	GRB-224

Nominal values and limits from method 12.0 1.00 20-105 50 180

PROCEDURES	REFERENCE	TC99_TR_SEP_GPC
	SPP-062	Sample Aliquoting, rev 0
	CP-431	Technetium-99 Purification of Soil or Resin by Extraction Chromatography, rev 2
	CP-008	Heavy Element Electroplating, rev 9

AVERAGES ± 2 SD	MDA	<u>0.583</u> ± <u>0.210</u>
FOR 4 SAMPLES	YIELD	<u>83</u> ± <u>10</u>

METHOD SUMMARIES

Page 3

SUMMARY DATA SECTION

Page 16

Lab id EBRLNE
 Protocol Fluor
 Version Ver 1.0
 Form DVD-LMS
 Version 3.06
 Report date 06/02/08

00000019

EBERLINE SERVICES/RICHMOND

SAMPLE DELIVERY GROUP H3643

Test I Matrix SOLID
 SDG 7044
 Contact Melissa C. Mannion

Client Hanford
 Contract No. 630
 Contract SDG H3643

LAB METHOD SUMMARY

IODINE 129 IN SOLIDS
 GAMMA SPECTROSCOPY

RESULTS

LAB RAW SUF-
 SAMPLE ID TEST FIX PLANCHET CLIENT SAMPLE ID Iodine 129

Preparation batch 6145-088

R802194-01	7044-001	B1T1R2	U
R802194-02	7044-002	Lab Control Sample	ok
R802194-03	7044-003	Method Blank	U
R802194-04	7044-004	Duplicate (R802194-01)	- U

Nominal values and limits from method RDLs (pCi/g) 2.00
 200BP5 OU Charactrzn299-E33-343-Soil

METHOD PERFORMANCE

LAB RAW SUF- MDA ALIQ PREP DILU- YIELD EFF COUNT FWHM DRIFT DAYS ANAL-
 SAMPLE ID TEST FIX CLIENT SAMPLE ID pCi/g g FAC TION % % min keV KeV HELD PREPARED YZED DETECTOR

Preparation batch 6145-088 2σ prep error 19.4 % Reference Lab Notebook #6145, pg. 83

R802194-01	B1T1R2	1.89	1.00	55	600	54	03/31/08	04/02	XSPEC-002
R802194-02	Lab Control Sample	1.73	1.00	93	831		03/31/08	04/02	XSPEC-004
R802194-03	Method Blank	0.987	1.00	91	832		03/31/08	04/02	XSPEC-002
R802194-04	Duplicate (R802194-01)	1.46	1.00	64	615	55	03/31/08	04/03	XSPEC-004

Nominal values and limits from method 2.00 1.00 20-105 300 180

PROCEDURES	REFERENCE	I129_SEP_LEPS_GS
SPP-062		Sample Aliquoting, rev 0
SPP-060		Soil Preparation, rev 0
CP-024		Iodine-129, Sample Dissolution, rev 5
CP-530		Iodine-129 Purification, rev 1

AVERAGES ± 2 SD	MDA	<u>1.52</u> ± <u>0.790</u>
FOR 4 SAMPLES	YIELD	<u>76</u> ± <u>38</u>

METHOD SUMMARIES

Page 4

SUMMARY DATA SECTION

Page 17

Lab id EBRLNE
 Protocol Fluor
 Version Ver 1.0
 Form DVD-LMS
 Version 3.06
 Report date 06/02/08

00000020

EBERLINE SERVICES/RICHMOND

SAMPLE DELIVERY GROUP H3643

Test C Matrix SOLID
 SDG 7044
 Contact Melissa C. Mannion

LAB METHOD SUMMARY

CARBON 14 IN SOLIDS

LIQUID SCINTILLATION COUNTING

Client Hanford
 Contract No. 630
 Contract SDG H3643

RESULTS

LAB RAW SUF-
 SAMPLE ID TEST FIX PLANCHET CLIENT SAMPLE ID Carbon 14

Preparation batch 6145-088

R802194-01	7044-001	B1T1R2	U
R802194-02	7044-002	Lab Control Sample	ok
R802194-03	7044-003	Method Blank	U
R802194-04	7044-004	Duplicate (R802194-01)	- U

Nominal values and limits from method RDLs (pCi/g) 50.0
 200BP5 OU Charactrzn299-E33-343-Soil

METHOD PERFORMANCE

LAB	RAW	SUF-	MDA	ALIQ	PREP	DILU-	YIELD	EFF	COUNT	FWHM	DRIFT	DAYS	ANAL-		
SAMPLE ID	TEST FIX	CLIENT SAMPLE ID	pCi/g	g	FAC	TION	%	%	min	keV	KeV	HELD	PREPARED	YZED	DETECTOR

Preparation batch 6145-088 2σ prep error 10.0 % Reference Lab Notebook #6145, pg. 83

R802194-01	B1T1R2	3.40	0.404	100	50	54	04/01/08	04/02	LSC-004
R802194-02	Lab Control Sample	3.55	0.400	100	50	04/01/08	04/02	LSC-004	
R802194-03	Method Blank	3.47	0.400	100	50	04/01/08	04/02	LSC-004	
R802194-04	Duplicate (R802194-01)	3.31	0.422	100	50	54	04/01/08	04/02	LSC-004

Nominal values and limits from method 50.0 0.400 10 180

PROCEDURES REFERENCE C14_COX_LSC
 CP-251 Tritium/Carbon-14 Oxidation, rev 8

AVERAGES ± 2 SD MDA 3.43 ± 0.204
 FOR 4 SAMPLES YIELD 100 ± 0

METHOD SUMMARIES

Page 5

SUMMARY DATA SECTION

Page 18

Lab id EBRLNE
 Protocol Fluor
 Version Ver 1.0
 Form DVD-LMS
 Version 3.06
 Report date 06/02/08

00000021

EBERLINE SERVICES/RICHMOND

SAMPLE DELIVERY GROUP H3643

Test H Matrix SOLID
 SDG 7044
 Contact Melissa C. Mannion

LAB METHOD SUMMARY

TRITIUM IN SOLIDS

LIQUID SCINTILLATION COUNTING

Client Hanford
 Contract No. 630
 Contract SDG H3643

RESULTS

LAB	RAW	SUF-		
SAMPLE ID	TEST FIX	PLANCHET	CLIENT SAMPLE ID	Tritium
Preparation batch 6145-088				
R802194-01		7044-001	B1T1R2	U
R802194-02		7044-002	Lab Control Sample	ok
R802194-03		7044-003	Method Blank	U
R802194-04		7044-004	Duplicate (R802194-01)	- U

Nominal values and limits from method RDLs (pCi/g) 400
 200BP5 OU Charactrzn299-E33-343-Soil

METHOD PERFORMANCE

LAB	RAW	SUF-	MDA	ALIQ	PREP	DILU-	YIELD	EFF	COUNT	FWHM	DRIFT	DAYS	ANAL-		
SAMPLE ID	TEST FIX	CLIENT SAMPLE ID	pCi/g	g	FAC	TION	%	%	min	keV	KeV	HELD	PREPARED	YZED	DETECTOR
Preparation batch 6145-088 2σ prep error 10.0 % Reference Lab Notebook #6145, pg. 83															
R802194-01		B1T1R2	5.79	0.404			100		50			53	04/01/08	04/01	LSC-006
R802194-02		Lab Control Sample	5.33	0.400			100		50				04/01/08	04/01	LSC-006
R802194-03		Method Blank	5.73	0.400			100		50				04/01/08	04/01	LSC-006
R802194-04		Duplicate (R802194-01)	5.60	0.422			100		50			53	04/01/08	04/01	LSC-006

Nominal values and limits from method 400 0.400 25 180

PROCEDURES REFERENCE TRITIUM_COX_LSC
 CP-251 Tritium/Carbon-14 Oxidation, rev 8

AVERAGES ± 2 SD MDA 5.61 ± 0.409
 FOR 4 SAMPLES YIELD 100 ± 0

Lab id EBRLNE
 Protocol Fluor
 Version Ver 1.0
 Form DVD-LMS
 Version 3.06
 Report date 06/02/08

00000022

EBERLINE SERVICES/RICHMOND

SAMPLE DELIVERY GROUP H3643

Test NI L Matrix SOLID
 SDG 7044
 Contact Melissa C. Mannion

LAB METHOD SUMMARY

NICKEL 63 IN SOLIDS

LIQUID SCINTILLATION COUNTING

Client Hanford
 Contract No. 630
 Contract SDG H3643

RESULTS

LAB RAW SUF-
 SAMPLE ID TEST FIX PLANCHET CLIENT SAMPLE ID Nickel 63

Preparation batch 6145-088

R802194-01	7044-001	B1T1R2	U
R802194-02	7044-002	Lab Control Sample	ok
R802194-03	7044-003	Method Blank	U
R802194-04	7044-004	Duplicate (R802194-01)	- U

Nominal values and limits from method RDLs (pCi/g) 30.0
 200BP5 OU Charactrzn299-E33-343-Soil

METHOD PERFORMANCE

LAB RAW SUF- MDA ALIQ PREP DILU- YIELD EFF COUNT FWHM DRIFT DAYS ANAL-
 SAMPLE ID TEST FIX CLIENT SAMPLE ID pCi/g g FAC TION % % min keV KeV HELD PREPARED YZED DETECTOR

Preparation batch 6145-088 2σ prep error 11.2 % Reference Lab Notebook #6145, pg. 83

R802194-01	B1T1R2	3.30	0.500	84	50	49	03/27/08	03/28	LSC-007
R802194-02	Lab Control Sample	3.00	0.500	92	50		03/27/08	03/28	LSC-007
R802194-03	Method Blank	2.85	0.500	95	50		03/27/08	03/28	LSC-007
R802194-04	Duplicate (R802194-01)	3.28	0.500	84	50	49	03/27/08	03/28	LSC-007

Nominal values and limits from method 30.0 0.500 30-105 25 180

PROCEDURES REFERENCE NI63_LSC
 SPP-070 Soil Dissolution, < 1.0g Aliquot, rev 7
 CP-280 Nickel-63 Purification, rev 3

AVERAGES ± 2 SD MDA 3.11 ± 0.439
 FOR 4 SAMPLES YIELD 89 ± 11

Lab id EBRLNE
 Protocol Fluor
 Version Ver 1.0
 Form DVD-LMS
 Version 3.06
 Report date 06/02/08

EBERLINE SERVICES / RICHMOND

SAMPLE DELIVERY GROUP H3643

SDG 7044
Contact Melissa C. Mannion

REPORT GUIDE

Client Hanford
Contract No. 630
Case no SDG H3643

SAMPLE SUMMARY

The Sample and QC Summary Reports show all samples, including QC samples, reported in one Sample Delivery Group (SDG).

The Sample Summary Report fully identifies client samples and gives the corresponding lab sample identification. The QC Summary Report shows at the sample level how the lab organized the samples into batches and generated QC samples. The Preparation Batch and Method Summary Reports show this at the analysis level.

The following notes apply to these reports:

- * LAB SAMPLE ID is the lab's primary identification for a sample.
- * DEPARTMENT SAMPLE ID is an alternate lab id, for example one assigned by a radiochemistry department in a lab.
- * CLIENT SAMPLE ID is the client's primary identification for a sample. It includes any sample preparation done by the client that is necessary to identify the sample.
- * QC BATCH is a lab assigned code that groups samples to be processed and QCed together. These samples should have similar matrices.

QC BATCH is not necessarily the same as SDG, which reflects samples received and reported together.

- * All Lab Control Samples, Method Blanks, Duplicates and Matrix Spikes are shown that QC any of the samples. Due to possible reanalyses, not all results for all these QC samples may be relevant to the SDG. The Lab Control Sample, Method Blank, Duplicate, Matrix Spike and Method Summary Reports detail these relationships.

REPORT GUIDES

Page 1

SUMMARY DATA SECTION

Page 21

Lab id EBRLNE
Protocol Fluor
Version Ver 1.0
Form DVD-RG
Version 3.06
Report date 06/02/08

00000024

EBERLINE SERVICES / RICHMOND

SAMPLE DELIVERY GROUP H3643

SDG 7044
 Contact Melissa C. Mannion

REPORT GUIDE

Client Hanford
 Contract No. 630
 Case no SDG H3643

PREPARATION BATCH SUMMARY

The Preparation Batch Summary Report shows all preparation batches in one Sample Delivery Group (SDG) with information necessary to check the completeness and consistency of the SDG.

The following notes apply to this report:

- * The preparation batches are shown in the same order as the Method Summary Reports are printed.
- * Only analyses of planchets relevant to the SDG are included.
- * Each preparation batch should have at least one Method Blank and LCS in it to validate client sample results.
- * The QUALIFIERS shown are all qualifiers other than U, J, B, L and H that occur on any analysis in the preparation batch. The Method Summary Report has these qualifiers on a per sample basis.

These qualifiers should be reviewed as follows:

- X Some data has been manually entered or modified. Transcription errors are possible.
- P One or more results are 'preliminary'. The data is not ready for final reporting.
- 2 There were two or more results for one analyte on one planchet imported at one time. The results in DVD may not be the same as on the raw data sheets.

Other lab defined qualifiers may occur. In general, these should be addressed in the SDG narrative.

Lab id EBRLNE
 Protocol Fluor
 Version Ver 1.0
 Form DVD-RG
 Version 3.06
 Report date 06/02/08

EBERLINE SERVICES / RICHMOND

SAMPLE DELIVERY GROUP H3643

SDG 7044
 Contact Melissa C. Mannion

REPORT GUIDE

Client Hanford
 Contract No. 630
 Case no SDG_H3643

WORK SUMMARY

The Work Summary Report shows all samples, including QC samples, and all relevant analyses in one Sample Delivery Group (SDG). This report is often useful as supporting documentation for an invoice.

The following notes apply to this report:

- * TEST is a code for the method used to measure associated analytes. Results and related information for each analyte are on the Data Sheet Report. In special cases, a test code used in the summary data section is not the same as in associated raw data. In this case, both codes are shown on the Work Summary.
- * SUFFIX is the lab's code to distinguish multiple analyses (recounts, reworks, reanalyses) of a fraction of the sample. The suffix indicates which result is being reported. An empty suffix normally identifies the first attempt to analyze the sample.
- * The LAB SAMPLE ID, TEST and SUFFIX uniquely identify all supporting data for a result. The Method Summary Report for each TEST has method performance data, such as yield, for each lab sample id and suffix and procedures used in the method.
- * PLANCHET is an alternate lab identifier for work done for one test. It, combined with the TEST and SUFFIX, may be the best link to raw data.
- * For QC samples, only analyses that directly QC some regular sample are shown. The Lab Control Sample, Method Blank, Duplicate, Matrix Spike and Method Summary Reports detail these relationships.
- * The SAS (Special Analytical Services) Number is a client or lab assigned code that reflects special processing for samples, such as rapid turn around. Counts of tests done are lists by SAS number since it is likely to affect prices.

Lab id EBRLNE
 Protocol Fluor
 Version Ver 1.0
 Form DVD-RG
 Version 3.06
 Report date 06/02/08

EBERLINE SERVICES / RICHMOND

SAMPLE DELIVERY GROUP H3643

SDG 7044
 Contact Melissa C. Mannion

REPORT GUIDE

Client Hanford
 Contract No. 630
 Case no SDG H3643

DATA SHEET

The Data Sheet Report shows all results and primary supporting information for one client sample or Method Blank. This report corresponds to both the CLP Inorganics and Organics Data Sheet.

The following notes apply to this report:

- * TEST is a code for the method used to measure an analyte. If the TEST is empty, no data is available; the analyte was not analyzed for.
- * The LAB SAMPLE ID and TEST uniquely identify work within the Summary Data Section of a Data Package. The Work Summary and Method Summary Reports further identify raw data that underlies this work.

The Method Summary Report for each TEST has method performance data, such as yield, for each Lab Sample ID and a list of procedures used in the method.

- * ERRORS can be labeled TOTAL or COUNT. TOTAL implies a preparation (non-counting method) error has been added, as square root of sum of squares, to the counting error denoted by COUNT. The preparation errors, which may vary by preparation batch, are shown on the Method Summary Report.
- * A RESULT can be 'N.R.' (Not Reported). This means the lab did this work but chooses not to report it now, possibly because it was reported at another time.
- * When reporting a Method Blank, a RESULT can be 'N.A.' (Not Applicable). This means there is no reported client sample work in the same preparation batch as the Blank's result. This is likely to occur when the Method Blank is associated with reanalyses of selected work for a few samples in the SDG.

The following qualifiers are defined by the DVD system:

U The RESULT is less than the MDA (Minimum Detectable Activity).

REPORT GUIDES

Page 4

SUMMARY DATA SECTION

Page 24

Lab id EBRLNE
 Protocol Fluor
 Version Ver 1.0
 Form DVD-RG
 Version 3.06
 Report date 06/02/08

00000027

EBERLINE SERVICES / RICHMOND

SAMPLE DELIVERY GROUP H3643

SDG 7044
 Contact Melissa C. Mannion

GUIDE, cont.

Client Hanford
 Contract No. 630
 Case no SDG H3643

DATA SHEET

If the MDA is blank, the ERROR is used as the limit.

- J The RESULT is less than the RDL (Required Detection Limit) and no U qualifier is assigned.
 - B A Method Blank associated with this sample had a result without a U flag and, after correcting for possibly different aliquots, that result is greater than or equal to the MDA for this sample.
- Normally, B is not assigned if U is. When method blank subtraction is shown on this report, B flags are assigned based on the unsubtracted values while U's are assigned based on the subtracted ones. Both flags can be assigned in this case.
- For each sample result, all Method Blank results in the same preparation batch are compared. The Method Summary Report documents this and other QC relationships.
- L Some Lab Control Sample that QC's this sample had a low recovery. The lab can disable assignment of this qualifier.
 - H Similar to 'L' except the recovery was high.
 - P The RESULT is 'preliminary'.
 - X Some data necessary to compute the RESULT, ERROR or MDA was manually entered or modified.
 - 2 There were two or more results available for this analyte. The reported result may not be the same as in the raw data.

Other qualifiers are lab defined. Definitions should be in the SDG narrative.

The following values are underlined to indicate possible problems:

- * An MDA is underlined if it is bigger than its RDL.

REPORT GUIDES

Page 5

SUMMARY DATA SECTION

Page 25

Lab id EBRLNE
 Protocol Fluor
 Version Ver 1.0
 Form DVD-RG
 Version 3.06
 Report date 06/02/08

00000028

EBERLINE SERVICES / RICHMOND

SAMPLE DELIVERY GROUP H3643

SDG 7044
Contact Melissa C. Mannion

GUIDE, cont.

Client Hanford
Contract No. 630
Case no SDG_H3643

DATA SHEET

- * An ERROR is underlined if the 1.645 sigma counting error is bigger than both the MDA and the RESULT, implying that the MDA may not be a good estimate of the 'real' minimum detectable activity.
- * A negative RESULT is underlined if it is less than the negative of its 2 sigma counting ERROR.
- * When reporting a Method Blank, a RESULT is underlined if greater than its MDA. If the MDA is blank, the 2 sigma counting error is used in the comparison.

Lab id EBRLNE
Protocol Fluor
Version Ver 1.0
Form DVD-RG
Version 3.06
Report date 06/02/08

EBERLINE SERVICES / RICHMOND

SAMPLE DELIVERY GROUP H3643

SDG 7044
 Contact Melissa C. Mannion

REPORT GUIDE

Client Hanford
 Contract No. 630
 Case no SDG_H3643

LAB CONTROL SAMPLE

The Lab Control Sample Report shows all results, recoveries and primary supporting information for one Lab Control Sample.

The following notes apply to this report:

- * All fields in common with the Data Sheet Report have similar usage. Refer to its Report Guide for details.
- * An amount ADDED is the lab's value for the actual amount spiked into this sample with its ERROR an estimate of the error of this amount.

An amount added is underlined if its ratio to the corresponding RDL is outside protocol specified limits.

- * REC (Recovery) is RESULT divided by ADDED expressed as a percent.
- * The first, computed limits for the recovery reflect:
 1. The error of RESULT, including that introduced by rounding the result prior to printing.

If the limits are labeled (TOTAL), they include preparation error in the result. If labeled (COUNT), they do not.
 2. The error of ADDED.
 3. A lab specified, per analyte bias. The bias changes the center of the computed limits.
- * The second limits are protocol defined upper and lower QC limits for the recovery.
- * The recovery is underlined if it is outside either of these ranges.

REPORT GUIDES

Page 7

SUMMARY DATA SECTION

Page 27

Lab id EBRLNE
 Protocol Fluor
 Version Ver 1.0
 Form DVD-RG
 Version 3.06
 Report date 06/02/08

00000030

EBERLINE SERVICES / RICHMOND

SAMPLE DELIVERY GROUP H3643

SDG 7044
 Contact Melissa C. Mannion

REPORT GUIDE

Client Hanford
 Contract No. 630
 Case no SDG_H3643

DUPLICATE

The Duplicate Report shows all results, differences and primary supporting information for one Duplicate and associated Original sample.

The following notes apply to this report:

- * All fields in common with the Data Sheet Report have similar usage. This applies both to the Duplicate and Original sample data. Refer to the Data Sheet Report Guide for details.

If the Duplicate has data for a TEST and the lab did not do this test to the Original, the Original's RESULTS are underlined.

- * The RPD (Relative Percent Difference) is the absolute value of the difference of the RESULTS divided by their average expressed as a percent.

If both RESULTS are less than their MDAs, no RPD is computed and a '-' is printed.

For an analyte, if the lab did work for both samples but has data for only one, the MDA from the sample with data is used as the other's result in the RPD.

- * The first, computed limit is the sum, as square root of sum of squares, of the errors of the results divided by the average result as a percent, hence the relative error of the difference rather than the error of the relative difference. The errors include those introduced by rounding the RESULTS prior to printing.

If this limit is labeled TOT, it includes the preparation error in the RESULTS. If labeled CNT, it does not.

This value reported for this limit is at most 999.

- * The second limit for the RPD is the larger of:

1. A fixed percentage specified in the protocol.

Lab id EBRLNE
 Protocol Fluor
 Version Ver 1.0
 Form DVD-RG
 Version 3.06
 Report date 06/02/08

EBERLINE SERVICES / RICHMOND

SAMPLE DELIVERY GROUP H3643

SDG 7044
 Contact Melissa C. Mannion

GUIDE, cont.

Client Hanford
 Contract No. 630
 Case no SDG_H3643

DUPLICATE

2. A protocol factor (typically 2) times the average MDA as a percent of the average result. This limit applies when the results are close to the MDAs.

- * The RPD is underlined if it is greater than either limit.
- * If specified by the lab, the second limit column is replaced by the Difference Error Ratio (DER), which is the absolute value of the difference of the results divided by the quadratic sum of their one sigma errors, the same errors as used in the first limit.

Except for differences due to rounding, the DER is the same as the RPD divided by the first RPD limit with the limit scaled to 1 sigma.

- * The DER is underlined if it is greater than the sigma factor, typically 2 or 3, shown in the header for the first RPD limit.

Lab id EBRLNE
 Protocol Fluor
 Version Ver 1.0
 Form DVD-RG
 Version 3.06
 Report date 06/02/08

EBERLINE SERVICES / RICHMOND

SAMPLE DELIVERY GROUP H3643

SDG 7044
Contact Melissa C. Mannion

REPORT GUIDE

Client Hanford
Contract No. 630
Case no SDG H3643

MATRIX SPIKE

The Matrix Spike Report shows all results, recoveries and primary supporting information for one Matrix Spike and associated Original sample.

The following notes apply to this report:

- * All fields in common with the Data Sheet Report have similar usage. This applies both to the Spiked and Original sample data. Refer to the Data Sheet Report Guide for details.

If the Spike has data for a TEST and the lab did not do this test to the Original, the Original's RESULTS are underlined.

- * An amount ADDED is the lab's value for the actual amount spiked into the Spike sample with its ERROR an estimate of the error of this amount.

An amount is underlined if its ratio to the corresponding RDL is outside protocol specified limits.

- * REC (Recovery) is the Spike RESULT minus the Original RESULT divided by ADDED expressed as a percent.

- * The first, computed limits for the recovery reflect:

1. The errors of the two RESULTS, including those introduced by rounding them prior to printing.

If the limits are labeled (TOTAL), they include preparation error in the result. If labeled (COUNT), they do not.

2. The error of ADDED.

3. A lab specified, per analyte bias. The bias changes the center of the computed limits.

- * The second limits are protocol defined upper and lower QC limits

REPORT GUIDES

Page 10

SUMMARY DATA SECTION

Page 30

Lab id EBRLNE
Protocol Fluor
Version Ver 1.0
Form DVD-RG
Version 3.06
Report date 06/02/08

00000033

EBERLINE SERVICES / RICHMOND

SAMPLE DELIVERY GROUP H3643

SDG 7044
Contact Melissa C. Mannion

GUIDE, cont.

Client Hanford
Contract No. 630
Case no SDG_H3643

MATRIX SPIKE

for the recovery.

These limits are left blank if the Original RESULT is more than a protocol defined factor (typically 4) times ADDED. This is a way of accounting for that when the spike is small compared to the amount in the original sample, the recovery is unreliable.

* The recovery is underlined (out of spec) if it is outside either of these ranges.

REPORT GUIDES

Page 11

SUMMARY DATA SECTION

Page 31

Lab id EBRLNE
Protocol Fluor
Version Ver 1.0
Form DVD-RG
Version 3.06
Report date 06/02/08

00000034

EBERLINE SERVICES / RICHMOND

SAMPLE DELIVERY GROUP H3643

SDG 7044
Contact Melissa C. Mannion

REPORT GUIDE

Client Hanford
Contract No. 630
Case no SDG_H3643

METHOD SUMMARY

The Method Summary Report has two tables. One shows up to five results measured using one method. The other has performance data for the method. There is one report for each TEST, as used on the Data Sheet Report.

The following notes apply to this report:

- * Each table is subdivided into sections, one for each preparation batch. A preparation batch is a group of aliquots prepared at roughly the same time in one work area of the lab using the same method.

There should be Lab Control Sample and Method Blank results in each preparation batch since this close correspondence makes the QC meaningful. Depending on lab policy, Duplicates need not occur in each batch since they QC sample dependencies such as matrix effects.

- * The RAW TEST column shows the test code used in the raw data to identify a particular analysis if it is different than the test code in the header of the report. This occurs in special cases due to method specific details about how the lab labels work.

The Lab Sample or Planchet ID combined with the (Raw) Test Code and Suffix uniquely identify the raw data for each analysis.

- * If a result is less than both its MDA and RDL, it is replaced by just 'U' on this report. If it is greater than or equal to the RDL but less than the MDA, the result is shown with a 'U' flag.

The J and X flags are as on the data sheet.

- * Non-U results for Method Blanks are underlined to indicate possible contamination of other samples in the preparation batch. The Method Blank Report has supporting data.

- * Lab Control Sample and Matrix Spike results are shown as: ok, No data, LOW or HIGH, with the last two underlined. 'No data'

REPORT GUIDES

Page 12

SUMMARY DATA SECTION

Page 32

Lab id EBRLNE
Protocol Fluor
Version Ver 1.0
Form DVD-RG
Version 3.06
Report date 06/02/08

00000035

EBERLINE SERVICES / RICHMOND

SAMPLE DELIVERY GROUP H3643

SDG 7044
 Contact Melissa C. Mannion

GUIDE , c o n t .

Client Hanford
 Contract No. 630
 Case no SDG H3643

METHOD SUMMARY

means no amount ADDED was specified. 'LOW' and 'HIGH' correspond to when the recovery is underlined on the Lab Control Sample or Matrix Spike Report. See these reports for supporting data.

- * Duplicate sample results are shown as: ok, No data, or OUT, with the last two underlined. 'No data' means there was no original sample data found for this duplicate. 'OUT' corresponds to when the RPD is underlined on the Duplicate Report. See this report for supporting data.
 - * If the MDA column is labeled 'MAX MDA', there was more than one result measured by the reported method and the MDA shown is the largest MDA. If not all these results have the same RDL, the MAX MDA reflects only those results with RDL equal to the smallest one.
- MDAs are underlined if greater than the printed RDL.
- * Aliquots are underlined if less than the nominal value specified for the method.
 - * Preparation factors are underlined if greater than the nominal value specified for the method.
 - * Dilution factors are underlined if greater than the nominal value specified for the method.
 - * Residues are underlined if outside the range specified for the method. Residues are not printed if yields are.
 - * Yields, which may be gravimetric, radiometric or some type of recovery depending on the method, are underlined if outside the range specified for the method.
 - * Efficiencies are underlined if outside the range specified for the method. Efficiencies are detector and geometry dependent so this test is only approximate.

Lab id EBRLNE
 Protocol Fluor
 Version Ver 1.0
 Form DVD-RG
 Version 3.06
 Report date 06/02/08

EBERLINE SERVICES / RICHMOND

SAMPLE DELIVERY GROUP H3643

SDG 7044
 Contact Melissa C. Mannion

GUIDE , c o n t .

Client Hanford
 Contract No. 630
 Case no SDG_H3643

METHOD SUMMARY

- * Count times are underlined if less than the nominal value specified for the method.
- * Resolutions (as FWHM; Full Width at Half Max) are underlined if greater than the method specified limit.
- * Tracer drifts are underlined if their absolute values are greater than the method specified limit. Tracer drifts are not printed if percent moistures are.
- * Days Held are underlined if greater than the holding time specified in the protocol.
- * Analysis dates are underlined if before their planchet's preparation date or, if a limit is specified, too far after it.

For some methods, ratios as percentages and error estimates for them are computed for pairs of results. A ratio column header like '1+3' means the ratio of the first result column and the third result column.

Ratios are not computed for Lab Control Sample, Method Blank or Matrix Spike results since their matrices are not necessarily similar to client samples'.

The error estimate for a ratio of results from one planchet reflects only counting errors since other errors should be correlated. For a ratio involving different planchets, if QC limits are computed based on total errors, the error for the ratio allows for the preparation errors for the planchets.

The ratio is underlined (out of spec) if the absolute value of its difference from the nominal value is greater than its error estimate. If no nominal value is specified, this test is not done.

For Gross Alpha or Gross Beta results, there may be a column showing the sum of other Alpha or Beta emitters. This sum includes all relevant

Lab id EBRLNE
 Protocol Fluor
 Version Ver 1.0
 Form DVD-RG
 Version 3.06
 Report date 06/02/08

EBERLINE SERVICES / RICHMOND

SAMPLE DELIVERY GROUP H3643

SDG 7044
 Contact Melissa C. Mannion

GUIDE , c o n t .

Client Hanford
 Contract No. 630
 Case no SDG_H3643

METHOD SUMMARY

results in the DVD database, whether reported or not. Results in the sum are weighted by a particles/decay value specified by the lab for each relevant analyte. Results less than their MDA are not included. No sums are computed for Lab Control, Method Blank or Matrix Spike samples since their various planchets may not be physically related.

If a ratio of total isotopic to Gross Alpha or Beta is shown, the error for the ratio reflects both the error in the Gross result and the sum, as square root of sum of squares, of the errors in the isotopic results.

For total elemental uranium or thorium results, there may be a column showing the total weight computed from associated isotopic results. Ignoring results less than their MDAs, this is a weighted sum of the isotopic results. The weights depend on the molecular weight and half-life of each isotope so as to convert activities (decays) to weight (atoms).

If a ratio of total computed to measured elemental uranium or thorium is shown, the error for the ratio reflects the errors in all the measurements.

Lab id EBRLNE
 Protocol Fluor
 Version Ver 1.0
 Form DVD-RG
 Version 3.06
 Report date 06/02/08