


**SAF-RC-188**  
**Water Sampling – Integrated Remedial**  
**Investigation/Feasibility Study,**  
**100-F Area**  
**FINAL DATA PACKAGE**

**COMPLETE COPY OF DATA PACKAGE TO:**

No Distribution Required

**COMMENTS:**

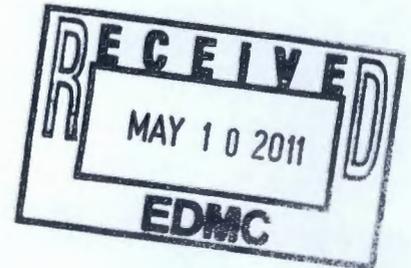

**SDG K3149      SAF-RC-188**

Rad only

Chem only

Rad & Chem

Complete

Partial

**Sample Location:      C7970 (116-F-14); I-015, I-015 DUP**  
**C7971 (118-F-1); I-013, I-013 DUP**



**1.0 GENERAL**

Washington Closure Hanford (WCH) Sample Delivery Group K3149 was composed of four water samples designated under SAF No. RC-188 with a Project Designation of: Water Sampling – Integrated Remedial Investigation/Feasibility Study – 100-.

The samples were received as stated on the chain-of-custody documents. Any discrepancies are noted on the Eberline Analytical Sample Receipt Checklist. The results were transmitted to WCH via e-mail on April 15, 2011.

**2.0 ANALYSIS NOTES**

**2.1 Strontium-90 Analysis**

No problems were encountered during the course of the analyses.

**3.0 Case Narrative Certification Statement**

**“I certify that this data package is in compliance with the SOW, both technically and for completeness, for other than the conditions detailed above. Release of the data obtained in this hard copy data package has been authorized by the Laboratory Manager or a designee, as verified by the following signature.”**



\_\_\_\_\_  
**N. Joseph Verville**  
**Client Services Manager**

4/15/11

\_\_\_\_\_  
**Date**

EBERLINE ANALYTICAL / RICHMOND  
SAMPLE DELIVERY GROUP K3149

SDG 7453  
Contact N. Joseph Verville

Client Hanford  
Contract No. S00W235A00  
Case no SDG\_K3149

S U M M A R Y   D A T A   S E C T I O N

T A B L E   O F   C O N T E N T S

About this section	. . . .	1
Sample Summaries	. . . .	3
Prep Batch Summary	. . . .	5
Work Summary	. . . .	6
Method Blanks	. . . .	7
Lab Control Samples	. . . .	8
Duplicates	. . . .	9
Data Sheets	. . . .	10
Method Summaries	. . . .	14
Report Guides	. . . .	15
End of Section	. . . .	29

Prepared by \_\_\_\_\_

Reviewed by \_\_\_\_\_

Lab id EBRLNE  
Protocol Hanford1  
Version Ver 1.0  
Form DVD-TOC  
Version 3.06  
Report date 04/15/11

EBERLINE ANALYTICAL / RICHMOND

SAMPLE DELIVERY GROUP K3149

SDG 7453  
Contact N. Joseph Verville

REPORT GUIDE

Client Hanford  
Contract No. S00W235A00  
Case no SDG K3149

ABOUT THE DATA SUMMARY SECTION

The Data Summary Section of a Data Package has all data, in several useful orders, necessary for first level, routine review of the data package for a Sample Delivery Group (SDG). This section follows the Data Package Narrative, which has an overview of the data package and a discussion of special problems. It is followed by the Raw Data Section, which has full details.

The Data Summary Section has several groups of reports:

SAMPLE SUMMARIES

The Sample and QC Summary Reports show all samples, including QC samples, reported in one SDG. These reports cross-reference client and lab sample identifiers.

PREPARATION BATCH SUMMARY

The Preparation Batch Summary Report shows all preparation batches (lab groupings reflecting how work was organized) relevant to the reported SDG with information necessary to check the completeness and consistency of the SDG.

WORK SUMMARY

The Work Summary Report shows all samples and work done on them relevant to the reported SDG.

METHOD BLANKS

The Method Blank Reports, one for each Method Blank relevant to the SDG, show all results and primary supporting information for the blanks.

LAB CONTROL SAMPLES

The Lab Control Sample Reports, one for each Lab Control Sample relevant to the SDG, show all results, recoveries and primary supporting information for these QC samples.

REPORT GUIDES

Page 1

SUMMARY DATA SECTION

Page 1

Lab id EBRLNE  
Protocol Hanford1  
Version Ver 1.0  
Form DVD-RG  
Version 3.06  
Report date 04/15/11

EBERLINE ANALYTICAL / RICHMOND

SAMPLE DELIVERY GROUP K3149

SDG 7453  
Contact N. Joseph Verville

GUIDE, cont.

Client Hanford  
Contract No. S00W235A00  
Case no SDG K3149

ABOUT THE DATA SUMMARY SECTION

DUPLICATES

The Duplicate Reports, one for each Duplicate and Original sample pair relevant to the SDG, show all results, differences and primary supporting information for these QC samples.

MATRIX SPIKES

The Matrix Spike Reports, one for each Spiked and Original sample pair relevant to the SDG, show all results, recoveries and primary supporting information for these QC samples.

DATA SHEETS

The Data Sheet Reports, one for each client sample in the SDG, show all results and primary supporting information for these samples.

METHOD SUMMARIES

The Method Summary Reports, one for each test used in the SDG, show all results, QC and method performance data for one analyte on one or two pages. (A test is a short code for the method used to do certain work to the client's specification.)

REPORT GUIDES

The Report Guides, one for each of the above groups of reports, have documentation on how to read the associated reports.

REPORT GUIDES

Page 2

SUMMARY DATA SECTION

Page 2

Lab id EBRLNE  
Protocol Hanford1  
Version Ver 1.0  
Form DVD-RG  
Version 3.06  
Report date 04/15/11

**EBERLINE ANALYTICAL/RICHMOND**

SAMPLE DELIVERY GROUP K3149

SDG 7453  
 Contact N. Joseph Verville

Client Hanford  
 Contract No. S00W235A00  
 Case no SDG K3149

**LAB SAMPLE SUMMARY**

LAB	CLIENT SAMPLE ID	LOCATION	MATRIX	LEVEL	SAF NO	CHAIN OF CUSTODY	COLLECTED
S102169-01	B28NX5	C7970 (116-F-14); I-015	WATER		RC-188	RC-188-012	02/14/11 12:45
S102169-02	B28NX6	C7970 (116-F-14); I-015DUP	WATER		RC-188	RC-188-013	02/14/11 12:45
S102169-03	B28VV9	C7970 (116-F-14); I-013	WATER		RC-188	RC-188-017	02/15/11 09:11
S102169-04	B28VW2	C7970 (116-F-14); I-013DUP	WATER		RC-188	RC-188-020	02/15/11 09:11
S102169-05	Lab Control Sample		WATER		RC-188		
S102169-06	Method Blank		WATER		RC-188		
S102169-07	Duplicate (S102169-01)	C7970 (116-F-14); I-015	WATER		RC-188		02/14/11 12:45

LAB SUMMARY

Page 1

SUMMARY DATA SECTION

Page 3

Lab id EBRLNE  
 Protocol Hanford1  
 Version Ver 1.0  
 Form DVD-LS  
 Version 3.06  
 Report date 04/15/11

**EBERLINE ANALYTICAL/RICHMOND**

SAMPLE DELIVERY GROUP K3149

SDG 7453  
 Contact N. Joseph Verville

**QC SUMMARY**

Client Hanford  
 Contract No. S00W235A00  
 Case no SDG K3149

QC BATCH	CHAIN OF CUSTODY	CLIENT SAMPLE ID	MATRIX	SOLIDS	SAMPLE AMOUNT	BASIS AMOUNT	DAYS SINCE RECEIVED	LAB COLL	LAB SAMPLE ID	DEPARTMENT SAMPLE ID
7453	RC-188-012	B28NX5	WATER		2 L		02/16/11 2	S102169-01		7453-001
	RC-188-013	B28NX6	WATER		2 L		02/16/11 2	S102169-02		7453-002
	RC-188-017	B28VV9	WATER		2 L		02/16/11 1	S102169-03		7453-003
	RC-188-020	B28VW2	WATER		2 L		02/16/11 1	S102169-04		7453-004
		Method Blank	WATER					S102169-06		7453-006
		Lab Control Sample	WATER					S102169-05		7453-005
		Duplicate (S102169-01)	WATER		2 L		02/16/11 2	S102169-07		7453-007

QC SUMMARY

Page 1

SUMMARY DATA SECTION

Page 4

Lab id EBRLNE  
 Protocol Hanford1  
 Version Ver 1.0  
 Form DVD-QS  
 Version 3.06  
 Report date 04/15/11

EBERLINE ANALYTICAL/RICHMOND

SAMPLE DELIVERY GROUP K3149

SDG 7453  
 Contact N. Joseph Verville

PREP BATCH SUMMARY

Client Hanford  
 Contract No. S00W235A00  
 Case no SDG K3149

TEST	MATRIX	METHOD	PREPARATION ERROR				PLANCHETS ANALYZED				QUALI-
			BATCH	2σ %	CLIENT	MORE	RE	BLANK	LCS	DUP/ORIG MS/ORIG	
Beta Counting											
SR	WATER	Total Strontium in Water	7292-075	10.4	4		1	1	1/1		

Duplicates and Spikes are those with original sample in the QC Batch of some Client sample in this SDG.  
 Blank and LCS planchets are those in the same preparation batch as some Client, Duplicate or Spike sample.

Lab id EBRLNE  
 Protocol Hanford1  
 Version Ver 1.0  
 Form DVD-PBS  
 Version 3.06  
 Report date 04/15/11

**EBERLINE ANALYTICAL/RICHMOND**

SAMPLE DELIVERY GROUP K3149

SDG 7453  
Contact N. Joseph Verville

**LAB WORK SUMMARY**

Client Hanford  
Contract No. S00W235A00  
Case no SDG K3149

LAB SAMPLE	CLIENT SAMPLE ID									
COLLECTED	LOCATION	MATRIX			SUF-					
RECEIVED	CUSTODY	SAF No	PLANCHET	TEST	FIX	ANALYZED	REVIEWED	BY	METHOD	
S102169-01	B28NX5		7453-001	SR		03/18/11	03/22/11	BW	Total Strontium in Water	
02/14/11	C7970 (116-F-14); I-015	WATER								
02/16/11	RC-188-012	RC-188								
S102169-02	B28NX6		7453-002	SR		03/18/11	03/22/11	BW	Total Strontium in Water	
02/14/11	C7970 (116-F-14); I-015DUP	WATER								
02/16/11	RC-188-013	RC-188								
S102169-03	B28VV9		7453-003	SR		03/18/11	03/22/11	BW	Total Strontium in Water	
02/15/11	C7970 (116-F-14); I-013	WATER								
02/16/11	RC-188-017	RC-188								
S102169-04	B28VW2		7453-004	SR		03/18/11	03/22/11	BW	Total Strontium in Water	
02/15/11	C7970 (116-F-14); I-013DUP	WATER								
02/16/11	RC-188-020	RC-188								
S102169-05	Lab Control Sample		7453-005	SR		03/18/11	03/22/11	BW	Total Strontium in Water	
		WATER								
		RC-188								
S102169-06	Method Blank		7453-006	SR		03/18/11	03/22/11	BW	Total Strontium in Water	
		WATER								
		RC-188								
S102169-07	Duplicate (S102169-01)		7453-007	SR		03/18/11	03/22/11	BW	Total Strontium in Water	
02/14/11	C7970 (116-F-14); I-015	WATER								
02/16/11		RC-188								

**COUNTS OF TESTS BY SAMPLE TYPE**

TEST	SAF No	METHOD	REFERENCE	CLIENT	MORE	RE	BLANK	LCS	DUP	SPIKE	TOTAL
SR	RC-188	Total Strontium in Water	SRTOT_SEP_PRECIP_GPC		4		1	1	1		7
TOTALS					4		1	1	1		7

**WORK SUMMARY**

Page 1

**SUMMARY DATA SECTION**

Page 6

Lab id EBRLNE  
Protocol Hanford1  
Version Ver 1.0  
Form DVD-LWS  
Version 3.06  
Report date 04/15/11

EBERLINE ANALYTICAL / RICHMOND

SAMPLE DELIVERY GROUP K3149

7453-006

Method Blank

METHOD BLANK

SDG <u>7453</u>	Client/Case no <u>Hanford</u>	SDG <u>K3149</u>
Contact <u>N. Joseph Verville</u>	Contract No. <u>S00W235A00</u>	
Lab sample id <u>S102169-06</u>	Client sample id <u>Method Blank</u>	
Dept sample id <u>7453-006</u>	Material/Matrix <u>WATER</u>	
	SAF No <u>RC-188</u>	

ANALYTE	CAS NO	RESULT pCi/L	2σ ERR (COUNT)	MDA pCi/L	RDL pCi/L	QUALI- FIERS	TEST
Total Strontium	SR-RAD	0.081	0.33	0.655	2.00	U	SR

QC-BLANK #77654
-----------------

Lab id <u>EBRLNE</u>
Protocol <u>Hanford1</u>
Version <u>Ver 1.0</u>
Form <u>DVD-DS</u>
Version <u>3.06</u>
Report date <u>04/15/11</u>



**EBERLINE ANALYTICAL/RICHMOND**

SAMPLE DELIVERY GROUP K3149

7453-007

B28NX5

**DUPLICATE**

SDG <u>7453</u> Contact <u>N. Joseph Verville</u> DUPLICATE Lab sample id <u>S102169-07</u> Dept sample id <u>7453-007</u>	Client/Case no <u>Hanford</u> SDG <u>K3149</u> Contract No. <u>S00W235A00</u> ORIGINAL Lab sample id <u>S102169-01</u> Dept sample id <u>7453-001</u> Received <u>02/16/11</u>	Client sample id <u>B28NX5</u> Location/Matrix <u>C7970(116-F-14);I-015</u> <u>WATER</u> Collected/Volume <u>02/14/11 12:45</u> <u>2 L</u> Custody/SAF No <u>RC-188-012</u> <u>RC-188</u>
--	---	--

ANALYTE	DUPLICATE					TEST	ORIGINAL					3σ	DER
	pCi/L	2σ ERR (COUNT)	MDA pCi/L	RDL pCi/L	QUALI-FIERS		pCi/L	2σ ERR (COUNT)	MDA pCi/L	QUALI-FIERS	RPD %		
Total Strontium	226	4.9	0.853	2.00		SR	219	5.1	0.949		3	23	0.4

QC-DUP#1 77655

Water Sampling - Intergrated Remedial Investigation/  
Feasibility Study - 100-

DUPLICATES

Page 1

SUMMARY DATA SECTION

Page 9

Lab id <u>EBRLNE</u>
Protocol <u>Hanford1</u>
Version <u>Ver 1.0</u>
Form <u>DVD-DUP</u>
Version <u>3.06</u>
Report date <u>04/15/11</u>

**EBERLINE ANALYTICAL / RICHMOND**

SAMPLE DELIVERY GROUP K3149

7453-001

B28NX5

**DATA SHEET**

SDG <u>7453</u>	Client/Case no <u>Hanford</u>	SDG <u>K3149</u>
Contact <u>N. Joseph Verville</u>	Contract No. <u>S00W235A00</u>	
Lab sample id <u>S102169-01</u>	Client sample id <u>B28NX5</u>	
Dept sample id <u>7453-001</u>	Location/Matrix <u>C7970(116-F-14);I-015</u>	<u>WATER</u>
Received <u>02/16/11</u>	Collected/Volume <u>02/14/11 12:45</u>	<u>2 L</u>
	Custody/SAF No <u>RC-188-012</u>	<u>RC-188</u>

ANALYTE	CAS NO	RESULT pCi/L	2σ ERR (COUNT)	MDA pCi/L	RDL pCi/L	QUALI- FIERS	TEST
Total Strontium	SR-RAD	219	5.1	0.949	2.00		SR

Water Sampling - Intergrated Remedial Investigation/  
Feasibility Study - 100-

DATA SHEETS

Page 1

SUMMARY DATA SECTION

Page 10

Lab id <u>EBRLNE</u>
Protocol <u>Hanford1</u>
Version <u>Ver 1.0</u>
Form <u>DVD-DS</u>
Version <u>3.06</u>
Report date <u>04/15/11</u>

**EBERLINE ANALYTICAL / RICHMOND**  
**SAMPLE DELIVERY GROUP K3149**

7453-002

B28NX6

**DATA SHEET**

SDG <u>7453</u>	Client/Case no <u>Hanford</u>	SDG <u>K3149</u>
Contact <u>N. Joseph Verville</u>	Contract No. <u>S00W235A00</u>	
Lab sample id <u>S102169-02</u>	Client sample id <u>B28NX6</u>	
Dept sample id <u>7453-002</u>	Location/Matrix <u>C7970(116-F-14);I-015DUP WATER</u>	
Received <u>02/16/11</u>	Collected/Volume <u>02/14/11 12:45</u> <u>2 L</u>	
	Custody/SAF No <u>RC-188-013</u> <u>RC-188</u>	

ANALYTE	CAS NO	RESULT pCi/L	2σ ERR (COUNT)	MDA pCi/L	RDL pCi/L	QUALI- FIERS	TEST
Total Strontium	SR-RAD	215	4.9	0.884	2.00		SR

Water Sampling - Intergrated Remedial Investigation/  
 Feasibility Study - 100-

DATA SHEETS

Page 2

SUMMARY DATA SECTION

Page 11

Lab id <u>EBRLNE</u>
Protocol <u>Hanford1</u>
Version <u>Ver 1.0</u>
Form <u>DVD-DS</u>
Version <u>3.06</u>
Report date <u>04/15/11</u>

**EBERLINE ANALYTICAL / RICHMOND**  
**SAMPLE DELIVERY GROUP K3149**

7453-003

B28VV9

**D A T A   S H E E T**

SDG <u>7453</u>	Client/Case no <u>Hanford</u>	SDG <u>K3149</u>
Contact <u>N. Joseph Verville</u>	Contract <u>No. S00W235A00</u>	
Lab sample id <u>S102169-03</u>	Client sample id <u>B28VV9</u>	
Dept sample id <u>7453-003</u>	Location/Matrix <u>C7970(116-F-14);I-013</u>	<u>WATER</u>
Received <u>02/16/11</u>	Collected/Volume <u>02/15/11 09:11</u>	<u>2 L</u>
	Custody/SAF No <u>RC-188-017</u>	<u>RC-188</u>

ANALYTE	CAS NO	RESULT pCi/L	2σ ERR (COUNT)	MDA pCi/L	RDL pCi/L	QUALI- FIERS	TEST
Total Strontium	SR-RAD	8.51	0.77	0.505	2.00		SR

Water Sampling - Intergrated Remedial Investigation/  
 Feasibility Study - 100-

**DATA SHEETS**

Page 3

**SUMMARY DATA SECTION**

Page 12

Lab id <u>EBRLNE</u>
Protocol <u>Hanford1</u>
Version <u>Ver 1.0</u>
Form <u>DVD-DS</u>
Version <u>3.06</u>
Report date <u>04/15/11</u>

**EBERLINE ANALYTICAL / RICHMOND**  
**SAMPLE DELIVERY GROUP K3149**

7453-004

B28VW2

**DATA SHEET**

SDG <u>7453</u>	Client/Case no <u>Hanford</u>	SDG <u>K3149</u>
Contact <u>N. Joseph Verville</u>	Contract No. <u>S00W235A00</u>	
Lab sample id <u>S102169-04</u>	Client sample id <u>B28VW2</u>	
Dept sample id <u>7453-004</u>	Location/Matrix <u>C7970 (116-F-14) ; I-013DUP WATER</u>	
Received <u>02/16/11</u>	Collected/Volume <u>02/15/11 09:11</u> <u>2 L</u>	
	Custody/SAF No <u>RC-188-020</u> <u>RC-188</u>	

ANALYTE	CAS NO	RESULT pCi/L	2σ ERR (COUNT)	MDA pCi/L	RDL pCi/L	QUALI- FIERS	TEST
Total Strontium	SR-RAD	7.99	0.74	0.500	2.00		SR

Water Sampling - Intergrated Remedial Investigation/  
 Feasibility Study - 100-

Lab id <u>EBRLNE</u>
Protocol <u>Hanford1</u>
Version <u>Ver 1.0</u>
Form <u>DVD-DS</u>
Version <u>3.06</u>
Report date <u>04/15/11</u>

**EBERLINE ANALYTICAL/RICHMOND**

SAMPLE DELIVERY GROUP K3149

Test SR Matrix WATER  
 SDG 7453  
 Contact N. Joseph Verville

**LAB METHOD SUMMARY**

TOTAL STRONTIUM IN WATER  
 BETA COUNTING

Client Hanford  
 Contract No. S00W235A00  
 Contract SDG K3149

**RESULTS**

LAB	RAW	SUF-		Total	
SAMPLE ID	TEST	FIX	PLANCHET	CLIENT SAMPLE ID	Strontium
Preparation batch 7292-075					
S102169-01				7453-001 B28NX5	219
S102169-02				7453-002 B28NX6	215
S102169-03				7453-003 B28VV9	8.51
S102169-04				7453-004 B28VW2	7.99
S102169-05				7453-005 Lab Control Sample	ok
S102169-06				7453-006 Method Blank	U
S102169-07				7453-007 Duplicate (S102169-01)	ok

Nominal values and limits from method      RDLs (pCi/L)      2.00

**METHOD PERFORMANCE**

LAB	RAW	SUF-	MDA	ALIQ	PREP	DILU-	YIELD	EFF	COUNT	FWHM	DRIFT	DAYS	ANAL-				
SAMPLE ID	TEST	FIX	CLIENT	SAMPLE ID	pCi/L	L	FAC	TION	%	%	min	keV	KeV	HELD	PREPARED	YZED	DETECTOR
Preparation batch 7292-075      2σ prep error 10.4 %      Reference Lab Notebook No. 7292 pg. 75																	
S102169-01			B28NX5		0.949	0.500			78		100		32	03/18/11	03/18		GRB-229
S102169-02			B28NX6		0.884	0.500			80		100		32	03/18/11	03/18		GRB-230
S102169-03			B28VV9		0.505	0.500			83		100		31	03/18/11	03/18		GRB-203
S102169-04			B28VW2		0.500	0.500			87		100		31	03/18/11	03/18		GRB-204
S102169-05			Lab Control Sample		0.679	0.500			79		100			03/18/11	03/18		GRB-206
S102169-06			Method Blank		0.655	0.500			85		100			03/18/11	03/18		GRB-228
S102169-07			Duplicate (S102169-01)		0.853	0.500			81		100			03/18/11	03/18		GRB-223

Nominal values and limits from method      2.00      0.500      40-110      100      180

PROCEDURES      REFERENCE      SRTOT\_SEP\_PRECIP\_GPC  
 SPP-062      Sample Aliquoting, rev 1  
 CP-380      Strontium in Water Samples, rev 5

AVERAGES ± 2 SD      MDA 0.718 ± 0.363  
 FOR 7 SAMPLES      YIELD 82 ± 7

Lab id EBRLNE  
 Protocol Hanford1  
 Version Ver 1.0  
 Form DVD-LMS  
 Version 3.06  
 Report date 04/15/11

EBERLINE ANALYTICAL / RICHMOND

SAMPLE DELIVERY GROUP K3149

SDG 7453  
Contact N. Joseph Verville

REPORT GUIDE

Client Hanford  
Contract No. S00W235A00  
Case no SDG K3149

SAMPLE SUMMARY

The Sample and QC Summary Reports show all samples, including QC samples, reported in one Sample Delivery Group (SDG).

The Sample Summary Report fully identifies client samples and gives the corresponding lab sample identification. The QC Summary Report shows at the sample level how the lab organized the samples into batches and generated QC samples. The Preparation Batch and Method Summary Reports show this at the analysis level.

The following notes apply to these reports:

- \* LAB SAMPLE ID is the lab's primary identification for a sample.
- \* DEPARTMENT SAMPLE ID is an alternate lab id, for example one assigned by a radiochemistry department in a lab.
- \* CLIENT SAMPLE ID is the client's primary identification for a sample. It includes any sample preparation done by the client that is necessary to identify the sample.
- \* QC BATCH is a lab assigned code that groups samples to be processed and QCed together. These samples should have similar matrices.

QC BATCH is not necessarily the same as SDG, which reflects samples received and reported together.

- \* All Lab Control Samples, Method Blanks, Duplicates and Matrix Spikes are shown that QC any of the samples. Due to possible reanalyses, not all results for all these QC samples may be relevant to the SDG. The Lab Control Sample, Method Blank, Duplicate, Matrix Spike and Method Summary Reports detail these relationships.

REPORT GUIDES

Page 1

SUMMARY DATA SECTION

Page 15

Lab id EBRLNE  
Protocol Hanford1  
Version Ver 1.0  
Form DVD-RG  
Version 3.06  
Report date 04/15/11

EBERLINE ANALYTICAL / RICHMOND

SAMPLE DELIVERY GROUP K3149

SDG 7453  
Contact N. Joseph Verville

REPORT GUIDE

Client Hanford  
Contract No. S00W235A00  
Case no SDG K3149

PREPARATION BATCH SUMMARY

The Preparation Batch Summary Report shows all preparation batches in one Sample Delivery Group (SDG) with information necessary to check the completeness and consistency of the SDG.

The following notes apply to this report:

- \* The preparation batches are shown in the same order as the Method Summary Reports are printed.
- \* Only analyses of planchets relevant to the SDG are included.
- \* Each preparation batch should have at least one Method Blank and LCS in it to validate client sample results.
- \* The QUALIFIERS shown are all qualifiers other than U, J, B, L and H that occur on any analysis in the preparation batch. The Method Summary Report has these qualifiers on a per sample basis.

These qualifiers should be reviewed as follows:

- X Some data has been manually entered or modified. Transcription errors are possible.
- P One or more results are 'preliminary'. The data is not ready for final reporting.
- 2 There were two or more results for one analyte on one planchet imported at one time. The results in DVD may not be the same as on the raw data sheets.

Other lab defined qualifiers may occur. In general, these should be addressed in the SDG narrative.

Lab id EBRLNE  
Protocol Hanford1  
Version Ver 1.0  
Form DVD-RG  
Version 3.06  
Report date 04/15/11

EBERLINE ANALYTICAL / RICHMOND

SAMPLE DELIVERY GROUP K3149

SDG 7453

Contact N. Joseph Verville

REPORT GUIDE

Client Hanford

Contract No. S00W235A00

Case no SDG K3149

WORK SUMMARY

The Work Summary Report shows all samples, including QC samples, and all relevant analyses in one Sample Delivery Group (SDG). This report is often useful as supporting documentation for an invoice.

The following notes apply to this report:

- \* TEST is a code for the method used to measure associated analytes. Results and related information for each analyte are on the Data Sheet Report. In special cases, a test code used in the summary data section is not the same as in associated raw data. In this case, both codes are shown on the Work Summary.
- \* SUFFIX is the lab's code to distinguish multiple analyses (recounts, reworks, reanalyses) of a fraction of the sample. The suffix indicates which result is being reported. An empty suffix normally identifies the first attempt to analyze the sample.
- \* The LAB SAMPLE ID, TEST and SUFFIX uniquely identify all supporting data for a result. The Method Summary Report for each TEST has method performance data, such as yield, for each lab sample id and suffix and procedures used in the method.
- \* PLANCHET is an alternate lab identifier for work done for one test. It, combined with the TEST and SUFFIX, may be the best link to raw data.
- \* For QC samples, only analyses that directly QC some regular sample are shown. The Lab Control Sample, Method Blank, Duplicate, Matrix Spike and Method Summary Reports detail these relationships.
- \* The SAS (Special Analytical Services) Number is a client or lab assigned code that reflects special processing for samples, such as rapid turn around. Counts of tests done are lists by SAS number since it is likely to affect prices.

REPORT GUIDES

Page 3

SUMMARY DATA SECTION

Page 17

Lab id EBRLNE

Protocol Hanford1

Version Ver 1.0

Form DVD-RG

Version 3.06

Report date 04/15/11

**EBERLINE ANALYTICAL / RICHMOND**

SAMPLE DELIVERY GROUP K3149

SDG 7453  
 Contact N. Joseph Verville

**REPORT GUIDE**

Client Hanford  
 Contract No. S00W235A00  
 Case no SDG K3149

**DATA SHEET**

The Data Sheet Report shows all results and primary supporting information for one client sample or Method Blank. This report corresponds to both the CLP Inorganics and Organics Data Sheet.

The following notes apply to this report:

- \* TEST is a code for the method used to measure an analyte. If the TEST is empty, no data is available; the analyte was not analyzed for.
- \* The LAB SAMPLE ID and TEST uniquely identify work within the Summary Data Section of a Data Package. The Work Summary and Method Summary Reports further identify raw data that underlies this work.

The Method Summary Report for each TEST has method performance data, such as yield, for each Lab Sample ID and a list of procedures used in the method.

- \* ERRORS can be labeled TOTAL or COUNT. TOTAL implies a preparation (non-counting method) error has been added, as square root of sum of squares, to the counting error denoted by COUNT. The preparation errors, which may vary by preparation batch, are shown on the Method Summary Report.
- \* A RESULT can be 'N.R.' (Not Reported). This means the lab did this work but chooses not to report it now, possibly because it was reported at another time.
- \* When reporting a Method Blank, a RESULT can be 'N.A.' (Not Applicable). This means there is no reported client sample work in the same preparation batch as the Blank's result. This is likely to occur when the Method Blank is associated with reanalyses of selected work for a few samples in the SDG.

The following qualifiers are defined by the DVD system:

- U The RESULT is less than the MDA (Minimum Detectable Activity).

Lab id EBRLNE  
 Protocol Hanford1  
 Version Ver 1.0  
 Form DVD-RG  
 Version 3.06  
 Report date 04/15/11

EBERLINE ANALYTICAL / RICHMOND

SAMPLE DELIVERY GROUP K3149

SDG 7453  
 Contact N. Joseph Verville

GUIDE, cont.

Client Hanford  
 Contract No. S00W235A00  
 Case no SDG K3149

DATA SHEET

If the MDA is blank, the ERROR is used as the limit.

J The RESULT is less than the RDL (Required Detection Limit) and no U qualifier is assigned.

B A Method Blank associated with this sample had a result without a U flag and, after correcting for possibly different aliquots, that result is greater than or equal to the MDA for this sample.

Normally, B is not assigned if U is. When method blank subtraction is shown on this report, B flags are assigned based on the unsubtracted values while U's are assigned based on the subtracted ones. Both flags can be assigned in this case.

For each sample result, all Method Blank results in the same preparation batch are compared. The Method Summary Report documents this and other QC relationships.

L Some Lab Control Sample that QC's this sample had a low recovery. The lab can disable assignment of this qualifier.

H Similar to 'L' except the recovery was high.

P The RESULT is 'preliminary'.

X Some data necessary to compute the RESULT, ERROR or MDA was manually entered or modified.

2 There were two or more results available for this analyte. The reported result may not be the same as in the raw data.

Other qualifiers are lab defined. Definitions should be in the SDG narrative.

The following values are underlined to indicate possible problems:

\* An MDA is underlined if it is bigger than its RDL.

Lab id EBRLNE  
 Protocol Hanford1  
 Version Ver 1.0  
 Form DVD-RG  
 Version 3.06  
 Report date 04/15/11

EBERLINE ANALYTICAL / RICHMOND

SAMPLE DELIVERY GROUP K3149

SDG 7453  
Contact N. Joseph Verville

GUIDE , c o n t .

Client Hanford  
Contract No. S00W235A00  
Case no SDG K3149

D A T A S H E E T

- \* An ERROR is underlined if the 1.645 sigma counting error is bigger than both the MDA and the RESULT, implying that the MDA may not be a good estimate of the 'real' minimum detectable activity.
- \* A negative RESULT is underlined if it is less than the negative of its 2 sigma counting ERROR.
- \* When reporting a Method Blank, a RESULT is underlined if greater than its MDA. If the MDA is blank, the 2 sigma counting error is used in the comparison.

REPORT GUIDES

Page 6

SUMMARY DATA SECTION

Page 20

Lab id EBRLNE  
Protocol Hanford1  
Version Ver 1.0  
Form DVD-RG  
Version 3.06  
Report date 04/15/11

EBERLINE ANALYTICAL / RICHMOND

SAMPLE DELIVERY GROUP K3149

SDG 7453  
Contact N. Joseph Verville

REPORT GUIDE

Client Hanford  
Contract No. S00W235A00  
Case no SDG K3149

LAB CONTROL SAMPLE

The Lab Control Sample Report shows all results, recoveries and primary supporting information for one Lab Control Sample.

The following notes apply to this report:

- \* All fields in common with the Data Sheet Report have similar usage. Refer to its Report Guide for details.
- \* An amount ADDED is the lab's value for the actual amount spiked into this sample with its ERROR an estimate of the error of this amount.

An amount added is underlined if its ratio to the corresponding RDL is outside protocol specified limits.

- \* REC (Recovery) is RESULT divided by ADDED expressed as a percent.
- \* The first, computed limits for the recovery reflect:
  1. The error of RESULT, including that introduced by rounding the result prior to printing.  
  
If the limits are labeled (TOTAL), they include preparation error in the result. If labeled (COUNT), they do not.
  2. The error of ADDED.
  3. A lab specified, per analyte bias. The bias changes the center of the computed limits.
- \* The second limits are protocol defined upper and lower QC limits for the recovery.
- \* The recovery is underlined if it is outside either of these ranges.

Lab id EBRLNE  
Protocol Hanford1  
Version Ver 1.0  
Form DVD-RG  
Version 3.06  
Report date 04/15/11

EBERLINE ANALYTICAL / RICHMOND

SAMPLE DELIVERY GROUP K3149

SDG 7453  
Contact N. Joseph Verville

REPORT GUIDE

Client Hanford  
Contract No. S00W235A00  
Case no SDG K3149

DUPLICATE

The Duplicate Report shows all results, differences and primary supporting information for one Duplicate and associated Original sample.

The following notes apply to this report:

- \* All fields in common with the Data Sheet Report have similar usage. This applies both to the Duplicate and Original sample data. Refer to the Data Sheet Report Guide for details.

If the Duplicate has data for a TEST and the lab did not do this test to the Original, the Original's RESULTS are underlined.

- \* The RPD (Relative Percent Difference) is the absolute value of the difference of the RESULTS divided by their average expressed as a percent.

If both RESULTS are less than their MDAs, no RPD is computed and a '-' is printed.

For an analyte, if the lab did work for both samples but has data for only one, the MDA from the sample with data is used as the other's result in the RPD.

- \* The first, computed limit is the sum, as square root of sum of squares, of the errors of the results divided by the average result as a percent, hence the relative error of the difference rather than the error of the relative difference. The errors include those introduced by rounding the RESULTS prior to printing.

If this limit is labeled TOT, it includes the preparation error in the RESULTS. If labeled CNT, it does not.

This value reported for this limit is at most 999.

- \* The second limit for the RPD is the larger of:

1. A fixed percentage specified in the protocol.

REPORT GUIDES

Page 8

SUMMARY DATA SECTION

Page 22

Lab id EBRLNE  
Protocol Hanford1  
Version Ver 1.0  
Form DVD-RG  
Version 3.06  
Report date 04/15/11

EBERLINE ANALYTICAL / RICHMOND

SAMPLE DELIVERY GROUP K3149

SDG 7453

Contact N. Joseph Verville

GUIDE, cont.

Client Hanford

Contract No. S00W235A00

Case no SDG K3149

DUPLICATE

2. A protocol factor (typically 2) times the average MDA as a percent of the average result. This limit applies when the results are close to the MDAs.

- \* The RPD is underlined if it is greater than either limit.
- \* If specified by the lab, the second limit column is replaced by the Difference Error Ratio (DER), which is the absolute value of the difference of the results divided by the quadratic sum of their one sigma errors, the same errors as used in the first limit.

Except for differences due to rounding, the DER is the same as the RPD divided by the first RPD limit with the limit scaled to 1 sigma.

- \* The DER is underlined if it is greater than the sigma factor, typically 2 or 3, shown in the header for the first RPD limit.

REPORT GUIDES

Page 9

SUMMARY DATA SECTION

Page 23

Lab id EBRLNE

Protocol Hanford1

Version Ver 1.0

Form DVD-RG

Version 3.06

Report date 04/15/11

SDG 7453  
 Contact N. Joseph Verville

Client Hanford  
 Contract No. S00W235A00  
 Case no SDG K3149

REPORT GUIDE

MATRIX SPIKE

The Matrix Spike Report shows all results, recoveries and primary supporting information for one Matrix Spike and associated Original sample.

The following notes apply to this report:

- \* All fields in common with the Data Sheet Report have similar usage. This applies both to the Spiked and Original sample data. Refer to the Data Sheet Report Guide for details.

If the Spike has data for a TEST and the lab did not do this test to the Original, the Original's RESULTS are underlined.

- \* An amount ADDED is the lab's value for the actual amount spiked into the Spike sample with its ERROR an estimate of the error of this amount.

An amount is underlined if its ratio to the corresponding RDL is outside protocol specified limits.

- \* REC (Recovery) is the Spike RESULT minus the Original RESULT divided by ADDED expressed as a percent.

- \* The first, computed limits for the recovery reflect:

1. The errors of the two RESULTS, including those introduced by rounding them prior to printing.

If the limits are labeled (TOTAL), they include preparation error in the result. If labeled (COUNT), they do not.

2. The error of ADDED.
3. A lab specified, per analyte bias. The bias changes the center of the computed limits.

- \* The second limits are protocol defined upper and lower QC limits

Lab id EBRLNE  
 Protocol Hanford1  
 Version Ver 1.0  
 Form DVD-RG  
 Version 3.06  
 Report date 04/15/11

EBERLINE ANALYTICAL / RICHMOND

SAMPLE DELIVERY GROUP K3149

SDG 7453  
Contact N. Joseph Verville

GUIDE, cont.

Client Hanford  
Contract No. S00W235A00  
Case no SDG\_K3149

MATRIX SPIKE

for the recovery.

These limits are left blank if the Original RESULT is more than a protocol defined factor (typically 4) times ADDED. This is a way of accounting for that when the spike is small compared to the amount in the original sample, the recovery is unreliable.

\* The recovery is underlined (out of spec) if it is outside either of these ranges.

EBERLINE ANALYTICAL / RICHMOND

SAMPLE DELIVERY GROUP K3149

SDG 7453

Contact N. Joseph Verville

REPORT GUIDE

Client Hanford

Contract No. S00W235A00

Case no SDG K3149

METHOD SUMMARY

The Method Summary Report has two tables. One shows up to five results measured using one method. The other has performance data for the method. There is one report for each TEST, as used on the Data Sheet Report.

The following notes apply to this report:

- \* Each table is subdivided into sections, one for each preparation batch. A preparation batch is a group of aliquots prepared at roughly the same time in one work area of the lab using the same method.

There should be Lab Control Sample and Method Blank results in each preparation batch since this close correspondence makes the QC meaningful. Depending on lab policy, Duplicates need not occur in each batch since they QC sample dependencies such as matrix effects.

- \* The RAW TEST column shows the test code used in the raw data to identify a particular analysis if it is different than the test code in the header of the report. This occurs in special cases due to method specific details about how the lab labels work.

The Lab Sample or Planchet ID combined with the (Raw) Test Code and Suffix uniquely identify the raw data for each analysis.

- \* If a result is less than both its MDA and RDL, it is replaced by just 'U' on this report. If it is greater than or equal to the RDL but less than the MDA, the result is shown with a 'U' flag.

The J and X flags are as on the data sheet.

- \* Non-U results for Method Blanks are underlined to indicate possible contamination of other samples in the preparation batch. The Method Blank Report has supporting data.
- \* Lab Control Sample and Matrix Spike results are shown as: ok, No data, LOW or HIGH, with the last two underlined. 'No data'

REPORT GUIDES

Page 12

SUMMARY DATA SECTION

Page 26

Lab id EBRLNE

Protocol Hanford1

Version Ver 1.0

Form DVD-RG

Version 3.06

Report date 04/15/11

EBERLINE ANALYTICAL / RICHMOND

SAMPLE DELIVERY GROUP K3149

SDG 7453  
 Contact N. Joseph Verville

GUIDE, cont.

Client Hanford  
 Contract No. S00W235A00  
 Case no SDG\_K3149

METHOD SUMMARY

means no amount ADDED was specified. 'LOW' and 'HIGH' correspond to when the recovery is underlined on the Lab Control Sample or Matrix Spike Report. See these reports for supporting data.

- \* Duplicate sample results are shown as: ok, No data, or OUT, with the last two underlined. 'No data' means there was no original sample data found for this duplicate. 'OUT' corresponds to when the RPD is underlined on the Duplicate Report. See this report for supporting data.
  - \* If the MDA column is labeled 'MAX MDA', there was more than one result measured by the reported method and the MDA shown is the largest MDA. If not all these results have the same RDL, the MAX MDA reflects only those results with RDL equal to the smallest one.
- MDAs are underlined if greater than the printed RDL.
- \* Aliquots are underlined if less than the nominal value specified for the method.
  - \* Preparation factors are underlined if greater than the nominal value specified for the method.
  - \* Dilution factors are underlined if greater than the nominal value specified for the method.
  - \* Residues are underlined if outside the range specified for the method. Residues are not printed if yields are.
  - \* Yields, which may be gravimetric, radiometric or some type of recovery depending on the method, are underlined if outside the range specified for the method.
  - \* Efficiencies are underlined if outside the range specified for the method. Efficiencies are detector and geometry dependent so this test is only approximate.

Lab id EBRLNE  
 Protocol Hanford1  
 Version Ver 1.0  
 Form DVD-RG  
 Version 3.06  
 Report date 04/15/11

EBERLINE ANALYTICAL / RICHMOND

SAMPLE DELIVERY GROUP K3149

SDG 7453  
Contact N. Joseph Verville

GUIDE, cont.

Client Hanford  
Contract No. S00W235A00  
Case no SDG K3149

METHOD SUMMARY

- \* Count times are underlined if less than the nominal value specified for the method.
- \* Resolutions (as FWHM; Full Width at Half Max) are underlined if greater than the method specified limit.
- \* Tracer drifts are underlined if their absolute values are greater than the method specified limit. Tracer drifts are not printed if percent moistures are.
- \* Days Held are underlined if greater than the holding time specified in the protocol.
- \* Analysis dates are underlined if before their planchet's preparation date or, if a limit is specified, too far after it.

For some methods, ratios as percentages and error estimates for them are computed for pairs of results. A ratio column header like '1+3' means the ratio of the first result column and the third result column.

Ratios are not computed for Lab Control Sample, Method Blank or Matrix Spike results since their matrices are not necessarily similar to client samples'.

The error estimate for a ratio of results from one planchet reflects only counting errors since other errors should be correlated. For a ratio involving different planchets, if QC limits are computed based on total errors, the error for the ratio allows for the preparation errors for the planchets.

The ratio is underlined (out of spec) if the absolute value of its difference from the nominal value is greater than its error estimate. If no nominal value is specified, this test is not done.

For Gross Alpha or Gross Beta results, there may be a column showing the sum of other Alpha or Beta emitters. This sum includes all relevant

REPORT GUIDES

Page 14

SUMMARY DATA SECTION

Page 28

Lab id EBRLNE  
Protocol Hanford1  
Version Ver 1.0  
Form DVD-RG  
Version 3.06  
Report date 04/15/11

EBERLINE ANALYTICAL / RICHMOND

SAMPLE DELIVERY GROUP K3149

SDG 7453  
Contact N. Joseph Verville

GUIDE , c o n t .

Client Hanford  
Contract No. S00W235A00  
Case no SDG K3149

METHOD SUMMARY

results in the DVD database, whether reported or not. Results in the sum are weighted by a particles/decay value specified by the lab for each relevant analyte. Results less than their MDA are not included. No sums are computed for Lab Control, Method Blank or Matrix Spike samples since their various planchets may not be physically related.

If a ratio of total isotopic to Gross Alpha or Beta is shown, the error for the ratio reflects both the error in the Gross result and the sum, as square root of sum of squares, of the errors in the isotopic results.

For total elemental uranium or thorium results, there may be a column showing the total weight computed from associated isotopic results. Ignoring results less than their MDAs, this is a weighted sum of the isotopic results. The weights depend on the molecular weight and half-life of each isotope so as to convert activities (decays) to weight (atoms).

If a ratio of total computed to measured elemental uranium or thorium is shown, the error for the ratio reflects the errors in all the measurements.

REPORT GUIDES

Page 15

SUMMARY DATA SECTION

Page 29

Lab id EBRLNE  
Protocol Hanford1  
Version Ver 1.0  
Form DVD-RG  
Version 3.06  
Report date 04/15/11

CH2M Hill Plateau Remediation Company		CHAIN OF CUSTODY/SAMPLE ANALYSIS REQUEST		RC-188-012	PAGE 1 OF 1
COLLECTOR <i>Turner, Crow</i>	COMPANY CONTACT KESSNER, JH <i>K3149</i>	TELEPHONE NO. 375-4688 ( <i>7453</i> )	PROJECT COORDINATOR KESSNER, JH	PRICE CODE 7N	DATA TURNAROUND 45 Days / 45 Days
SAMPLING LOCATION C7970 (116-F-14); I-015	PROJECT DESIGNATION Water Sampling - Integrated Remedial Investigation/Feasibility Study - 100-		SAF NO. RC-188	AIR QUALITY <input type="checkbox"/>	
ICE CHEST NO. <i>CWS-001</i>	FIELD LOGBOOK NO. <i>HNF-N-585-14 pg 34</i>	ACTUAL SAMPLE DEPTH <i>47.7'</i>	COA 302513ES10	METHOD OF SHIPMENT FEDERAL EXPRESS	
SHIPPED TO Eberline Services	OFFSITE PROPERTY NO. SEE PTR	BILL OF LADING/AIR BILL NO. <i>794428847029</i>			

<b>MATRIX*</b> A=Air DL=Drum Liquids DS=Drum Solids L=Liquid O=Oil S=Soil SE=Sediment T=Tissue V=Vegetation W=Water WI=Wipe X=Other	<b>POSSIBLE SAMPLE HAZARDS/ REMARKS</b> Contains Radioactive Material at concentrations that may or may not be regulated for transportation per 49 CFR / IATA Dangerous Goods Regulations but are not releasable per DOE Order 5400.5 (1990/1993)	PRESERVATION	HNO3 to pH <2
		HOLDING TIME	6 Months
		TYPE OF CONTAINER	G/P
		NO. OF CONTAINER(S)	2
		VOLUME	1000mL
		SPECIAL HANDLING AND/OR STORAGE	SAMPLE ANALYSIS
SAMPLE NO.	MATRIX*	SAMPLE DATE	SAMPLE TIME
B28NX5	WATER	<i>2-14-11</i>	<i>1245 X</i>

CHAIN OF POSSESSION	SIGN/ PRINT NAMES
RELINQUISHED BY/REMOVED FROM <i>A. Turner ATZ</i>	RECEIVED BY/STORED IN <i>Mo 413 SS UR4</i>
DATE/TIME <i>2-14-11 1350</i>	DATE/TIME <i>2-14-11 1350</i>
RELINQUISHED BY/REMOVED FROM <i>SSU-R4</i>	RECEIVED BY/STORED IN <i>am Aquilar am Agl</i>
DATE/TIME <i>2-15-11 1100</i>	DATE/TIME <i>2-15-11 1100</i>
RELINQUISHED BY/REMOVED FROM <i>am Aquilar am Agl</i>	RECEIVED BY/STORED IN <i>FED EX</i>
DATE/TIME <i>2-15-11 1400</i>	DATE/TIME <i>02/16/11 0930</i>
RELINQUISHED BY/REMOVED FROM <i>FED EX</i>	RECEIVED BY/STORED IN <i>JF. [Signature]</i>
DATE/TIME	DATE/TIME
RELINQUISHED BY/REMOVED FROM	RECEIVED BY/STORED IN
DATE/TIME	DATE/TIME
RELINQUISHED BY/REMOVED FROM	RECEIVED BY/STORED IN
DATE/TIME	DATE/TIME

**SPECIAL INSTRUCTIONS**  
 \*\* All groundwater samples are to be filtered.

*OR.*

LABORATORY SECTION	RECEIVED BY	TITLE	DATE/TIME
FINAL SAMPLE DISPOSITION	DISPOSAL METHOD	DISPOSED BY	DATE/TIME

<b>COLLECTOR</b> Turner, Crow		<b>COMPANY CONTACT</b> KESSNER, JH K3149		<b>TELEPHONE NO.</b> 375-4688 (7453)	<b>PROJECT COORDINATOR</b> KESSNER, JH	<b>PRICE CODE</b> 7N	<b>DATA TURNAROUND</b> 45 Days / 45 Days
<b>SAMPLING LOCATION</b> C7970 (116-F-14); I-015 DUP		<b>PROJECT DESIGNATION</b> Water Sampling - Integrated Remedial Investigation/Feasibility Study - 100-			<b>SAF NO.</b> RC-188	<b>AIR QUALITY</b> <input type="checkbox"/>	
<b>ICE CHEST NO.</b> GWS-001		<b>FIELD LOGBOOK NO.</b> HNP-N-585-14 R6, 34	<b>ACTUAL SAMPLE DEPTH</b> 47.7'		<b>COA</b> 302513ES10	<b>METHOD OF SHIPMENT</b> FEDERAL EXPRESS	
<b>SHIPPED TO</b> Eberline Services		<b>OFFSITE PROPERTY NO.</b> SEE PTR			<b>BILL OF LADING/AIR BILL NO.</b> SEE PTR 7944288 47029-r		

<b>MATRIX*</b> A=Air DL=Drum Liquids DS=Drum Solids L=Liquid O=Oil S=Soil SE=Sediment T=Tissue V=Vegetation W=Water WI=Wipe X=Other	<b>POSSIBLE SAMPLE HAZARDS/ REMARKS</b> Contains Radioactive Material at concentrations that may or may not be regulated for transportation per 49 CFR / IATA Dangerous Goods Regulations but are not releasable per DOE Order 5400.5 (1990/1993)	<b>PRESERVATION</b>	HNO3 to pH <2
	<b>SPECIAL HANDLING AND/OR STORAGE</b>	<b>HOLDING TIME</b>	6 Months
		<b>TYPE OF CONTAINER</b>	G/P
		<b>NO. OF CONTAINER(S)</b>	2
		<b>VOLUME</b>	1000mL
	<b>SAMPLE ANALYSIS</b>	Strontium-89,90 - Total Sr (100 Area RIFS);	
<b>SAMPLE NO.</b>	<b>MATRIX*</b>	<b>SAMPLE DATE</b>	<b>SAMPLE TIME</b>
B28NX6	WATER	2-14-11	1245 X

CHAIN OF POSSESSION	SIGN/ PRINT NAMES
RELINQUISHED BY/REMOVED FROM A. Turner 2-14-11	RECEIVED BY/STORED IN MO 413 SS4 R4 2-14-11
RELINQUISHED BY/REMOVED FROM SS4-R4 2-15-11	RECEIVED BY/STORED IN Em Aquilar 2-15-11
RELINQUISHED BY/REMOVED FROM Em Aquilar 2-15-11	RECEIVED BY/STORED IN FEDEX
RELINQUISHED BY/REMOVED FROM FOP EX	RECEIVED BY/STORED IN JF-MATHAWMAN 02/16/11
RELINQUISHED BY/REMOVED FROM	RECEIVED BY/STORED IN
RELINQUISHED BY/REMOVED FROM	RECEIVED BY/STORED IN
RELINQUISHED BY/REMOVED FROM	RECEIVED BY/STORED IN

**SPECIAL INSTRUCTIONS**  
\*\* All groundwater samples are to be filtered.



<b>LABORATORY SECTION</b>	<b>RECEIVED BY</b>	<b>TITLE</b>	<b>DATE/TIME</b>
<b>FINAL SAMPLE DISPOSITION</b>	<b>DISPOSAL METHOD</b>	<b>DISPOSED BY</b>	<b>DATE/TIME</b>

<b>COLLECTOR</b> <i>Kause, Romo, Kause</i>		<b>COMPANY CONTACT</b> ANNA RADLOFF <i>K3149</i>	<b>TELEPHONE NO.</b> 376-4554 ( <i>7453</i> )	<b>PROJECT COORDINATOR</b> KESSNER, JH	<b>PRICE CODE</b> 7N	<b>DATA TURNAROUND</b> 45 Days / 45 Days
<b>SAMPLING LOCATION</b> C7971 (118-F-1); I-013		<b>PROJECT DESIGNATION</b> Water Sampling - Integrated Remedial Investigation/Feasibility Study - 100-		<b>SAF NO.</b> RC-188	<b>AIR QUALITY</b> <input type="checkbox"/>	
<b>ICE CHEST NO.</b> <i>GWS-001</i>		<b>FIELD LOGBOOK NO.</b> <i>p. 67</i> <i>HNF-IV-585-17</i>	<b>ACTUAL SAMPLE DEPTH</b> <i>28.1</i> ft	<b>COA</b> 302513ES10	<b>METHOD OF SHIPMENT</b> FEDERAL EXPRESS	
<b>SHIPPED TO</b> Eberline Services		<b>OFFSITE PROPERTY NO.</b> SEE PTR		<b>BILL OF LADING/AIR BILL NO.</b> SEE PTR <i>754428847029</i>		

<b>MATRIX*</b> A=Air DL=Drum Liquids DS=Drum Solids L=Liquid O=Oil S=Soil SE=Sediment T=Tissue V=Vegetation W=Water WI=Wipe X=Other	<b>POSSIBLE SAMPLE HAZARDS/ REMARKS</b> Contains Radioactive Material at concentrations that may or may not be regulated for transportation per 49 CFR / IATA Dangerous Goods Regulations but are not releasable per DOE Order 5400.5 (1990/1993)	<b>PRESERVATION</b>	HNO3 to pH <2
		<b>HOLDING TIME</b>	6 Months
		<b>TYPE OF CONTAINER</b>	G/P
		<b>NO. OF CONTAINER(S)</b>	2
		<b>VOLUME</b>	1000mL
<b>SPECIAL HANDLING AND/OR STORAGE</b> <del>RADIOACTIVE TIE TO: B28VV9</del> <i>R 12/27/2010</i>		<b>SAMPLE ANALYSIS</b>	Strontium-89,90 -- Total Sr (100 Area RIFS);
<b>SAMPLE NO.</b>	<b>MATRIX*</b>	<b>SAMPLE DATE</b>	<b>SAMPLE TIME</b>
B28VV9	WATER	<i>2-15-11</i>	<i>0911</i> ✓

CHAIN OF POSSESSION	SIGN/ PRINT NAMES	SPECIAL INSTRUCTIONS
RELINQUISHED BY/REMOVED FROM	DATE/TIME	RECEIVED BY/STORED IN
<i>Beata Kause</i>	<i>2-15-11 1000</i>	<i>MO 413 SSU R.4</i>
RELINQUISHED BY/REMOVED FROM	DATE/TIME	RECEIVED BY/STORED IN
<i>SSU-R4</i>	<i>2-15-11 1100</i>	<i>Am Aguilar cm lgh</i>
RELINQUISHED BY/REMOVED FROM	DATE/TIME	RECEIVED BY/STORED IN
<i>Am Aguilar cm lgh</i>	<i>2-15-11 1400</i>	<i>FED EX</i>
RELINQUISHED BY/REMOVED FROM	DATE/TIME	RECEIVED BY/STORED IN
<i>Fed Ex</i>		<i>MF WATAKAWA</i>
RELINQUISHED BY/REMOVED FROM	DATE/TIME	RECEIVED BY/STORED IN
		<i>02/16/11 0930</i>
RELINQUISHED BY/REMOVED FROM	DATE/TIME	RECEIVED BY/STORED IN
RELINQUISHED BY/REMOVED FROM	DATE/TIME	RECEIVED BY/STORED IN

 ORIGINAL

<b>LABORATORY SECTION</b>	<b>RECEIVED BY</b>	<b>TITLE</b>	<b>DATE/TIME</b>
<b>FINAL SAMPLE DISPOSITION</b>	<b>DISPOSAL METHOD</b>	<b>DISPOSED BY</b>	<b>DATE/TIME</b>

CH2M Hill Plateau Remediation Company		CHAIN OF CUSTODY/SAMPLE ANALYSIS REQUEST		RC-188-020	PAGE 1 OF 1
COLLECTOR <i>Kauer, Ramo, Kauer</i>		COMPANY CONTACT ANNA RADLOFF <i>K3149</i>	TELEPHONE NO. 376-4554 ( <i>7453</i> )	PROJECT COORDINATOR KESSNER, JH	PRICE CODE 7N
SAMPLING LOCATION C7971 (118-F-1); I-013 DUP		PROJECT DESIGNATION Water Sampling - Integrated Remedial Investigation/Feasibility Study - 100		SAF NO. RC-188	DATA TURNAROUND 45 Days / 45 Days
ICE CHEST NO. <i>GWS-001</i>		FIELD LOGBOOK NO. <i>p. 67</i> <i>HNFN-535-12</i>	ACTUAL SAMPLE DEPTH <i>28.1</i> FT	COA 302513ES10	METHOD OF SHIPMENT FEDERAL EXPRESS
SHIPPED TO Eberline Services		OFFSITE PROPERTY NO. SEE PTR	BILL OF LADING/AIR BILL NO. SEE PTR <i>794428847029</i>		

MATRIX* A=Air DL=Drum Liquids DS=Drum Solids L=Liquid O=Oil S=Soil SE=Sediment T=Tissue V=Vegetation W=Water WI=Wipe X=Other	<b>POSSIBLE SAMPLE HAZARDS/ REMARKS</b> Contains Radioactive Material at concentrations that may or may not be regulated for transportation per 49 CFR / IATA Dangerous Goods Regulations but are not releasable per DOE Order 5400.5 (1990/1993)	PRESERVATION	HNO3 to pH <2
		HOLDING TIME	6 Months
		TYPE OF CONTAINER	G/P
		NO. OF CONTAINER(S)	2
		VOLUME	1000mL
<b>SPECIAL HANDLING AND/OR STORAGE</b>		SAMPLE ANALYSIS	Strontium-89,90 -- Total Sr (100 Area RIFS);
SAMPLE NO.	MATRIX*	SAMPLE DATE	SAMPLE TIME
B28VW2	WATER	<i>2-15-11</i>	<i>0911</i> ✓

CHAIN OF POSSESSION	SIGN/ PRINT NAMES	SPECIAL INSTRUCTIONS
RELINQUISHED BY/REMOVED FROM	DATE/TIME	RECEIVED BY/STORED IN
<i>Benjamin Kauer</i>	<i>2-15-11 1000</i>	<i>MO-413 JSU R-4</i>
RELINQUISHED BY/REMOVED FROM	DATE/TIME	RECEIVED BY/STORED IN
<i>SSU-R4</i>	<i>2-15-11 1100</i>	<i>cm Aquilar cm Agh</i>
RELINQUISHED BY/REMOVED FROM	DATE/TIME	RECEIVED BY/STORED IN
<i>cm Aquilar cm Agh</i>	<i>2-15-11 1400</i>	<i>FED EX</i>
RELINQUISHED BY/REMOVED FROM	DATE/TIME	RECEIVED BY/STORED IN
<i>FED EX</i>		<i>IF WEATHERMAN</i>
RELINQUISHED BY/REMOVED FROM	DATE/TIME	RECEIVED BY/STORED IN
		<i>02/16/11 0930</i>
RELINQUISHED BY/REMOVED FROM	DATE/TIME	RECEIVED BY/STORED IN
RELINQUISHED BY/REMOVED FROM	DATE/TIME	RECEIVED BY/STORED IN

\*\* All groundwater samples are to be filtered.

ORIGINAL

LABORATORY SECTION	RECEIVED BY	TITLE	DATE/TIME
FINAL SAMPLE DISPOSITION	DISPOSAL METHOD	DISPOSED BY	DATE/TIME



# RICHMOND, CA LABORATORY

## SAMPLE RECEIPT CHECKLIST

Client: WES. HAF  
CHPRE 2/14 City RICHLAND State WA  
 Date/Time received 02/16/11 <sup>0930</sup> CoC No. RC-188-012, 013, 017, 020  
 Container I.D. No. GWS-001 Requested TAT (Days) 45 P.O. Received Yes [ ] No [ ]

### INSPECTION

1. Custody seals on shipping container intact? Yes  No [ ] N/A [ ]
2. Custody seals on shipping container dated & signed? Yes  No [ ] N/A [ ]
3. Custody seals on sample containers intact? Yes  No [ ] N/A [ ]
4. Custody seals on sample containers dated & signed? Yes  No [ ] N/A [ ]
5. Packing material is: Wet [ ] Dry
6. Number of samples in shipping container: 4 Sample Matrix W
7. Number of containers per sample: 2 (Or see CoC \_\_\_\_\_)
8. Samples are in correct container Yes  No [ ]
9. Paperwork agrees with samples? Yes  No [ ]
10. Samples have: Tape [ ] Hazard labels [ ] Rad labels [ ] Appropriate sample labels
11. Samples are: In good condition  Leaking [ ] Broken Container [ ] Missing [ ]
12. Samples are: Preserved  Not preserved [ ] pH <2 Preservative HNO3
13. Describe any anomalies:  
 \_\_\_\_\_  
 \_\_\_\_\_
14. Was P.M. notified of any anomalies? Yes [ ] No [ ] Date \_\_\_\_\_
15. Inspected by [Signature] Date: 02/16/11 Time: 10:50

Customer Sample No.	Beta/Gamma cpm	Ion Chamber mR/hr	Wipe	Customer Sample No.	Beta/Gamma cpm	Ion Chamber mR/hr	wipe
ALL SAMPLES	<60						

Ion Chamber Ser. No. \_\_\_\_\_ Calibration date \_\_\_\_\_  
 Alpha Meter Ser. No. \_\_\_\_\_ Calibration date \_\_\_\_\_  
 Beta/Gamma Meter Ser. No. 100982 Calibration date 29 SEP 11