



# EBERLINE SERVICES

0065159

January 28, 2005

RECEIVED  
MAY 18 2005  
EDMC

Mr. Steve Trent  
Fluor Hanford Inc.  
825 Jadwin Avenue  
Richland, WA 99352

Reference: P.O. #630  
Eberline Services R4-11-062-7145, SDG H2812

Dear Mr. Trent:

Enclosed is the data report for one water sample designated under SAF No. F03-007 received at Eberline Services on November 4, 2004. The sample was analyzed according to the accompanying chain-of-custody document.

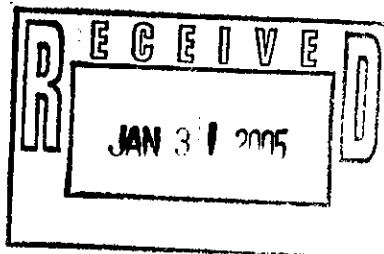
Please call if you have any questions concerning this report.

Sincerely,

Melissa C. Mannion  
Senior Program Manager

MCM/njv

Enclosure: Data Package



00000001

Analytical Services  
2030 Wright Avenue  
P.O. Box 4040  
Richmond, California 94804-0040  
(510) 235-2633 Fax (510) 235-0438  
Toll Free (800) 841-5487  
[www.eberlineservices.com](http://www.eberlineservices.com)

## 1.0 GENERAL

Fluor Hanford Inc. (FH) Sample Delivery Group H2812 was composed of one water sample designated under SAF No. F03-007 with Project Designations of: 200-PW-2/200-PW-4 OU – QC Sampling.

The sample was received as stated on the Chain-of-Custody document. Any discrepancies are noted on the Eberline Services Sample Receipt Checklist.

## 2.0 ANALYSIS NOTES

### 2.1 Carbon-14 Analyses

No problems were encountered during the course of the analyses.

### 2.3 Nickel-63 Analyses

No problems were encountered during the course of the analyses.

### 2.3 Iodine-129 Analyses

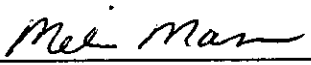
No problems were encountered during the course of the analyses.

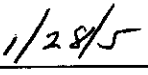
### 2.4 Isotopic Thorium Analyses

No problems were encountered during the course of the analyses.

## Case Narrative Certification Statement

"I certify that this data package is in compliance with the SOW, both technically and for completeness, for other than the conditions detailed above. Release of the data obtained in this hard copy data package has been authorized by the Laboratory Manager or a designee, as verified by the following signature."

  
\_\_\_\_\_  
Melissa C. Mannion  
Senior Program Manager

  
\_\_\_\_\_  
Date

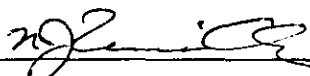
EBRLINE SERVICES / RICHMOND  
SAMPLE DELIVERY GROUP H2812


SDG 7145  
Contact Melissa C. Mannion

Client Hanford  
Contract No. 630  
Case no SDG\_H2812

S U M M A R Y   D A T A   S E C T I O N

T A B L E   O F   C O N T E N T S				
About this section	.	.	.	1
Sample Summaries	.	.	.	3
Prep Batch Summary	.	.	.	5
Work Summary	.	.	.	6
Method Blanks	.	.	.	7
Lab Control Samples	.	.	.	8
Duplicates	.	.	.	9
Matrix Spikes	.	.	.	10
Data Sheets	.	.	.	11
Method Summaries	.	.	.	12
Report Guides	.	.	.	16
End of Section	.	.	.	30

  
Prepared by

  
Reviewed by

Lab id EBRLNE  
Protocol Hanford  
Version Ver 1.0  
Form DVD-TOC  
Version 3.06  
Report date 01/26/05

00000003

# EBERLINE SERVICES / RICHMOND

SAMPLE DELIVERY GROUP H2812

SDG 7145  
Contact Melissa C. Mannion

## REPORT GUIDE

Client Hanford  
Contract No. 630  
Case no SDG\_H2812

### ABOUT THE DATA SUMMARY SECTION

The Data Summary Section of a Data Package has all data, in several useful orders, necessary for first level, routine review of the data package for a Sample Delivery Group (SDG). This section follows the Data Package Narrative, which has an overview of the data package and a discussion of special problems. It is followed by the Raw Data Section, which has full details.

The Data Summary Section has several groups of reports:

#### SAMPLE SUMMARIES

The Sample and QC Summary Reports show all samples, including QC samples, reported in one SDG. These reports cross-reference client and lab sample identifiers.

#### PREPARATION BATCH SUMMARY

The Preparation Batch Summary Report shows all preparation batches (lab groupings reflecting how work was organized) relevant to the reported SDG with information necessary to check the completeness and consistency of the SDG.

#### WORK SUMMARY

The Work Summary Report shows all samples and work done on them relevant to the reported SDG.

#### METHOD BLANKS

The Method Blank Reports, one for each Method Blank relevant to the SDG, show all results and primary supporting information for the blanks.

#### LAB CONTROL SAMPLES

The Lab Control Sample Reports, one for each Lab Control Sample relevant to the SDG, show all results, recoveries and primary supporting information for these QC samples.

#### REPORT GUIDES

Page 1

#### SUMMARY DATA SECTION

Page 1

Lab id EBRLNE  
Protocol Hanford  
Version Ver 1.0  
Form DVD-RG  
Version 3.06  
Report date 01/26/05

00000004

# EBERLINE SERVICES / RICHMOND

SAMPLE DELIVERY GROUP H2812

SDG 7145  
Contact Melissa C. Mannion

GUIDE, cont.

Client Hanford  
Contract No. 630  
Case no SDG H2812

## ABOUT THE DATA SUMMARY SECTION

### DUPLICATES

The Duplicate Reports, one for each Duplicate and Original sample pair relevant to the SDG, show all results, differences and primary supporting information for these QC samples.

### MATRIX SPIKES

The Matrix Spike Reports, one for each Spiked and Original sample pair relevant to the SDG, show all results, recoveries and primary supporting information for these QC samples.

### DATA SHEETS

The Data Sheet Reports, one for each client sample in the SDG, show all results and primary supporting information for these samples.

### METHOD SUMMARIES

The Method Summary Reports, one for each test used in the SDG, show all results, QC and method performance data for one analyte on one or two pages. (A test is a short code for the method used to do certain work to the client's specification.)

### REPORT GUIDES

The Report Guides, one for each of the above groups of reports, have documentation on how to read the associated reports.

### REPORT GUIDES

Page 2

### SUMMARY DATA SECTION

Page 2

Lab id EBRLNE  
Protocol Hanford  
Version Ver 1.0  
Form DVD-RG  
Version 3.06  
Report date 01/26/05

00000005

EBERLINE SERVICES/RICHMOND

SAMPLE DELIVERY GROUP H2812

SDG 7145

Contact Melissa C. Mannion

SAMPLE SUMMARY

Client Hanford

Contract No. 630

Case no SDG H2812

CLIENT SAMPLE ID	LOCATION	MATRIX	LEVEL	LAB SAMPLE ID	SAF NO	CHAIN OF CUSTODY	COLLECTED
B1B569	200-PW-2/216-S-7	WATER		R411062-01	F03-007	F03-007-020	10/29/04 07:00
Method Blank		WATER		R411062-03	F03-007		
Lab Control Sample		WATER		R411062-02	F03-007		
Duplicate (R411062-01)	200-PW-2/216-S-7	WATER		R411062-04	F03-007		10/29/04 07:00
Spike (R411062-01)	200-PW-2/216-S-7	WATER		R411062-05	F03-007		10/29/04 07:00

SAMPLE SUMMARY

Page 1

SUMMARY DATA SECTION

Page 3

Lab id EBRLNE

Protocol Hanford

Version Ver 1.0

Form DVD-CS

Version 3.06

Report date 01/26/05

00000006

# EBERLINE SERVICES/RICHMOND

SAMPLE DELIVERY GROUP H2812

## QC SUMMARY

SDG 7145

Contact Melissa C. Mannion

Client Hanford

Contract No. 630

Case no SDG H2812

QC BATCH	CHAIN OF CUSTODY	CLIENT SAMPLE ID	MATRIX	% SOLIDS	SAMPLE AMOUNT	BASIS AMOUNT	DAYS SINCE RECEIVED	LAB COLL SAMPLE ID	DEPARTMENT SAMPLE ID
7145	F03-007-020	B1B569	WATER		6.25 L		11/04/04 6	R411062-01	7145-001
		Method Blank	WATER					R411062-03	7145-003
		Lab Control Sample	WATER					R411062-02	7145-002
		Duplicate (R411062-01)	WATER		6.25 L		11/04/04 6	R411062-04	7145-004
		Spike (R411062-01)	WATER		6.25 L		11/04/04 6	R411062-05	7145-005

QC SUMMARY

Page 1

SUMMARY DATA SECTION

Page 4

Lab id EBRLNE

Protocol Hanford

Version Ver 1.0

Form DVD-QS

Version 3.06

Report date 01/26/05

00000007

# EBERLINE SERVICES/RICHMOND

SAMPLE DELIVERY GROUP H2812

SDG 7145

Contact Melissa C. Mannion

## PREP BATCH SUMMARY

Client Hanford

Contract No. 630

Case no SDG H2812

TEST	MATRIX	METHOD	PREPARATION ERROR		PLANCHETS ANALYZED		PLANCHETS ANALYZED		PLANCHETS ANALYZED		QUALITY	
			BATCH	2σ %	CLIENT	MORE	RE	BLANK	LCS	DUP/ORIG		MS/ORIG
Alpha Spectroscopy												
TH	WATER	Thorium, Isotopic in Water	7104-167	5.0	1			1	1	1/1		
Gamma Spectroscopy												
I	WATER	Iodine 129 in Water	7104-167	5.0	1			1	1	1/1		
Liquid Scintillation Counting												
C	WATER	Carbon 14 in Water	7104-167	10.0	1			1	1	1/1	1/1	X
NI_L	WATER	Nickel-63 in Liquid	7104-167	10.0	1			1	1	1/1		

Duplicates and Matrix Spikes are those with original (Client) sample in this Sample Delivery Group.

Blank and LCS planchets are those in the same preparation batch as some Client, Duplicate or Spike sample.

PREP BATCH SUMMARY

Page 1

SUMMARY DATA SECTION

Page 5

Lab id EBRLNE

Protocol Hanford

Version Ver 1.0

Form DVD-PBS

Version 3.06

Report date 01/26/05

00000008



# EBERLINE SERVICES/RICHMOND

SAMPLE DELIVERY GROUP H2812

SDG 7145

Contact Melissa C. Mannion

## WORK SUMMARY

Client Hanford

Contract No. 630

Case no SDG H2812

CLIENT SAMPLE ID	LAB SAMPLE ID									
LOCATION	MATRIX	COLLECTED		TEST	SUF-					
CUSTODY	SAF No	RECEIVED	PLANCHET		FIX	ANALYZED	REVIEWED	BY	METHOD	
B18569		R411062-01	7145-001	C		12/18/04	01/24/05	MWT	Carbon 14 in Water	
200-PW-2/216-S-7	WATER	10/29/04	7145-001	I		12/07/04	12/10/04	MWT	Iodine 129 in Water	
F03-007-020	F03-007	11/04/04	7145-001	NI_L		12/10/04	12/17/05	MWT	Nickel-63 in Liquid	
			7145-001	TH		12/08/04	12/10/04	MWT	Thorium, Isotopic in Water	
Method Blank		R411062-03	7145-003	C		12/18/04	01/24/05	MWT	Carbon 14 in Water	
	WATER		7145-003	I		12/08/04	12/10/04	MWT	Iodine 129 in Water	
	F03-007		7145-003	NI_L		12/10/04	12/17/05	MWT	Nickel-63 in Liquid	
			7145-003	TH		12/08/04	12/10/04	MWT	Thorium, Isotopic in Water	
Lab Control Sample		R411062-02	7145-002	C		12/18/04	01/24/05	MWT	Carbon 14 in Water	
	WATER		7145-002	I		12/08/04	12/10/04	MWT	Iodine 129 in Water	
	F03-007		7145-002	NI_L		12/10/04	12/17/05	MWT	Nickel-63 in Liquid	
			7145-002	TH		12/08/04	12/10/04	MWT	Thorium, Isotopic in Water	
Duplicate (R411062-01)		R411062-04	7145-004	C		12/18/04	01/24/05	MWT	Carbon 14 in Water	
200-PW-2/216-S-7	WATER	10/29/04	7145-004	I		12/10/04	12/10/04	MWT	Iodine 129 in Water	
	F03-007	11/04/04	7145-004	NI_L		12/10/04	12/17/05	MWT	Nickel-63 in Liquid	
			7145-004	TH		12/09/04	12/10/04	MWT	Thorium, Isotopic in Water	
Spike (R411062-01)		R411062-05	7145-005	C		12/19/04	01/24/05	MWT	Carbon 14 in Water	
200-PW-2/216-S-7	WATER	10/29/04								
	F03-007	11/04/04								

COUNTS OF TESTS BY SAMPLE TYPE										
TEST	SAF No	METHOD	REFERENCE	CLIENT	MORE	RE	BLANK	LCS	DUP SPIKE	TOTAL
C	F03-007	Carbon 14 in Water	C14_CHEM_LSC	1			1	1	1	5
I	F03-007	Iodine 129 in Water	I129_SEP_LEPS_GS	1			1	1	1	4
NI_L	F03-007	Nickel-63 in Liquid	NI63_LSC	1			1	1	1	4
TH	F03-007	Thorium, Isotopic in Water	THISO_IE_PLATE_AEA	1			1	1	1	4
TOTALS				4			4	4	4	17

WORK SUMMARY

Page 1

SUMMARY DATA SECTION

Page 6

Lab id EBRLNE

Protocol Hanford

Version Ver 1.0

Form DVD-CWS

Version 3.06

Report date 01/26/05

000000009

EBERLINE SERVICES / RICHMOND  
SAMPLE DELIVERY GROUP H2812

R411062-03

Method Blank

METHOD BLANK

SDG <u>7145</u>	Client/Case no <u>Hanford</u>	SDG <u>H2812</u>
Contact <u>Melissa C. Mannion</u>	Contract No. <u>630</u>	
Lab sample id <u>R411062-03</u>	Client sample id <u>Method Blank</u>	
Dept sample id <u>7145-003</u>	Material/Matrix <u>WATER</u>	
	SAF No <u>F03-007</u>	

ANALYTE	CAS NO	RESULT pCi/L	2σ ERR (COUNT)	MDA pCi/L	RDL pCi/L	QUALI- FIERS	TEST
Carbon 14	14762-75-5	-18.4	21	36	200	U	C
Nickel 63	13981-37-8	-0.931	1.6	2.8	15	U	NI_L
Thorium 228	14274-82-9	0.012	0.023	0.032		U	TH
Thorium 230	14269-63-7	-0.006	0.052	0.11	1.0	U	TH
Thorium 232	TH-232	-0.003	0.017	0.036	1.0	U	TH
Iodine 129	15046-84-1	-1.17	1.4	3.1	5.0	U	I

200-PW-2/200-PW-4 OU - QC Sampling

QC-BLANK 49895
----------------

Lab id <u>EBRLNE</u>
Protocol <u>Hanford</u>
Version <u>Ver 1.0</u>
Form <u>DVD-DS</u>
Version <u>3.06</u>
Report date <u>01/26/05</u>

00000010

**EBERLINE SERVICES/RICHMOND**

SAMPLE DELIVERY GROUP H2812

R411062-02

Lab Control Sample

**LAB CONTROL SAMPLE**

SDG <u>7145</u> Contact <u>Melissa C. Mannion</u>	Client/Case no <u>Hanford</u> SDG <u>H2812</u> Contract <u>No. 630</u>
Lab sample id <u>R411062-02</u> Dept sample id <u>7145-002</u>	Client sample id <u>Lab Control Sample</u> Material/Matrix <u>WATER</u> SAF No <u>F03-007</u>

ANALYTE	RESULT pCi/L	2σ ERR (COUNT)	MDA pCi/L	RDL pCi/L	QUALI- FIERS	TEST	ADDED pCi/L	2σ ERR pCi/L	REC %	3σ LMTS (TOTAL)	PROTOCOL LIMITS
Carbon 14	9380	98	38	200		C	9570	380	98	84-116	80-120
Nickel 63	261	6.1	2.8	15		NI_L	272	11	96	84-116	80-120
Thorium 230	22.4	0.88	0.10	1.0		TH	23.2	0.93	97	89-111	80-120
Iodine 129	535	6.3	<u>6.9</u>	5.0		I	508	20	105	90-110	80-120

200-PW-2/200-PW-4 OU - QC Sampling

QC-LCS 49894

Lab id <u>EBRLNE</u>
Protocol <u>Hanford</u>
Version <u>Ver 1.0</u>
Form <u>DVD-LCS</u>
Version <u>3.06</u>
Report date <u>01/26/05</u>

00000001 1

**EBERLINE SERVICES/RICHMOND**

SAMPLE DELIVERY GROUP H2812

R411062-04

B18569

**DUPLICATE**

SDG <u>7145</u>		Client/Case no <u>Hanford</u> SDG <u>H2812</u>	
Contact <u>Melissa C. Mannion</u>		Contract <u>No. 630</u>	
<b>DUPLICATE</b>		<b>ORIGINAL</b>	
Lab sample id <u>R411062-04</u>	Lab sample id <u>R411062-01</u>	Client sample id <u>B18569</u>	
Dept sample id <u>7145-004</u>	Dept sample id <u>7145-001</u>	Location/Matrix <u>200-PW-2/216-S-7</u> <u>WATER</u>	
	Received <u>11/04/04</u>	Collected/Volume <u>10/29/04 07:00</u> <u>6.25 L</u>	
		Custody/SAF No <u>F03-007-020</u> <u>F03-007</u>	

ANALYTE	DUPLICATE pCi/L	2σ ERR (COUNT)	MDA pCi/L	RDL pCi/L	QUALI- FIERS	TEST	ORIGINAL pCi/L	2σ ERR (COUNT)	MDA pCi/L	QUALI- FIERS	RPD %	3σ PROT TOT LIMIT
Carbon 14	1.75	21	36	200	U	C	-10.1	22	37	U	-	
Nickel 63	-0.210	1.7	2.9	15	U	NI_L	-2.02	1.5	2.8	U	-	
Thorium 228	0.007	0.027	0.048		U	TH	-0.008	0.017	0.031	U	-	
Thorium 230	-0.020	0.054	0.11	1.0	U	TH	-0.003	0.050	0.10	U	-	
Thorium 232	-0.003	0.013	0.026	1.0	U	TH	-0.003	0.017	0.034	U	-	
Iodine 129	<u>-2.32</u>	2.3	5.0	5.0	U	I	-1.57	1.9	4.4	U	-	

200-PW-2/200-PW-4 OU - QC Sampling

QC-DUP#1 49896

DUPLICATES

Page 1

SUMMARY DATA SECTION

Page 9

Lab id <u>EBRLNE</u>
Protocol <u>Hanford</u>
Version <u>Ver 1.0</u>
Form <u>DVD-DUP</u>
Version <u>3.06</u>
Report date <u>01/26/05</u>

00000012

**EBERLINE SERVICES/RICHMOND**

SAMPLE DELIVERY GROUP H2812

R411062-05

B18569

**MATRIX SPIKE**

SDG <u>7145</u> Contact <u>Melissa C. Mannion</u> MATRIX SPIKE Lab sample id <u>R411062-05</u> Dept sample id <u>7145-005</u>	ORIGINAL Lab sample id <u>R411062-01</u> Dept sample id <u>7145-001</u> Received <u>11/04/04</u>	Client/Case no <u>Hanford</u> SDG <u>H2812</u> Contract No. <u>630</u> Client sample id <u>B18569</u> Location/Matrix <u>200-PW-2/216-S-7</u> <u>WATER</u> Collected/Volume <u>10/29/04 07:00</u> <u>6.25 L</u> Custody/SAF No <u>F03-007-020</u> <u>F03-007</u>
---	---	---

ANALYTE	SPIKE pCi/L	2σ ERR (COUNT)	MDA pCi/L	RDL pCi/L	QUALI- FIERS TEST	ADDED pCi/L	2σ ERR pCi/L	ORIGINAL pCi/L	2σ ERR (COUNT)	REC 3σ % (TOTAL)	LMTS LIMITS	PROTOCOL
Carbon 14	27900	280	79	200	X C	28700	1100	-10.1	22	97	84-116	60-140

200-PW-2/200-PW-4 OU - QC Sampling

QC-MS#1 49897

MATRIX SPIKES

Page 1

SUMMARY DATA SECTION

Page 10

Lab id <u>EBRLNE</u>
Protocol <u>Hanford</u>
Version <u>Ver 1.0</u>
Form <u>DVD-MS</u>
Version <u>3.06</u>
Report date <u>01/26/05</u>

00000013

EBERLINE SERVICES / RICHMOND  
SAMPLE DELIVERY GROUP H2812

R411062-01

B1B569

DATA SHEET

SDG <u>7145</u>	Client/Case no <u>Hanford</u>	SDG <u>H2812</u>
Contact <u>Melissa C. Mannion</u>	Contract No. <u>630</u>	
Lab sample id <u>R411062-01</u>	Client sample id <u>B1B569</u>	
Dept sample id <u>7145-001</u>	Location/Matrix <u>200-PW-2/216-S-7</u>	<u>WATER</u>
Received <u>11/04/04</u>	Collected/Volume <u>10/29/04 07:00</u>	<u>6.25 L</u>
	Custody/SAF No <u>F03-007-020</u>	<u>F03-007</u>

ANALYTE	CAS NO	RESULT pCi/L	2σ ERR (COUNT)	MDA pCi/L	RDL pCi/L	QUALI- FIERS	TEST
Carbon 14	14762-75-5	-10.1	22	37	200	U	C
Nickel 63	13981-37-8	-2.02	1.5	2.8	15	U	NI_L
Thorium 228	14274-82-9	-0.008	0.017	0.031		U	TH
Thorium 230	14269-63-7	-0.003	0.050	0.10	1.0	U	TH
Thorium 232	TH-232	-0.003	0.017	0.034	1.0	U	TH
Iodine 129	15046-84-1	-1.57	1.9	4.4	5.0	U	I

200-PW-2/200-PW-4 OU - QC Sampling

DATA SHEETS

Page 1

SUMMARY DATA SECTION

Page 11

Lab id <u>EBRLNE</u>
Protocol <u>Hanford</u>
Version <u>Ver 1.0</u>
Form <u>DVD-DS</u>
Version <u>3.06</u>
Report date <u>01/26/05</u>

00000014

# EBERLINE SERVICES/RICHMOND

SAMPLE DELIVERY GROUP H2812

Test TH Matrix WATER

SDG 7145

Contact Melissa C. Mannion

## METHOD SUMMARY

THORIUM, ISOTOPIC IN WATER

ALPHA SPECTROSCOPY

Client Hanford

Contract No. 630

Contract SDG H2812

## RESULTS

CLIENT SAMPLE ID	LAB SAMPLE ID	RAW TEST FIX	SUF- PLANCHET	Thorium 230
------------------	------------------	-----------------	------------------	-------------

Preparation batch 7104-167

B1B569	R411062-01		7145-001	U
BLK (QC ID=49895)	R411062-03		7145-003	U
LCS (QC ID=49894)	R411062-02		7145-002	ok
Duplicate (R411062-01)	R411062-04		7145-004	- U

Nominal values and limits from method RDLs (pCi/L) 1.0  
200-PW-2/200-PW-4 OU - QC Sampling

## METHOD PERFORMANCE

CLIENT SAMPLE ID	LAB SAMPLE ID	RAW TEST FIX	SUF- pCi/L	MAX MDA L	ALIQ FAC	PREP TION	DILU- %	YIELD %	EFF min	COUNT keV	FWHM keV	DRIFT HELD	DAYS PREPARED	ANAL- YZED	DETECTOR
------------------	------------------	-----------------	---------------	--------------	-------------	--------------	------------	------------	------------	--------------	-------------	---------------	------------------	---------------	----------

Preparation batch 7104-167 2σ prep error 5.0 % Reference Lab Notebook 7104 pg. 167

B1B569	R411062-01		0.10	0.500			85	1121				40	12/08/04	12/08	SS-060
BLK (QC ID=49895)	R411062-03		0.11	0.500			82	1122					12/08/04	12/08	SS-062
LCS (QC ID=49894)	R411062-02		0.10	0.500			84	1121					12/08/04	12/08	SS-061
Duplicate (R411062-01) (QC ID=49896)	R411062-04		0.11	0.500			81	973				41	12/08/04	12/09	SS-031

Nominal values and limits from method 1.0 0.500 20-110 150 100 180

PROCEDURES	REFERENCE	THISO_IE_PLATE_AEA
CP-900		Thorium in Water and Dissolved Solid Samples by Extraction Chromatography, rev 1
CP-008		Heavy Element Electroplating, rev 9

AVERAGES ± 2 SD	MDA	0.10 ± 0.012
FOR 4 SAMPLES	YIELD	83 ± 4

## METHOD SUMMARIES

Page 1

## SUMMARY DATA SECTION

Page 12

Lab id	EBRLNE
Protocol	Hanford
Version	Ver 1.0
Form	DVD-CMS
Version	3.06
Report date	01/26/05

00000015

# EBERLINE SERVICES/RICHMOND

SAMPLE DELIVERY GROUP H2812

Test I Matrix WATER

SDG 7145

Contact Melissa C. Mannion

## METHOD SUMMARY

IODINE 129 IN WATER

GAMMA SPECTROSCOPY

Client Hanford

Contract No. 630

Contract SDG H2812

## RESULTS

CLIENT SAMPLE ID	LAB SAMPLE ID	RAW TEST FIX	SUF- PLANCHET	Iodine 129
------------------	------------------	-----------------	------------------	------------

Preparation batch 7104-167

B1B569	R411062-01	7145-001	U
BLK (QC ID=49895)	R411062-03	7145-003	U
LCS (QC ID=49894)	R411062-02	7145-002	ok
Duplicate (R411062-01)	R411062-04	7145-004	- U

Nominal values and limits from method RDLs (pCi/L) 5.0

200-PW-2/200-PW-4 OU - QC Sampling

## METHOD PERFORMANCE

CLIENT SAMPLE ID	LAB SAMPLE ID	RAW TEST FIX	SUF- pCi/L	MDA pCi/L	ALIQ L	PREP FAC	DILU- TION	YIELD %	EFF %	COUNT min	FWHM keV	DRIFT KeV	DAYS HELD	ANAL- PREPARED	YZED	DETECTOR
------------------	------------------	-----------------	---------------	--------------	-----------	-------------	---------------	------------	----------	--------------	-------------	--------------	--------------	-------------------	------	----------

Preparation batch 7104-167 2σ prep error 5.0 % Reference Lab Notebook 7104 pg. 167

B1B569	R411062-01	4.4	0.250	73	786	39	12/07/04	12/07	XSPEC-004
BLK (QC ID=49895)	R411062-03	3.1	0.250	88	836	12/07/04	12/08	XSPEC-004	
LCS (QC ID=49894)	R411062-02	6.9	0.250	85	600	12/07/04	12/08	XSPEC-004	
Duplicate (R411062-01) (QC ID=49896)	R411062-04	5.0	0.250	72	645	42	12/07/04	12/10	XSPEC-004

Nominal values and limits from method 5.0 0.250 20-105 300 100 180

PROCEDURES	REFERENCE	1129_SEP_LEPS_GS
CP-024	Iodine-129, Sample Dissolution, rev 5	
CP-530	Iodine-129 Purification, rev 1	

AVERAGES ± 2 SD	MDA	4.8 ± 3.2
FOR 4 SAMPLES	YIELD	80 ± 16

METHOD SUMMARIES

Page 2

SUMMARY DATA SECTION

Page 13

Lab id	EBRLNE
Protocol	Hanford
Version	Ver 1.0
Form	DVD-CMS
Version	3.06
Report date	01/26/05

00000016



# EBERLINE SERVICES/RICHMOND

SAMPLE DELIVERY GROUP H2812

## METHOD SUMMARY

CARBON 14 IN WATER

LIQUID SCINTILLATION COUNTING

Test C Matrix WATER

SDG 7145

Contact Melissa C. Mannion

Client Hanford

Contract No. 630

Contract SDG H2812

## RESULTS

CLIENT SAMPLE ID	LAB SAMPLE ID	RAW TEST FIX	SUF- PLANCHET	Carbon 14
------------------	------------------	-----------------	------------------	-----------

Preparation batch 7104-167

B1B569	R411062-01	7145-001	U	
BLK (QC ID=49895)	R411062-03	7145-003	U	
LCS (QC ID=49894)	R411062-02	7145-002	ok	
Duplicate (R411062-01)	R411062-04	7145-004	-	U
Spike (R411062-01)	R411062-05	7145-005	ok	X

Nominal values and limits from method RDLs (pCi/L) 200  
200-PW-2/200-PW-4 OU - QC Sampling

## METHOD PERFORMANCE

CLIENT SAMPLE ID	LAB SAMPLE ID	RAW TEST FIX	SUF- pCi/L	MDA	ALIQ L	PREP FAC	DILU- TION	YIELD %	EFF %	COUNT min	FWHM keV	DRIFT KeV	DAYS HELD	ANAL- PREPARED	YZED	DETECTOR
------------------	------------------	-----------------	---------------	-----	-----------	-------------	---------------	------------	----------	--------------	-------------	--------------	--------------	-------------------	------	----------

Preparation batch 7104-167 2σ prep error 10.0 % Reference Lab Notebook 7104 pg. 167

B1B569	R411062-01	37	0.0300	100	100	50	12/16/04	12/18	LSC-004
BLK (QC ID=49895)	R411062-03	36	0.0300	100	100	12/16/04	12/18	LSC-004	
LCS (QC ID=49894)	R411062-02	38	0.0300	100	90	12/16/04	12/18	LSC-004	
Duplicate (R411062-01)	R411062-04	36	0.0300	100	100	50	12/16/04	12/18	LSC-004
(QC ID=49896)									
Spike (R411062-01)	R411062-05	79	0.0200	100	46	51	12/16/04	12/19	LSC-004
(QC ID=49897)									

Nominal values and limits from method 200 0.0300 50 180

PROCEDURES REFERENCE C14\_CHEM\_LSC  
CP-241 Carbon-14 in Aqueous Samples, rev 6

AVERAGES ± 2 SD MDA 45 ± 38  
FOR 5 SAMPLES YIELD 100 ± 0

METHOD SUMMARIES

Page 3

SUMMARY DATA SECTION

Page 14

Lab id EBRLINE  
Protocol Hanford  
Version Ver 1.0  
Form DVD-CMS  
Version 3.06  
Report date 01/26/05

00000017

# EBERLINE SERVICES/RICHMOND

SAMPLE DELIVERY GROUP H2812

## METHOD SUMMARY

NICKEL-63 IN LIQUID  
LIQUID SCINTILLATION COUNTING

Test NI L Matrix WATER  
SDG 7145  
Contact Melissa C. Mannion

Client Hanford  
Contract No. 630  
Contract SDG H2812

## RESULTS

CLIENT SAMPLE ID	LAB SAMPLE ID	RAW TEST FIX	SUF- PLANCHET	Nickel 63
------------------	------------------	-----------------	------------------	-----------

Preparation batch 7104-167

B1B569	R411062-01	7145-001	U
BLK (QC ID=49895)	R411062-03	7145-003	U
LCS (QC ID=49894)	R411062-02	7145-002	ok
Duplicate (R411062-01)	R411062-04	7145-004	- U

Nominal values and limits from method RDLs (pCi/L) 15  
200-PW-2/200-PW-4 OU - QC Sampling

## METHOD PERFORMANCE

CLIENT SAMPLE ID	LAB SAMPLE ID	RAW TEST FIX	SUF- pCi/L	MDA	ALIQ L	PREP FAC	DILU- TION	YIELD %	EFF %	COUNT min	FWHM keV	DRIFT KeV	DAYS HELD	ANAL- PREPARED	YZED	DETECTOR
------------------	------------------	-----------------	---------------	-----	-----------	-------------	---------------	------------	----------	--------------	-------------	--------------	--------------	-------------------	------	----------

Preparation batch 7104-167 2σ prep error 10.0 % Reference Lab Notebook 7104 pg. 167

B1B569	R411062-01	2.8	0.500	95	50	42	12/09/04	12/10	LSC-004
BLK (QC ID=49895)	R411062-03	2.8	0.500	95	50	12/09/04	12/10	LSC-004	
LCS (QC ID=49894)	R411062-02	2.8	0.500	97	50	12/09/04	12/10	LSC-004	
Duplicate (R411062-01)	R411062-04	2.9	0.500	94	50	42	12/09/04	12/10	LSC-004
(QC ID=49896)									

Nominal values and limits from method 15 0.500 50 180

PROCEDURES REFERENCE NI63\_LSC  
CP-280 Nickel-63 Purification, rev 3

AVERAGES ± 2 SD MDA 2.8 ± 0.10  
FOR 4 SAMPLES YIELD 95 ± 3

## METHOD SUMMARIES

Page 4

## SUMMARY DATA SECTION

Page 15

Lab id EBRLNE  
Protocol Hanford  
Version Ver 1.0  
Form DVD-CMS  
Version 3.06  
Report date 01/26/05

00000018

# EBERLINE SERVICES / RICHMOND

SAMPLE DELIVERY GROUP H2812

SDG 7145  
Contact Melissa C. Mannion

## REPORT GUIDE

Client Hanford  
Contract No. 630  
Case no SDG\_H2812

## SAMPLE SUMMARY

The Sample and QC Summary Reports show all samples, including QC samples, reported in one Sample Delivery Group (SDG).

The Sample Summary Report fully identifies client samples and gives the corresponding lab sample identification. The QC Summary Report shows at the sample level how the lab organized the samples into batches and generated QC samples. The Preparation Batch and Method Summary Reports show this at the analysis level.

The following notes apply to these reports:

- \* LAB SAMPLE ID is the lab's primary identification for a sample.
- \* DEPARTMENT SAMPLE ID is an alternate lab id, for example one assigned by a radiochemistry department in a lab.
- \* CLIENT SAMPLE ID is the client's primary identification for a sample. It includes any sample preparation done by the client that is necessary to identify the sample.
- \* QC BATCH is a lab assigned code that groups samples to be processed and QCed together. These samples should have similar matrices.

QC BATCH is not necessarily the same as SDG, which reflects samples received and reported together.

- \* All Lab Control Samples, Method Blanks, Duplicates and Matrix Spikes are shown that QC any of the samples. Due to possible reanalyses, not all results for all these QC samples may be relevant to the SDG. The Lab Control Sample, Method Blank, Duplicate, Matrix Spike and Method Summary Reports detail these relationships.

### REPORT GUIDES

Page 1

### SUMMARY DATA SECTION

Page 16

Lab id EBRLNE  
Protocol Hanford  
Version Ver 1.0  
Form DVD-RG  
Version 3.06  
Report date 01/26/05

00000019

# EBERLINE SERVICES / RICHMOND

SAMPLE DELIVERY GROUP H2812

SDG 7145  
Contact Melissa C. Mannion

## REPORT GUIDE

Client Hanford  
Contract No. 630  
Case no SDG H2812

### PREPARATION BATCH SUMMARY

The Preparation Batch Summary Report shows all preparation batches in one Sample Delivery Group (SDG) with information necessary to check the completeness and consistency of the SDG.

The following notes apply to this report:

- \* The preparation batches are shown in the same order as the Method Summary Reports are printed.
- \* Only analyses of planchets relevant to the SDG are included.
- \* Each preparation batch should have at least one Method Blank and LCS in it to validate client sample results.
- \* The QUALIFIERS shown are all qualifiers other than U, J, B, L and H that occur on any analysis in the preparation batch. The Method Summary Report has these qualifiers on a per sample basis.

These qualifiers should be reviewed as follows:

- X Some data has been manually entered or modified. Transcription errors are possible.
- P One or more results are 'preliminary'. The data is not ready for final reporting.
- 2 There were two or more results for one analyte on one planchet imported at one time. The results in DVD may not be the same as on the raw data sheets.

Other lab defined qualifiers may occur. In general, these should be addressed in the SDG narrative.

#### REPORT GUIDES

Page 2

#### SUMMARY DATA SECTION

Page 17

Lab id EBRLNE  
Protocol Hanford  
Version Ver 1.0  
Form DVD-RG  
Version 3.06  
Report date 01/26/05

00000020

# EBERLINE SERVICES / RICHMOND

SAMPLE DELIVERY GROUP H2812

SDG 7145  
Contact Melissa C. Mannion

## REPORT GUIDE

Client Hanford  
Contract No. 630  
Case no SDG H2812

## WORK SUMMARY

The Work Summary Report shows all samples, including QC samples, and all relevant analyses in one Sample Delivery Group (SDG). This report is often useful as supporting documentation for an invoice.

The following notes apply to this report:

- \* TEST is a code for the method used to measure associated analytes. Results and related information for each analyte are on the Data Sheet Report. In special cases, a test code used in the summary data section is not the same as in associated raw data. In this case, both codes are shown on the Work Summary.
- \* SUFFIX is the lab's code to distinguish multiple analyses (recounts, reworks, reanalyses) of a fraction of the sample. The suffix indicates which result is being reported. An empty suffix normally identifies the first attempt to analyze the sample.
- \* The LAB SAMPLE ID, TEST and SUFFIX uniquely identify all supporting data for a result. The Method Summary Report for each TEST has method performance data, such as yield, for each lab sample id and suffix and procedures used in the method.
- \* PLANCHET is an alternate lab identifier for work done for one test. It, combined with the TEST and SUFFIX, may be the best link to raw data.
- \* For QC samples, only analyses that directly QC some regular sample are shown. The Lab Control Sample, Method Blank, Duplicate, Matrix Spike and Method Summary Reports detail these relationships.
- \* The SAS (Special Analytical Services) Number is a client or lab assigned code that reflects special processing for samples, such as rapid turn around. Counts of tests done are lists by SAS number since it is likely to affect prices.

### REPORT GUIDES

Page 3

### SUMMARY DATA SECTION

Page 18

Lab id EBRLNE  
Protocol Hanford  
Version Ver 1.0  
Form DVD-RG  
Version 3.06  
Report date 01/26/05

00000021

# EBERLINE SERVICES / RICHMOND

SAMPLE DELIVERY GROUP H2812

SDG 7145  
Contact Melissa C. Mannion

## REPORT GUIDE

Client Hanford  
Contract No. 630  
Case no SDG H2812

## DATA SHEET

The Data Sheet Report shows all results and primary supporting information for one client sample or Method Blank. This report corresponds to both the CLP Inorganics and Organics Data Sheet.

The following notes apply to this report:

- \* TEST is a code for the method used to measure an analyte. If the TEST is empty, no data is available; the analyte was not analyzed for.
- \* The LAB SAMPLE ID and TEST uniquely identify work within the Summary Data Section of a Data Package. The Work Summary and Method Summary Reports further identify raw data that underlies this work.

The Method Summary Report for each TEST has method performance data, such as yield, for each Lab Sample ID and a list of procedures used in the method.

- \* ERRORS can be labeled TOTAL or COUNT. TOTAL implies a preparation (non-counting method) error has been added, as square root of sum of squares, to the counting error denoted by COUNT. The preparation errors, which may vary by preparation batch, are shown on the Method Summary Report.
- \* A RESULT can be 'N.R.' (Not Reported). This means the lab did this work but chooses not to report it now, possibly because it was reported at another time.
- \* When reporting a Method Blank, a RESULT can be 'N.A.' (Not Applicable). This means there is no reported client sample work in the same preparation batch as the Blank's result. This is likely to occur when the Method Blank is associated with reanalyses of selected work for a few samples in the SDG.

The following qualifiers are defined by the DVD system:

U The RESULT is less than the MDA (Minimum Detectable Activity).

### REPORT GUIDES

Page 4

### SUMMARY DATA SECTION

Page 19

Lab id EBRLNE  
Protocol Hanford  
Version Ver 1.0  
Form DVD-RG  
Version 3.06  
Report date 01/26/05

00000022

# EBERLINE SERVICES / RICHMOND

SAMPLE DELIVERY GROUP H2812

SDG 7145  
Contact Melissa C. Mannion

GUIDE, cont.

Client Hanford  
Contract No. 630  
Case no SDG\_H2812

## DATA SHEET

If the MDA is blank, the ERROR is used as the limit.

- J The RESULT is less than the RDL (Required Detection Limit) and no U qualifier is assigned.
  - B A Method Blank associated with this sample had a result without a U flag and, after correcting for possibly different aliquots, that result is greater than or equal to the MDA for this sample.
- Normally, B is not assigned if U is. When method blank subtraction is shown on this report, B flags are assigned based on the unsubtracted values while U's are assigned based on the subtracted ones. Both flags can be assigned in this case.
- For each sample result, all Method Blank results in the same preparation batch are compared. The Method Summary Report documents this and other QC relationships.
- L Some Lab Control Sample that QC's this sample had a low recovery. The lab can disable assignment of this qualifier.
  - H Similar to 'L' except the recovery was high.
  - P The RESULT is 'preliminary'.
  - X Some data necessary to compute the RESULT, ERROR or MDA was manually entered or modified.
  - 2 There were two or more results available for this analyte. The reported result may not be the same as in the raw data.

Other qualifiers are lab defined. Definitions should be in the SDG narrative.

The following values are underlined to indicate possible problems:

- \* An MDA is underlined if it is bigger than its RDL.

### REPORT GUIDES

Page 5

### SUMMARY DATA SECTION

Page 20

Lab id EBRLNE  
Protocol Hanford  
Version Ver 1.0  
Form DVD-RG  
Version 3.06  
Report date 01/26/05

00000023

# EBERLINE SERVICES / RICHMOND

SAMPLE DELIVERY GROUP H2812

SDG 7145  
Contact Melissa C. Mannion

GUIDE, cont.

Client Hanford  
Contract No. 630  
Case no SDG\_H2812

## DATA SHEET

- \* An ERROR is underlined if the 1.645 sigma counting error is bigger than both the MDA and the RESULT, implying that the MDA may not be a good estimate of the 'real' minimum detectable activity.
- \* A negative RESULT is underlined if it is less than the negative of its 2 sigma counting ERROR.
- \* When reporting a Method Blank, a RESULT is underlined if greater than its MDA. If the MDA is blank, the 2 sigma counting error is used in the comparison.

REPORT GUIDES

Page 6

SUMMARY DATA SECTION

Page 21

Lab id EBRLNE  
Protocol Hanford  
Version Ver 1.0  
Form DVD-RG  
Version 3.06  
Report date 01/26/05

00000024



EBERLINE SERVICES / RICHMOND

SAMPLE DELIVERY GROUP H2812

SDG 7145  
Contact Melissa C. Mannion

REPORT GUIDE

Client Hanford  
Contract No. 630  
Case no SDG H2812

LAB CONTROL SAMPLE

The Lab Control Sample Report shows all results, recoveries and primary supporting information for one Lab Control Sample.

The following notes apply to this report:

- \* All fields in common with the Data Sheet Report have similar usage. Refer to its Report Guide for details.
- \* An amount ADDED is the lab's value for the actual amount spiked into this sample with its ERROR an estimate of the error of this amount.

An amount added is underlined if its ratio to the corresponding RDL is outside protocol specified limits.

- \* REC (Recovery) is RESULT divided by ADDED expressed as a percent.
- \* The first, computed limits for the recovery reflect:
  1. The error of RESULT, including that introduced by rounding the result prior to printing.
 

If the limits are labeled (TOTAL), they include preparation error in the result. If labeled (COUNT), they do not.
  2. The error of ADDED.
  3. A lab specified, per analyte bias. The bias changes the center of the computed limits.
- \* The second limits are protocol defined upper and lower QC limits for the recovery.
- \* The recovery is underlined if it is outside either of these ranges.

REPORT GUIDES

Page 7

SUMMARY DATA SECTION

Page 22

Lab id EBRLNE  
Protocol Hanford  
Version Ver 1.0  
Form DVD-RG  
Version 3.06  
Report date 01/26/05

00000025

EBERLINE SERVICES / RICHMOND

SAMPLE DELIVERY GROUP H2812

SDG 7145  
Contact Melissa C. Mannion

REPORT GUIDE

Client Hanford  
Contract No. 630  
Case no SDG H2812

DUPLICATE

The Duplicate Report shows all results, differences and primary supporting information for one Duplicate and associated Original sample.

The following notes apply to this report:

- \* All fields in common with the Data Sheet Report have similar usage. This applies both to the Duplicate and Original sample data. Refer to the Data Sheet Report Guide for details.

If the Duplicate has data for a TEST and the lab did not do this test to the Original, the Original's RESULTS are underlined.

- \* The RPD (Relative Percent Difference) is the absolute value of the difference of the RESULTS divided by their average expressed as a percent.

If both RESULTS are less than their MDAs, no RPD is computed and a '-' is printed.

For an analyte, if the lab did work for both samples but has data for only one, the MDA from the sample with data is used as the other's result in the RPD.

- \* The first, computed limit is the sum, as square root of sum of squares, of the errors of the results divided by the average result as a percent, hence the relative error of the difference rather than the error of the relative difference. The errors include those introduced by rounding the RESULTS prior to printing.

If this limit is labeled TOT, it includes the preparation error in the RESULTS. If labeled CNT, it does not.

This value reported for this limit is at most 999.

- \* The second limit for the RPD is the larger of:

1. A fixed percentage specified in the protocol.

REPORT GUIDES

Page 8

SUMMARY DATA SECTION

Page 23

Lab id EBRLNE  
Protocol Hanford  
Version Ver 1.0  
Form DVD-RG  
Version 3.06  
Report date 01/26/05

00000026

EBERLINE SERVICES / RICHMOND

SAMPLE DELIVERY GROUP H2812

SDG 7145  
Contact Melissa C. Mannion

GUIDE, cont.

Client Hanford  
Contract No. 630  
Case no SDG\_H2812

DUPLICATE

2. A protocol factor (typically 2) times the average MDA as a percent of the average result. This limit applies when the results are close to the MDAs.

- \* The RPD is underlined if it is greater than either limit.
- \* If specified by the lab, the second limit column is replaced by the Difference Error Ratio (DER), which is the absolute value of the difference of the results divided by the quadratic sum of their one sigma errors, the same errors as used in the first limit.

Except for differences due to rounding, the DER is the same as the RPD divided by the first RPD limit with the limit scaled to 1 sigma.

- \* The DER is underlined if it is greater than the sigma factor, typically 2 or 3, shown in the header for the first RPD limit.

REPORT GUIDES

Page 9

SUMMARY DATA SECTION

Page 24

Lab id EBRLNE  
Protocol Hanford  
Version Ver 1.0  
Form DVD-RG  
Version 3.06  
Report date 01/26/05

00000027

# EBERLINE SERVICES / RICHMOND

SAMPLE DELIVERY GROUP H2812

SDG 7145  
Contact Melissa C. Mannion

## REPORT GUIDE

Client Hanford  
Contract No. 630  
Case no SDG\_H2812

## MATRIX SPIKE

The Matrix Spike Report shows all results, recoveries and primary supporting information for one Matrix Spike and associated Original sample.

The following notes apply to this report:

- \* All fields in common with the Data Sheet Report have similar usage. This applies both to the Spiked and Original sample data. Refer to the Data Sheet Report Guide for details.

If the Spike has data for a TEST and the lab did not do this test to the Original, the Original's RESULTS are underlined.

- \* An amount ADDED is the lab's value for the actual amount spiked into the Spike sample with its ERROR an estimate of the error of this amount.

An amount is underlined if its ratio to the corresponding RDL is outside protocol specified limits.

- \* REC (Recovery) is the Spike RESULT minus the Original RESULT divided by ADDED expressed as a percent.

- \* The first, computed limits for the recovery reflect:

1. The errors of the two RESULTS, including those introduced by rounding them prior to printing.

If the limits are labeled (TOTAL), they include preparation error in the result. If labeled (COUNT), they do not.

2. The error of ADDED.

3. A lab specified, per analyte bias. The bias changes the center of the computed limits.

- \* The second limits are protocol defined upper and lower QC limits

### REPORT GUIDES

Page 10

### SUMMARY DATA SECTION

Page 25

Lab id EBRLNE  
Protocol Hanford  
Version Ver 1.0  
Form DVD-RG  
Version 3.06  
Report date 01/26/05

00000028

# EBERLINE SERVICES / RICHMOND

SAMPLE DELIVERY GROUP H2812

SDG 7145  
Contact Melissa C. Mannion

GUIDE, cont.

Client Hanford  
Contract No. 630  
Case no SDG\_H2812

## MATRIX SPIKE

for the recovery.

These limits are left blank if the Original RESULT is more than a protocol defined factor (typically 4) times ADDED. This is a way of accounting for that when the spike is small compared to the amount in the original sample, the recovery is unreliable.

- \* The recovery is underlined (out of spec) if it is outside either of these ranges.

REPORT GUIDES

Page 11

SUMMARY DATA SECTION

Page 26

Lab id EBRLNE  
Protocol Hanford  
Version Ver 1.0  
Form DVD-RG  
Version 3.06  
Report date 01/26/05

00000029

# EBERLINE SERVICES / RICHMOND

SAMPLE DELIVERY GROUP H2812

SDG 7145  
Contact Melissa C. Mannion

## REPORT GUIDE

Client Hanford  
Contract No. 630  
Case no SDG\_H2812

## METHOD SUMMARY

The Method Summary Report has two tables. One shows up to five results measured using one method. The other has performance data for the method. There is one report for each TEST, as used on the Data Sheet Report.

The following notes apply to this report:

- \* Each table is subdivided into sections, one for each preparation batch. A preparation batch is a group of aliquots prepared at roughly the same time in one work area of the lab using the same method.

There should be Lab Control Sample and MethodBlank results in each preparation batch since this close correspondence makes the QC meaningful. Depending on lab policy, Duplicates need not occur in each batch since they QC sample dependencies such as matrix effects.

- \* The RAW TEST column shows the test code used in the raw data to identify a particular analysis if it is different than the test code in the header of the report. This occurs in special cases due to method specific details about how the lab labels work.

The Lab Sample or Planchet ID combined with the (Raw) Test Code and Suffix uniquely identify the raw data for each analysis.

- \* If a result is less than both its MDA and RDL, it is replaced by just 'U' on this report. If it is greater than or equal to the RDL but less than the MDA, the result is shown with a 'U' flag.

The J and X flags are as on the data sheet.

- \* Non-U results for Method Blanks are underlined to indicate possible contamination of other samples in the preparation batch. The Method Blank Report has supporting data.
- \* Lab Control Sample and Matrix Spike results are shown as: ok, No data, LOW or HIGH, with the last two underlined. 'No data'

### REPORT GUIDES

Page 12

### SUMMARY DATA SECTION

Page 27

Lab id EBRLNE  
Protocol Hanford  
Version Ver 1.0  
Form DVD-RG  
Version 3.06  
Report date 01/26/05

00000030

EBERLINE SERVICES / RICHMOND

SAMPLE DELIVERY GROUP H2812

SDG 7145  
Contact Melissa C. Mannion

GUIDE, cont.

Client Hanford  
Contract No. 630  
Case no SDG H2812

METHOD SUMMARY

means no amount ADDED was specified. 'LOW' and 'HIGH' correspond to when the recovery is underlined on the Lab Control Sample or Matrix Spike Report. See these reports for supporting data.

- \* Duplicate sample results are shown as: ok, No data, or OUT, with the last two underlined. 'No data' means there was no original sample data found for this duplicate. 'OUT' corresponds to when the RPD is underlined on the Duplicate Report. See this report for supporting data.
- \* If the MDA column is labeled 'MAX MDA', there was more than one result measured by the reported method and the MDA shown is the largest MDA. If not all these results have the same RDL, the MAX MDA reflects only those results with RDL equal to the smallest one.

MDAs are underlined if greater than the printed RDL.

- \* Aliquots are underlined if less than the nominal value specified for the method.
- \* Preparation factors are underlined if greater than the nominal value specified for the method.
- \* Dilution factors are underlined if greater than the nominal value specified for the method.
- \* Residues are underlined if outside the range specified for the method. Residues are not printed if yields are.
- \* Yields, which may be gravimetric, radiometric or some type of recovery depending on the method, are underlined if outside the range specified for the method.
- \* Efficiencies are underlined if outside the range specified for the method. Efficiencies are detector and geometry dependent so this test is only approximate.

REPORT GUIDES

Page 13

SUMMARY DATA SECTION

Page 28

Lab id EBRLNE  
Protocol Hanford  
Version Ver 1.0  
Form DVD-RG  
Version 3.06  
Report date 01/26/05

00000031

# EBERLINE SERVICES / RICHMOND

SAMPLE DELIVERY GROUP H2812

SDG 7145  
Contact Melissa C. Mannion

GUIDE, cont.

Client Hanford  
Contract No. 630  
Case no SDG\_H2812

## METHOD SUMMARY

- \* Count times are underlined if less than the nominal value specified for the method.
- \* Resolutions (as FWHM; Full Width at Half Max) are underlined if greater than the method specified limit.
- \* Tracer drifts are underlined if their absolute values are greater than the method specified limit. Tracer drifts are not printed if percent moistures are.
- \* Days Held are underlined if greater than the holding time specified in the protocol.
- \* Analysis dates are underlined if before their planchet's preparation date or, if a limit is specified, too far after it.

For some methods, ratios as percentages and error estimates for them are computed for pairs of results. A ratio column header like '1+3' means the ratio of the first result column and the third result column.

Ratios are not computed for Lab Control Sample, Method Blank or Matrix Spike results since their matrices are not necessarily similar to client samples'.

The error estimate for a ratio of results from one planchet reflects only counting errors since other errors should be correlated. For a ratio involving different planchets, if QC limits are computed based on total errors, the error for the ratio allows for the preparation errors for the planchets.

The ratio is underlined (out of spec) if the absolute value of its difference from the nominal value is greater than its error estimate. If no nominal value is specified, this test is not done.

For Gross Alpha or Gross Beta results, there may be a column showing the sum of other Alpha or Beta emitters. This sum includes all relevant

### REPORT GUIDES

Page 14

### SUMMARY DATA SECTION

Page 29

Lab id EBRLNE  
Protocol Hanford  
Version Ver 1.0  
Form DVD-RG  
Version 3.06  
Report date 01/26/05

00000032



# EBERLINE SERVICES / RICHMOND

SAMPLE DELIVERY GROUP H2812

SDG 7145  
Contact Melissa C. Mannion

GUIDE, cont.

Client Hanford  
Contract No. 630  
Case no SDG H2812

## METHOD SUMMARY

results in the DVD database, whether reported or not. Results in the sum are weighted by a particles/decay value specified by the lab for each relevant analyte. Results less than their MDA are not included. No sums are computed for Lab Control, Method Blank or Matrix Spike samples since their various planchets may not be physically related.

If a ratio of total isotopic to Gross Alpha or Beta is shown, the error for the ratio reflects both the error in the Gross result and the sum, as square root of sum of squares, of the errors in the isotopic results.

For total elemental uranium or thorium results, there may be a column showing the total weight computed from associated isotopic results. Ignoring results less than their MDAs, this is a weighted sum of the isotopic results. The weights depend on the molecular weight and half-life of each isotope so as to convert activities (decays) to weight (atoms).

If a ratio of total computed to measured elemental uranium or thorium is shown, the error for the ratio reflects the errors in all the measurements.

### REPORT GUIDES

Page 15

### SUMMARY DATA SECTION

Page 30

Lab id EBRLNE  
Protocol Hanford  
Version Ver 1.0  
Form DVD-RG  
Version 3.06  
Report date 01/26/05

00000033

FLUOR Hanford Inc.		CHAIN OF CUSTODY/SAMPLE ANALYSIS REQUEST						F03-007-020	PAGE 1	OF 1
COLLECTOR Johansen/Alexander/Gent		COMPANY CONTACT LC Hulstrom		TELEPHONE NO. 373-3928		PROJECT COORDINATOR TRENT, SJ		PRICE CODE 7N	DATA TURNAROUND 45 Days / 45 Days	
SAMPLING LOCATION 200-PW-2/216-S-7		PROJECT DESIGNATION 200-PW-2/200-PW-4 OU - QC Sampling H2812 (7145)				SAF NO. F03-007		AIR QUALITY		
ICE CHEST NO GRP-03-00V		FIELD LOGBOOK NO. HNF-N-384 1		COA 119153ES10		METHOD OF SHIPMENT Federal Express				
SHIPPED TO Eberline Services		OFFSITE PROPERTY NO. See PTK 1439/				BILL OF LADING/AIR BILL NO. 20 PTK 1439/				
MATRIX*	POSSIBLE SAMPLE HAZARDS/ REMARKS  Samples did not originate in radiological controlled area. No total activity associated with sample/samples.	PRESERVATION	HNO3 to pH <2	HNO3 to pH <2	None	None				
A=Air DL=Drum Liquids DS=Drum Solids L=Liquid O=Oil S=Soil SE=Sediment T=Tissue V=Vegetation W=Water WI=Wipe X=Other		TYPE OF CONTAINER	P	P	P	P				
		NO. OF CONTAINER(S)	1	1	1	4				
		VOLUME	1000mL	1000mL	250mL	1000mL				
	SPECIAL HANDLING AND/OR STORAGE	SAMPLE ANALYSIS		Isotopic Thorium (Thorium-232)	Nickel-63;	Carbon-14;	Iodine-129;			
SAMPLE NO.	MATRIX*	SAMPLE DATE	SAMPLE TIME							
B1B569	WATER	10-29-04	0700	X	X	X	X			
CHAIN OF POSSESSION		SIGN/ PRINT NAMES				SPECIAL INSTRUCTIONS				
RELINQUISHED BY/REMOVED FROM	DATE/TIME	RECEIVED BY/STORED IN	DATE/TIME							
PMGENT/AMBER	0745/10/29/04	J.S. BUEHLER	10-29-04 0745							
RELINQUISHED BY/REMOVED FROM	DATE/TIME	RECEIVED BY/STORED IN	DATE/TIME							
J.S. BUEHLER	10-29-04 0800	M.O. GREGG	10-29-04 0800							
RELINQUISHED BY/REMOVED FROM	DATE/TIME	RECEIVED BY/STORED IN	DATE/TIME							
M.P. GREGG	11/3/04 0815	M.T. BECHLER	11/3/04 0815							
RELINQUISHED BY/REMOVED FROM	DATE/TIME	RECEIVED BY/STORED IN	DATE/TIME							
M.T. BECHLER	11/3/04 0815	LEE EX								
RELINQUISHED BY/REMOVED FROM	DATE/TIME	RECEIVED BY/STORED IN	DATE/TIME							
Fed Ex	11/4/04 9:45	J.W. DAVIS	11/4/04 11:05							
RELINQUISHED BY/REMOVED FROM	DATE/TIME	RECEIVED BY/STORED IN	DATE/TIME							
LABORATORY SECTION	RECEIVED BY	TITLE								DATE/TIME
FINAL SAMPLE DISPOSITION	DISPOSAL METHOD	DISPOSED BY								DATE/TIME

### SAMPLE RECEIPT CHECKLIST

Client: Elmer Mayford City Richland State WA

Date/Time received 11/4/04 9:45 CoC No. F03-007-020 ✓

Container I.D. No. GRP-03028 Requested TAT (Days) 45 P.O. Received Yes ☐ No ☐

## INSPECTION

1. Custody seals on shipping container intact? Yes [X] No [ ] N/A [ ]
2. Custody seals on shipping container dated & signed? Yes [P] No [ ] N/A [ ]
3. Custody seals on sample containers intact? Yes [T] No [ ] N/A [ ]
4. Custody seals on sample containers dated & signed? Yes [Y] No [ ] N/A [ ]
5. Packing material is: Wet [ ] Dry [X]
6. Number of samples in shipping container: 1 Sample Matrix W
7. Number of containers per sample: 2 (Or see CoC \_\_\_\_\_)
8. Samples are in correct container Yes [X] No [ ]
9. Paperwork agrees with samples? Yes [A] No [ ]
10. Samples have: Tape [ ] Hazard labels [ ] Rad labels [ ] Appropriate sample labels [X]
11. Samples are: In good condition [X] Leaking [ ] Broken Container [ ] Missing [ ]
12. Samples are: Preserved [P] Not preserved [ ] pH 1 Preservative H<sub>2</sub>O
13. Describe any anomalies: \_\_\_\_\_
- \_\_\_\_\_
- \_\_\_\_\_
14. Was P.M. notified of any anomalies? Yes [ ] No [ ] Date \_\_\_\_\_
15. Inspected by [Signature] Date: 11/1/08 Time: 11:35

Customer Sample  
No.

COM

mEq/hr

**wipe**

Customer Sample  
No.

com

mR/hr

**wipe**

Ion Chamber Ser. No. \_\_\_\_\_

Calibration date \_\_\_\_\_

Alpha Meter Ser. No. \_\_\_\_\_

Calibration date \_\_\_\_\_

Beta/Gamma Meter Ser. No. \_\_\_\_\_

Calibration date \_\_\_\_\_