

0099315

RECEIVED JANUARY 04, 2011

EBERLINE ANALYTICAL CORPORATION

2030 Wright Avenue

Richmond, California 94804-3849

Phone (510) 235-2633 Fax (510) 235-8438

Toll Free (800) 841-5487

www.eberlineservices.com



EBERLINE
SERVICES

January 4, 2011

Mr. Michael Neely
CH2M Hill Plateau Remediation Company
P.O. Box 1600
Mail Stop - B6-06
Richland, WA 99352

Reference: **P.O. #33677**
Eberline Analytical S0-12-157-7311, SDG H4460

Dear Mr. Neely:

Enclosed is a data report for five water samples designated under SAF No. X11-005 received at Eberline Analytical on December 9, 2010. The samples were analyzed according to the accompanying chain-of-custody documents.


Please call if you have any questions concerning this report.

Sincerely,

N. Joseph Verville
Client Services Manager

NJV/ljb

Enclosure: Data Package

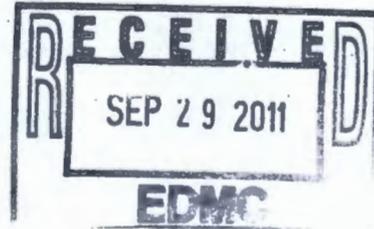

1.0 GENERAL

CH2M Hill Plateau Remediation Company (CHPRC) Sample Delivery Group H4460 was composed of five water samples designated under SAF No. X11-005 with a Project Designation of: IU2 IU6DURA, OCTOBER 2010.

The samples were received as stated on the chain-of-custody documents. Any discrepancies are noted on the Eberline Analytical Sample Receipt Checklist.

2.0 ANALYSIS NOTES

2.1 Radium-228 Analysis

No problems were encountered during the course of the analyses. The results for both the original and duplicate analyses were less than their respective MDA's, therefore no RPD, or statistical control limit is calculated.

3.0 Case Narrative Certification Statement

"I certify that this data package is in compliance with the SOW, both technically and for completeness, for other than the conditions detailed above. Release of the data obtained in this hard copy data package has been authorized by the Laboratory Manager or a designee, as verified by the following signature."



N. Joseph Verville
Client Services Manager

1/4/11

Date

EBERLINE SERVICES / RICHMOND
SAMPLE DELIVERY GROUP H4460

SDG 7311
Contact N. Joseph Verville

Client CHPRC
Contract No. 33677
Case no SDG_H4460

S U M M A R Y D A T A S E C T I O N

T A B L E O F C O N T E N T S				
About this section	.	.	.	1
Sample Summaries	.	.	.	3
Prep Batch Summary	.	.	.	5
Work Summary	.	.	.	6
Method Blanks	.	.	.	8
Lab Control Samples	.	.	.	9
Duplicates	.	.	.	10
Data Sheets	.	.	.	11
Method Summaries	.	.	.	16
Report Guides	.	.	.	17
End of Section	.	.	.	31

VB

Prepared by _____

Reviewed by _____

n. J. Verville

Lab id EBRLNE
Protocol CHPRC
Version Ver 1.0
Form DVD-TOC
Version 3.06
Report date 01/04/11

EBERLINE SERVICES / RICHMOND

SAMPLE DELIVERY GROUP H4460

SDG 7311
Contact N. Joseph Verville

REPORT GUIDE

Client CHPRC
Contract No. 33677
Case no SDG H4460

ABOUT THE DATA SUMMARY SECTION

The Data Summary Section of a Data Package has all data, in several useful orders, necessary for first level, routine review of the data package for a Sample Delivery Group (SDG). This section follows the Data Package Narrative, which has an overview of the data package and a discussion of special problems. It is followed by the Raw Data Section, which has full details.

The Data Summary Section has several groups of reports:

SAMPLE SUMMARIES

The Sample and QC Summary Reports show all samples, including QC samples, reported in one SDG. These reports cross-reference client and lab sample identifiers.

PREPARATION BATCH SUMMARY

The Preparation Batch Summary Report shows all preparation batches (lab groupings reflecting how work was organized) relevant to the reported SDG with information necessary to check the completeness and consistency of the SDG.

WORK SUMMARY

The Work Summary Report shows all samples and work done on them relevant to the reported SDG.

METHOD BLANKS

The Method Blank Reports, one for each Method Blank relevant to the SDG, show all results and primary supporting information for the blanks.

LAB CONTROL SAMPLES

The Lab Control Sample Reports, one for each Lab Control Sample relevant to the SDG, show all results, recoveries and primary supporting information for these QC samples.

REPORT GUIDES

Page 1

SUMMARY DATA SECTION

Page 1

Lab id EBRLNE
Protocol CHPRC
Version Ver 1.0
Form DVD-RG
Version 3.06
Report date 01/04/11

EBERLINE SERVICES / RICHMOND

SAMPLE DELIVERY GROUP H4460

SDG 7311
Contact N. Joseph Verville

GUIDE, cont.

Client CHPRC
Contract No. 33677
Case no SDG_H4460

ABOUT THE DATA SUMMARY SECTION

DUPLICATES

The Duplicate Reports, one for each Duplicate and Original sample pair relevant to the SDG, show all results, differences and primary supporting information for these QC samples.

MATRIX SPIKES

The Matrix Spike Reports, one for each Spiked and Original sample pair relevant to the SDG, show all results, recoveries and primary supporting information for these QC samples.

DATA SHEETS

The Data Sheet Reports, one for each client sample in the SDG, show all results and primary supporting information for these samples.

METHOD SUMMARIES

The Method Summary Reports, one for each test used in the SDG, show all results, QC and method performance data for one analyte on one or two pages. (A test is a short code for the method used to do certain work to the client's specification.)

REPORT GUIDES

The Report Guides, one for each of the above groups of reports, have documentation on how to read the associated reports.

REPORT GUIDES

Page 2

SUMMARY DATA SECTION

Page 2

Lab id EBRINE
Protocol CHPRC
Version Ver 1.0
Form DVD-RG
Version 3.06
Report date 01/04/11

EBERLINE SERVICES/RICHMOND

SAMPLE DELIVERY GROUP H4460

SDG 7311
 Contact N. Joseph Verville

LAB SAMPLE SUMMARY

Client CHPRC
 Contract No. 33677
 Case no SDG H4460

LAB						CHAIN OF	
SAMPLE ID	CLIENT SAMPLE ID	LOCATION	MATRIX	LEVEL	SAF NO	CUSTODY	COLLECTED
S012157-01	B27WL6	HNF-N-506 25/90	WATER		X11-005	X11-005-1	12/07/10 09:28
S012157-02	B27WM8	HNF-N-506 34/89	WATER		X11-005	X11-005-11	12/07/10 12:57
S012157-03	B27WY2	HNF-N-506 34/89	WATER		X11-005	X11-005-85	12/07/10 10:02
S012157-04	B27WY3	HNF-N-506 34/89	WATER		X11-005	X11-005-86	12/07/10 07:30
S012157-05	B27XD8	HNF-N-506 25/90	WATER		X11-005	X11-005-295	12/07/10 11:05
S012157-06	Lab Control Sample		WATER		X11-005		
S012157-07	Method Blank		WATER		X11-005		
S012157-08	Duplicate (S012157-01)	HNF-N-506 25/90	WATER		X11-005		12/07/10 09:28

LAB SUMMARY

Page 1

SUMMARY DATA SECTION

Page 3

Lab id EBRLNE
 Protocol CHPRC
 Version Ver 1.0
 Form DVD-LS
 Version 3.06
 Report date 01/04/11

EBERLINE SERVICES/RICHMOND

SAMPLE DELIVERY GROUP H4460

SDG 7311
 Contact N. Joseph Verville

QC SUMMARY

Client CHPRC
 Contract No. 33677
 Case no SDG H4460

QC BATCH	CHAIN OF CUSTODY	CLIENT SAMPLE ID	MATRIX	SOLIDS	SAMPLE AMOUNT	BASIS AMOUNT	DAYS SINCE RECEIVED	LAB COLL	LAB SAMPLE ID	DEPARTMENT SAMPLE ID
7311	X11-005-1	B27WL6	WATER				12/09/10	2	S012157-01	7311-001
	X11-005-11	B27WM8	WATER				12/09/10	2	S012157-02	7311-002
	X11-005-295	B27XD8	WATER				12/09/10	2	S012157-05	7311-005
	X11-005-85	B27WY2	WATER				12/09/10	2	S012157-03	7311-003
	X11-005-86	B27WY3	WATER				12/09/10	2	S012157-04	7311-004
		Method Blank	WATER						S012157-07	7311-007
		Lab Control Sample	WATER						S012157-06	7311-006
		Duplicate (S012157-01)	WATER				12/09/10	2	S012157-08	7311-008

QC SUMMARY

Page 1

SUMMARY DATA SECTION

Page 4

Lab id EBRLNE
 Protocol CHPRC
 Version Ver 1.0
 Form DVD-QS
 Version 3.06
 Report date 01/04/11

EBERLINE SERVICES/RICHMOND

SAMPLE DELIVERY GROUP H4460

SDG 7311
 Contact N. Joseph Verville

PREP BATCH SUMMARY

Client CHPRC
 Contract No. 33677
 Case no SDG H4460

TEST	MATRIX	METHOD	PREPARATION ERROR		PLANCHETS ANALYZED					QUALI-	
			BATCH	2σ %	CLIENT	MORE	RE	BLANK	LCS		DUP/ORIG
Beta Counting											
AC	WATER	Radium 228 in Water	7284-061	10.4	5			1	1	1/1	

Blank, LCS, Duplicate and Spike planchets are those in the same preparation batch as some Client sample.

Lab id EBRLNE
 Protocol CHPRC
 Version Ver 1.0
 Form DVD-PBS
 Version 3.06
 Report date 01/04/11

EBERLINE SERVICES/RICHMOND

SAMPLE DELIVERY GROUP H4460

LAB WORK SUMMARY

SDG 7311
 Contact N. Joseph Verville

Client CHPRC
 Contract No. 33677
 Case no SDG H4460

LAB SAMPLE COLLECTED RECEIVED	CLIENT SAMPLE ID LOCATION CUSTODY	SAF No	MATRIX	PLANCHET	TEST	SUF- FIX	ANALYZED	REVIEWED	BY	METHOD
S012157-01 12/07/10 12/09/10	B27WL6 HNF-N-506 25/90 X11-005-1	25/90 X11-005	WATER	7311-001	AC		12/28/10	12/29/10	MWT	Radium 228 in Water
S012157-02 12/07/10 12/09/10	B27WM8 HNF-N-506 34/89 X11-005-11	34/89 X11-005	WATER	7311-002	AC		12/28/10	12/29/10	MWT	Radium 228 in Water
S012157-03 12/07/10 12/09/10	B27WY2 HNF-N-506 34/89 X11-005-85	34/89 X11-005	WATER	7311-003	AC		12/28/10	12/29/10	MWT	Radium 228 in Water
S012157-04 12/07/10 12/09/10	B27WY3 HNF-N-506 34/89 X11-005-86	34/89 X11-005	WATER	7311-004	AC		12/28/10	12/29/10	MWT	Radium 228 in Water
S012157-05 12/07/10 12/09/10	B27XD8 HNF-N-506 25/90 X11-005-295	25/90 X11-005	WATER	7311-005	AC		12/28/10	12/29/10	MWT	Radium 228 in Water
S012157-06 12/07/10 12/09/10	Lab Control Sample X11-005		WATER	7311-006	AC		12/28/10	12/29/10	MWT	Radium 228 in Water
S012157-07 12/07/10 12/09/10	Method Blank X11-005		WATER	7311-007	AC		12/28/10	12/29/10	MWT	Radium 228 in Water
S012157-08 12/07/10 12/09/10	Duplicate (S012157-01) HNF-N-506 25/90 X11-005	25/90 X11-005	WATER	7311-008	AC		12/28/10	12/29/10	MWT	Radium 228 in Water

WORK SUMMARY

Page 1

SUMMARY DATA SECTION

Page 6

Lab id EBRLNE
 Protocol CHPRC
 Version Ver 1.0
 Form DVD-LWS
 Version 3.06
 Report date 01/04/11

EBERLINE SERVICES/RICHMOND

SAMPLE DELIVERY GROUP H4460

SDG 7311
 Contact N. Joseph Verville

WORK SUMMARY, cont.

Client CHPRC
 Contract No. 33677
 Case no SDG H4460

COUNTS OF TESTS BY SAMPLE TYPE

TEST	SAF No	METHOD	REFERENCE	CLIENT	MORE	RE	BLANK	LCS	DUP SPIKE	TOTAL
AC	X11-005	Radium 228 in Water	RAISO_SEP_GPC	5			1	1	1	8
TOTALS				5			1	1	1	8

WORK SUMMARY

Page 2

SUMMARY DATA SECTION

Page 7

Lab id EBRINE
 Protocol CHPRC
 Version Ver 1.0
 Form DVD-LWS
 Version 3.06
 Report date 01/04/11

EBERLINE SERVICES / RICHMOND
SAMPLE DELIVERY GROUP H4460

7311-007

Method Blank

METHOD BLANK

SDG <u>7311</u>	Client/Case no <u>CHPRC</u>	<u>SDG H4460</u>
Contact <u>N. Joseph Verville</u>	Contract No. <u>33677</u>	
Lab sample id <u>S012157-07</u>	Client sample id <u>Method Blank</u>	
Dept sample id <u>7311-007</u>	Material/Matrix <u>WATER</u>	
	SAF No <u>X11-005</u>	

ANALYTE	CAS NO	RESULT pCi/L	2 σ ERR (COUNT)	MDA pCi/L	RDL pCi/L	QUALI- FIERS	TEST
Radium 228	15262-20-1	-0.772	0.96	2.32	3.00	U	AC

QC-BLANK #76421

Lab id <u>EBRLNE</u>
Protocol <u>CHPRC</u>
Version <u>Ver 1.0</u>
Form <u>DVD-DS</u>
Version <u>3.06</u>
Report date <u>01/04/11</u>

EBERLINE SERVICES/RICHMOND

SAMPLE DELIVERY GROUP H4460

7311-006

Lab Control Sample

LAB CONTROL SAMPLE

SDG <u>7311</u>	Client/Case no <u>CHPRC</u>	<u>SDG H4460</u>
Contact <u>N. Joseph Verville</u>	Contract No. <u>33677</u>	
Lab sample id <u>S012157-06</u>	Client sample id <u>Lab Control Sample</u>	
Dept sample id <u>7311-006</u>	Material/Matrix <u>WATER</u>	
	SAF No <u>X11-005</u>	

ANALYTE	RESULT pCi/L	2σ ERR (COUNT)	MDA pCi/L	RDL pCi/L	QUALI- FIERS TEST	ADDED pCi/L	2σ ERR pCi/L	REC %	3σ LMITS (TOTAL)	PROTOCOL LIMITS
Radium 228	14.7	1.5	1.51	3.00	AC	16.8	0.67	88	80-120	80-120

QC-LCS #76420

LAB CONTROL SAMPLES

Page 1

SUMMARY DATA SECTION

Page 9

Lab id <u>EBRLNE</u>
Protocol <u>CHPRC</u>
Version <u>Ver 1.0</u>
Form <u>DVD-LCS</u>
Version <u>3.06</u>
Report date <u>01/04/11</u>

EBERLINE SERVICES/RICHMOND

SAMPLE DELIVERY GROUP H4460

7311-008

B27WL6

DUPLICATE

SDG <u>7311</u> Contact <u>N. Joseph Verville</u> DUPLICATE Lab sample id <u>S012157-08</u> Dept sample id <u>7311-008</u>	ORIGINAL Lab sample id <u>S012157-01</u> Dept sample id <u>7311-001</u> Received <u>12/09/10</u>	Client/Case no <u>CHPRC</u> SDG <u>H4460</u> Contract No. <u>33677</u> Client sample id <u>B27WL6</u> Location/Matrix <u>HNF-N-506 25/90</u> <u>WATER</u> Collected <u>12/07/10 09:28</u> Custody/SAP No <u>X11-005-1</u> <u>X11-005</u>
--	---	---

ANALYTE	DUPLICATE	2σ ERR	MDA	RDL	QUALI-	ORIGINAL	2σ ERR	MDA	QUALI-	RPD	3σ	DER
	pCi/L	(COUNT)	pCi/L	pCi/L	FIERS		TEST.	pCi/L	(COUNT)	pCi/L	FIERS	%
Radium 228	-0.246	0.61	1.45	3.00	U	AC	-0.331	0.66	1.45	U	-	0.2

QC-DUP#1 76422

IU2 IU6DURA, OCTOBER 2010

Lab id <u>EBRINE</u>
Protocol <u>CHPRC</u>
Version <u>Ver 1.0</u>
Form <u>DVD-DUP</u>
Version <u>3.06</u>
Report date <u>01/04/11</u>

EBERLINE SERVICES / RICHMOND
SAMPLE DELIVERY GROUP H4460

7311-001

B27WL6

DATA SHEET

SDG <u>7311</u>	Client/Case no <u>CHPRC</u>	SDG <u>H4460</u>
Contact <u>N. Joseph Verville</u>	Contract <u>No. 33677</u>	
Lab sample id <u>S012157-01</u>	Client sample id <u>B27WL6</u>	
Dept sample id <u>7311-001</u>	Location/Matrix <u>HNF-N-506 25/90</u>	<u>WATER</u>
Received <u>12/09/10</u>	Collected <u>12/07/10 09:28</u>	
	Custody/SAF No <u>X11-005-1</u>	<u>X11-005</u>

ANALYTE	CAS NO	RESULT pCi/L	2 σ ERR (COUNT)	MDA pCi/L	RDL pCi/L	QUALI- FIERS	TEST
Radium 228	15262-20-1	-0.331	0.66	1.45	3.00	U	AC

IU2 IU6DURA, OCTOBER 2010

Lab id <u>EBRLNE</u>
Protocol <u>CHPRC</u>
Version <u>Ver 1.0</u>
Form <u>DVD-DS</u>
Version <u>3.06</u>
Report date <u>01/04/11</u>

EBERLINE SERVICES / RICHMOND
SAMPLE DELIVERY GROUP H4460

7311-002

B27WM8

DATA SHEET

SDG <u>7311</u>	Client/Case no <u>CHPRC</u>	SDG <u>H4460</u>
Contact <u>N. Joseph Verville</u>	Contract <u>No. 33677</u>	
Lab sample id <u>S012157-02</u>	Client sample id <u>B27WM8</u>	
Dept sample id <u>7311-002</u>	Location/Matrix <u>HNF-N-506 34/89</u>	<u>WATER</u>
Received <u>12/09/10</u>	Collected <u>12/07/10 12:57</u>	
	Custody/SAF No <u>X11-005-11</u>	<u>X11-005</u>

ANALYTE	CAS NO	RESULT pCi/L	2σ ERR (COUNT)	MDA pCi/L	RDL pCi/L	QUALI- FIERS	TEST
Radium 228	15262-20-1	-0.135	0.64	1.52	3.00	U	AC

IU2 IU6DURA, OCTOBER 2010

Lab id <u>EBRLNE</u>
Protocol <u>CHPRC</u>
Version <u>Ver 1.0</u>
Form <u>DVD-DS</u>
Version <u>3.06</u>
Report date <u>01/04/11</u>

EBERLINE SERVICES / RICHMOND
SAMPLE DELIVERY GROUP H4460

7311-003

B27WY2

DATA SHEET

SDG <u>7311</u>	Client/Case no <u>CHPRC</u>	SDG <u>H4460</u>
Contact <u>N. Joseph Verville</u>	Contract No. <u>33677</u>	
Lab sample id <u>S012157-03</u>	Client sample id <u>B27WY2</u>	
Dept sample id <u>7311-003</u>	Location/Matrix <u>HNF-N-506 34/89</u>	<u>WATER</u>
Received <u>12/09/10</u>	Collected <u>12/07/10 10:02</u>	
	Custody/SAF No <u>X11-005-85</u>	<u>X11-005</u>

ANALYTE	CAS NO	RESULT pCi/L	2 σ ERR (COUNT)	MDA pCi/L	RDL pCi/L	QUALI- FIERS	TEST
Radium 228	15262-20-1	-0.051	0.62	1.42	3.00	U	AC

IU2 IU6DURA, OCTOBER 2010

Lab id <u>EBRLNE</u>
Protocol <u>CHPRC</u>
Version <u>Ver 1.0</u>
Form <u>DVD-DS</u>
Version <u>3.06</u>
Report date <u>01/04/11</u>

EBERLINE SERVICES / RICHMOND
SAMPLE DELIVERY GROUP H4460

7311-004

B27WY3

DATA SHEET

SDG <u>7311</u>	Client/Case no <u>CHPRC</u>	SDG <u>H4460</u>
Contact <u>N. Joseph Verville</u>	Contract No. <u>33677</u>	
Lab sample id <u>S012157-04</u>	Client sample id <u>B27WY3</u>	
Dept sample id <u>7311-004</u>	Location/Matrix <u>HNF-N-506 34/89</u>	<u>WATER</u>
Received <u>12/09/10</u>	Collected <u>12/07/10 07:30</u>	
	Custody/SAF No <u>X11-005-86</u>	<u>X11-005</u>

ANALYTE	CAS NO	RESULT pCi/L	2σ ERR (COUNT)	MDA pCi/L	RDL pCi/L	QUALI- FIERS	TEST
Radium 228	15262-20-1	<u>-0.835</u>	0.79	1.69	3.00	U	AC

IU2 IU6DURA, OCTOBER 2010

EBERLINE SERVICES / RICHMOND
SAMPLE DELIVERY GROUP H4460

7311-005

B27XD8

DATA SHEET

SDG <u>7311</u>	Client/Case no <u>CHPRC</u>	SDG <u>H4460</u>
Contact <u>N. Joseph Verville</u>	Contract No. <u>33677</u>	
Lab sample id <u>S012157-05</u>	Client sample id <u>B27XD8</u>	
Dept sample id <u>7311-005</u>	Location/Matrix <u>HNF-N-506 25/90</u>	<u>WATER</u>
Received <u>12/09/10</u>	Collected <u>12/07/10 11:05</u>	
	Custody/SAF No <u>X11-005-295</u>	<u>X11-005</u>

ANALYTE	CAS NO	RESULT pCi/L	2σ ERR (COUNT)	MDA pCi/L	RDL pCi/L	QUALI- FIERS	TEST
Radium 228	15262-20-1	0.417	0.68	1.50	3.00	U	AC

IU2 IU6DURA, OCTOBER 2010

Lab id <u>EBRLNE</u>
Protocol <u>CHPRC</u>
Version <u>Ver 1.0</u>
Form <u>DVD-DS</u>
Version <u>3.06</u>
Report date <u>01/04/11</u>

EBERLINE SERVICES/RICHMOND

SAMPLE DELIVERY GROUP H4460

LAB METHOD SUMMARY

RADIUM 228 IN WATER

BETA COUNTING

Test AC Matrix WATER
 SDG 7311
 Contact N. Joseph Verville

Client CHPRC
 Contract No. 33677
 Contract SDG H4460

RESULTS

LAB RAW SUF-
 SAMPLE ID TEST FIX PLANCHET CLIENT SAMPLE ID Radium 228

Preparation batch 7284-061

S012157-01	7311-001	B27WL6	U
S012157-02	7311-002	B27WM8	U
S012157-03	7311-003	B27WY2	U
S012157-04	7311-004	B27WY3	U
S012157-05	7311-005	B27XD8	U
S012157-06	7311-006	Lab Control Sample	ok
S012157-07	7311-007	Method Blank	U
S012157-08	7311-008	Duplicate (S012157-01)	- U

Nominal values and limits from method RDLs (pCi/L) 3.00

METHOD PERFORMANCE

LAB RAW SUF- MDA ALIQ PREP DILU- YIELD EFF COUNT FWHM DRIFT DAYS ANAL-
 SAMPLE ID TEST FIX CLIENT SAMPLE ID pCi/L L FAC TION % % min keV KeV HELD PREPARED YZED DETECTOR

Preparation batch 7284-061 2σ prep error 10.4 % Reference Lab Notebook No. 7241 pg 61

S012157-01	B27WL6	1.45	0.500	84	150	21	12/28/10	12/28	GRB-221
S012157-02	B27WM8	1.52	0.500	69	150	21	12/28/10	12/28	GRB-222
S012157-03	B27WY2	1.42	0.500	83	150	21	12/28/10	12/28	GRB-223
S012157-04	B27WY3	1.69	0.500	83	150	21	12/28/10	12/28	GRB-224
S012157-05	B27XD8	1.50	0.500	83	150	21	12/28/10	12/28	GRB-229
S012157-06	Lab Control Sample	1.51	0.500	73	150		12/28/10	12/28	GRB-230
S012157-07	Method Blank	2.32	0.500	42	150		12/28/10	12/28	GRB-231
S012157-08	Duplicate (S012157-01)	1.45	0.500	83	150	21	12/28/10	12/28	GRB-232

Nominal values and limits from method 3.00 0.500 40-110 100 180

PROCEDURES REFERENCE RAISO_SEP_GPC
 SPP-062 Sample Aliquoting, rev 1
 DWP-894 Sequential Separation of Actinium-228 and Radium-226 in Drinking Water (>1 Liter Aliquot), rev 5

AVERAGES ± 2 SD MDA 1.61 ± 0.599
 FOR 8 SAMPLES YIELD 75 ± 29

Lab id EBRLNE
 Protocol CHPRC
 Version Ver 1.0
 Form DVD-LMS
 Version 3.06
 Report date 01/04/11

METHOD SUMMARIES

Page 1

SUMMARY DATA SECTION

Page 16

EBERLINE SERVICES / RICHMOND

SAMPLE DELIVERY GROUP H4460

SDG 7311

Contact N. Joseph Verville

REPORT GUIDE

Client CHPRC

Contract No. 33677

Case no SDG H4460

SAMPLE SUMMARY

The Sample and QC Summary Reports show all samples, including QC samples, reported in one Sample Delivery Group (SDG).

The Sample Summary Report fully identifies client samples and gives the corresponding lab sample identification. The QC Summary Report shows at the sample level how the lab organized the samples into batches and generated QC samples. The Preparation Batch and Method Summary Reports show this at the analysis level.

The following notes apply to these reports:

- * LAB SAMPLE ID is the lab's primary identification for a sample.
- * DEPARTMENT SAMPLE ID is an alternate lab id, for example one assigned by a radiochemistry department in a lab.
- * CLIENT SAMPLE ID is the client's primary identification for a sample. It includes any sample preparation done by the client that is necessary to identify the sample.
- * QC BATCH is a lab assigned code that groups samples to be processed and QCed together. These samples should have similar matrices.

QC BATCH is not necessarily the same as SDG, which reflects samples received and reported together.

- * All Lab Control Samples, Method Blanks, Duplicates and Matrix Spikes are shown that QC any of the samples. Due to possible reanalyses, not all results for all these QC samples may be relevant to the SDG. The Lab Control Sample, Method Blank, Duplicate, Matrix Spike and Method Summary Reports detail these relationships.

REPORT GUIDES

Page 1

SUMMARY DATA SECTION

Page 17

Lab id EBRINE

Protocol CHPRC

Version Ver 1.0

Form DVD-RG

Version 3.06

Report date 01/04/11

EBERLINE SERVICES / RICHMOND

SAMPLE DELIVERY GROUP H4460

SDG 7311

Contact N. Joseph Verville

REPORT GUIDE

Client CHPRC

Contract No. 33677

Case no SDG H4460

PREPARATION BATCH SUMMARY

The Preparation Batch Summary Report shows all preparation batches in one Sample Delivery Group (SDG) with information necessary to check the completeness and consistency of the SDG.

The following notes apply to this report:

- * The preparation batches are shown in the same order as the Method Summary Reports are printed.
- * Only analyses of planchets relevant to the SDG are included.
- * Each preparation batch should have at least one Method Blank and LCS in it to validate client sample results.
- * The QUALIFIERS shown are all qualifiers other than U, J, B, L and H that occur on any analysis in the preparation batch. The Method Summary Report has these qualifiers on a per sample basis.

These qualifiers should be reviewed as follows:

- X Some data has been manually entered or modified. Transcription errors are possible.
- P One or more results are 'preliminary'. The data is not ready for final reporting.
- 2 There were two or more results for one analyte on one planchet imported at one time. The results in DVD may not be the same as on the raw data sheets.

Other lab defined qualifiers may occur. In general, these should be addressed in the SDG narrative.

REPORT GUIDES

Page 2

SUMMARY DATA SECTION

Page 18

Lab id EBRINE

Protocol CHPRC

Version Ver 1.0

Form DVD-RG

Version 3.06

Report date 01/04/11

EBERLINE SERVICES / RICHMOND

SAMPLE DELIVERY GROUP H4460

SDG 7311

Contact N. Joseph Verville

REPORT GUIDE

Client CHPRC

Contract No. 33677

Case no SDG_H4460

WORK SUMMARY

The Work Summary Report shows all samples, including QC samples, and all relevant analyses in one Sample Delivery Group (SDG). This report is often useful as supporting documentation for an invoice.

The following notes apply to this report:

- * TEST is a code for the method used to measure associated analytes. Results and related information for each analyte are on the Data Sheet Report. In special cases, a test code used in the summary data section is not the same as in associated raw data. In this case, both codes are shown on the Work Summary.
- * SUFFIX is the lab's code to distinguish multiple analyses (recounts, reworks, reanalyses) of a fraction of the sample. The suffix indicates which result is being reported. An empty suffix normally identifies the first attempt to analyze the sample.
- * The LAB SAMPLE ID, TEST and SUFFIX uniquely identify all supporting data for a result. The Method Summary Report for each TEST has method performance data, such as yield, for each lab sample id and suffix and procedures used in the method.
- * PLANCHET is an alternate lab identifier for work done for one test. It, combined with the TEST and SUFFIX, may be the best link to raw data.
- * For QC samples, only analyses that directly QC some regular sample are shown. The Lab Control Sample, Method Blank, Duplicate, Matrix Spike and Method Summary Reports detail these relationships.
- * The SAS (Special Analytical Services) Number is a client or lab assigned code that reflects special processing for samples, such as rapid turn around. Counts of tests done are lists by SAS number since it is likely to affect prices.

REPORT GUIDES

Page 3

SUMMARY DATA SECTION

Page 19

Lab id EBRLNE

Protocol CHPRC

Version Ver 1.0

Form DVD-RG

Version 3.06

Report date 01/04/11

EBERLINE SERVICES / RICHMOND

SAMPLE DELIVERY GROUP H4460

SDG 7311

Contact N. Joseph Verville

REPORT GUIDE

Client CHPRC

Contract No. 33677

Case no SDG H4460

DATA SHEET

The Data Sheet Report shows all results and primary supporting information for one client sample or Method Blank. This report corresponds to both the CLP Inorganics and Organics Data Sheet.

The following notes apply to this report:

- * TEST is a code for the method used to measure an analyte. If the TEST is empty, no data is available; the analyte was not analyzed for.
- * The LAB SAMPLE ID and TEST uniquely identify work within the Summary Data Section of a Data Package. The Work Summary and Method Summary Reports further identify raw data that underlies this work.

The Method Summary Report for each TEST has method performance data, such as yield, for each Lab Sample ID and a list of procedures used in the method.

- * ERRORS can be labeled TOTAL or COUNT. TOTAL implies a preparation (non-counting method) error has been added, as square root of sum of squares, to the counting error denoted by COUNT. The preparation errors, which may vary by preparation batch, are shown on the Method Summary Report.
- * A RESULT can be 'N.R.' (Not Reported). This means the lab did this work but chooses not to report it now, possibly because it was reported at another time.
- * When reporting a Method Blank, a RESULT can be 'N.A.' (Not Applicable). This means there is no reported client sample work in the same preparation batch as the Blank's result. This is likely to occur when the Method Blank is associated with reanalyses of selected work for a few samples in the SDG.

The following qualifiers are defined by the DVD system:

- U The RESULT is less than the MDA (Minimum Detectable Activity).

REPORT GUIDES

Page 4

SUMMARY DATA SECTION

Page 20

Lab id EBRINE
Protocol CHPRC
Version Ver 1.0
Form DVD-RG
Version 3.06
Report date 01/04/11

EBERLINE SERVICES / RICHMOND

SAMPLE DELIVERY GROUP H4460

SDG 7311
 Contact N. Joseph Verville

GUIDE, cont.

Client CHPRC
 Contract No. 33677
 Case no SDG H4460

DATA SHEET

If the MDA is blank, the ERROR is used as the limit.

- J The RESULT is less than the RDL (Required Detection Limit) and no U qualifier is assigned.
 - B A Method Blank associated with this sample had a result without a U flag and, after correcting for possibly different aliquots, that result is greater than or equal to the MDA for this sample.
- Normally, B is not assigned if U is. When method blank subtraction is shown on this report, B flags are assigned based on the unsubtracted values while U's are assigned based on the subtracted ones. Both flags can be assigned in this case.
- For each sample result, all Method Blank results in the same preparation batch are compared. The Method Summary Report documents this and other QC relationships.
- L Some Lab Control Sample that QC's this sample had a low recovery. The lab can disable assignment of this qualifier.
 - H Similar to 'L' except the recovery was high.
 - P The RESULT is 'preliminary'.
 - X Some data necessary to compute the RESULT, ERROR or MDA was manually entered or modified.
 - 2 There were two or more results available for this analyte. The reported result may not be the same as in the raw data.

Other qualifiers are lab defined. Definitions should be in the SDG narrative.

The following values are underlined to indicate possible problems:

- * An MDA is underlined if it is bigger than its RDL.

EBERLINE SERVICES / RICHMOND

SAMPLE DELIVERY GROUP H4460

SDG 7311
Contact N. Joseph Verville

GUIDE, cont.

Client CHPRC
Contract No. 33677
Case no SDG H4460

DATA SHEET

- * An ERROR is underlined if the 1.645 sigma counting error is bigger than both the MDA and the RESULT, implying that the MDA may not be a good estimate of the 'real' minimum detectable activity.
- * A negative RESULT is underlined if it is less than the negative of its 2 sigma counting ERROR.
- * When reporting a Method Blank, a RESULT is underlined if greater than its MDA. If the MDA is blank, the 2 sigma counting error is used in the comparison.

REPORT GUIDES

Page 6

SUMMARY DATA SECTION

Page 22

Lab id EBRLNE
Protocol CHPRC
Version Ver 1.0
Form DVD-RG
Version 3.06
Report date 01/04/11

EBERLINE SERVICES / RICHMOND

SAMPLE DELIVERY GROUP H4460

SDG 7311
Contact N. Joseph Verville

REPORT GUIDE

Client CHPRC
Contract No. 33677
Case no SDG H4460

LAB CONTROL SAMPLE

The Lab Control Sample Report shows all results, recoveries and primary supporting information for one Lab Control Sample.

The following notes apply to this report:

- * All fields in common with the Data Sheet Report have similar usage. Refer to its Report Guide for details.
- * An amount ADDED is the lab's value for the actual amount spiked into this sample with its ERROR an estimate of the error of this amount.

An amount added is underlined if its ratio to the corresponding RDL is outside protocol specified limits.

- * REC (Recovery) is RESULT divided by ADDED expressed as a percent.
- * The first, computed limits for the recovery reflect:
 1. The error of RESULT, including that introduced by rounding the result prior to printing.

If the limits are labeled (TOTAL), they include preparation error in the result. If labeled (COUNT), they do not.
 2. The error of ADDED.
 3. A lab specified, per analyte bias. The bias changes the center of the computed limits.
- * The second limits are protocol defined upper and lower QC limits for the recovery.
- * The recovery is underlined if it is outside either of these ranges.

Lab id EBRLNE
Protocol CHPRC
Version Ver 1.0
Form DVD-RG
Version 3.06
Report date 01/04/11

EBERLINE SERVICES / RICHMOND

SAMPLE DELIVERY GROUP H4460

SDG 7311

Contact N. Joseph Verville

REPORT GUIDE

Client CHPRC

Contract No. 33677

Case no SDG H4460

DUPLICATE

The Duplicate Report shows all results, differences and primary supporting information for one Duplicate and associated Original sample.

The following notes apply to this report:

- * All fields in common with the Data Sheet Report have similar usage. This applies both to the Duplicate and Original sample data. Refer to the Data Sheet Report Guide for details.

If the Duplicate has data for a TEST and the lab did not do this test to the Original, the Original's RESULTS are underlined.

- * The RPD (Relative Percent Difference) is the absolute value of the difference of the RESULTS divided by their average expressed as a percent.

If both RESULTS are less than their MDAs, no RPD is computed and a '-' is printed.

For an analyte, if the lab did work for both samples but has data for only one, the MDA from the sample with data is used as the other's result in the RPD.

- * The first, computed limit is the sum, as square root of sum of squares, of the errors of the results divided by the average result as a percent, hence the relative error of the difference rather than the error of the relative difference. The errors include those introduced by rounding the RESULTS prior to printing.

If this limit is labeled TOT, it includes the preparation error in the RESULTS. If labeled CNT, it does not.

This value reported for this limit is at most 999.

- * The second limit for the RPD is the larger of:

1. A fixed percentage specified in the protocol.

REPORT GUIDES

Page 8

SUMMARY DATA SECTION

Page 24

Lab id EBRLNE

Protocol CHPRC

Version Ver 1.0

Form DVD-RG

Version 3.06

Report date 01/04/11

EBERLINE SERVICES / RICHMOND

SAMPLE DELIVERY GROUP H4460

SDG 7311

Contact N. Joseph Verville

GUIDE, cont.

Client CHPRC

Contract No. 33677

Case no SDG H4460

DUPLICATE

2. A protocol factor (typically 2) times the average MDA as a percent of the average result. This limit applies when the results are close to the MDAs.

- * The RPD is underlined if it is greater than either limit.
- * If specified by the lab, the second limit column is replaced by the Difference Error Ratio (DER), which is the absolute value of the difference of the results divided by the quadratic sum of their one sigma errors, the same errors as used in the first limit.

Except for differences due to rounding, the DER is the same as the RPD divided by the first RPD limit with the limit scaled to 1 sigma.

- * The DER is underlined if it is greater than the sigma factor, typically 2 or 3, shown in the header for the first RPD limit.

REPORT GUIDES

Page 9

SUMMARY DATA SECTION

Page 25

Lab id EBRLNE

Protocol CHPRC

Version Ver 1.0

Form DVD-RG

Version 3.06

Report date 01/04/11

EBERLINE SERVICES / RICHMOND

SAMPLE DELIVERY GROUP H4460

SDG 7311
 Contact N. Joseph Verville

REPORT GUIDE

Client CHPRC
 Contract No. 33677
 Case no SDG H4460

MATRIX SPIKE

The Matrix Spike Report shows all results, recoveries and primary supporting information for one Matrix Spike and associated Original sample.

The following notes apply to this report:

- * All fields in common with the Data Sheet Report have similar usage. This applies both to the Spiked and Original sample data. Refer to the Data Sheet Report Guide for details.

If the Spike has data for a TEST and the lab did not do this test to the Original, the Original's RESULTS are underlined.

- * An amount ADDED is the lab's value for the actual amount spiked into the Spike sample with its ERROR an estimate of the error of this amount.

An amount is underlined if its ratio to the corresponding RDL is outside protocol specified limits.

- * REC (Recovery) is the Spike RESULT minus the Original RESULT divided by ADDED expressed as a percent.

- * The first, computed limits for the recovery reflect:

1. The errors of the two RESULTS, including those introduced by rounding them prior to printing.

If the limits are labeled (TOTAL), they include preparation error in the result. If labeled (COUNT), they do not.

2. The error of ADDED.

3. A lab specified, per analyte bias. The bias changes the center of the computed limits.

- * The second limits are protocol defined upper and lower QC limits

Lab id EBRLNE
 Protocol CHPRC
 Version Ver 1.0
 Form DVD-RG
 Version 3.06
 Report date 01/04/11

EBERLINE SERVICES / RICHMOND

SAMPLE DELIVERY GROUP H4460

SDG 7311

Contact N. Joseph Verville

GUIDE, cont.

Client CHPRC

Contract No. 33677

Case no SDG H4460

MATRIX SPIKE

for the recovery.

These limits are left blank if the Original RESULT is more than a protocol defined factor (typically 4) times ADDED. This is a way of accounting for that when the spike is small compared to the amount in the original sample, the recovery is unreliable.

- * The recovery is underlined (out of spec) if it is outside either of these ranges.

REPORT GUIDES

Page 11

SUMMARY DATA SECTION

Page 27

Lab id EBRLNE

Protocol CHPRC

Version Ver 1.0

Form DVD-RG

Version 3.06

Report date 01/04/11

EBERLINE SERVICES / RICHMOND

SAMPLE DELIVERY GROUP H4460

SDG 7311
Contact N. Joseph Verville

REPORT GUIDE

Client CHPRC
Contract No. 33677
Case no SDG H4460

METHOD SUMMARY

The Method Summary Report has two tables. One shows up to five results measured using one method. The other has performance data for the method. There is one report for each TEST, as used on the Data Sheet Report.

The following notes apply to this report:

- * Each table is subdivided into sections, one for each preparation batch. A preparation batch is a group of aliquots prepared at roughly the same time in one work area of the lab using the same method.

There should be Lab Control Sample and Method Blank results in each preparation batch since this close correspondence makes the QC meaningful. Depending on lab policy, Duplicates need not occur in each batch since they QC sample dependencies such as matrix effects.

- * The RAW TEST column shows the test code used in the raw data to identify a particular analysis if it is different than the test code in the header of the report. This occurs in special cases due to method specific details about how the lab labels work.

The Lab Sample or Planchet ID combined with the (Raw) Test Code and Suffix uniquely identify the raw data for each analysis.

- * If a result is less than both its MDA and RDL, it is replaced by just 'U' on this report. If it is greater than or equal to the RDL but less than the MDA, the result is shown with a 'U' flag.

The J and X flags are as on the data sheet.

- * Non-U results for Method Blanks are underlined to indicate possible contamination of other samples in the preparation batch. The Method Blank Report has supporting data.
- * Lab Control Sample and Matrix Spike results are shown as: ok, No data, LOW or HIGH, with the last two underlined. 'No data'

Lab id EBRLNE
Protocol CHPRC
Version Ver 1.0
Form DVD-RG
Version 3.06
Report date 01/04/11

EBERLINE SERVICES / RICHMOND

SAMPLE DELIVERY GROUP H4460

SDG 7311
 Contact N. Joseph Verville

GUIDE, cont.

Client CHPRC
 Contract No. 33677
 Case no SDG H4460

METHOD SUMMARY

means no amount ADDED was specified. 'LOW' and 'HIGH' correspond to when the recovery is underlined on the Lab Control Sample or Matrix Spike Report. See these reports for supporting data.

- * Duplicate sample results are shown as: ok, No data, or OUT, with the last two underlined. 'No data' means there was no original sample data found for this duplicate. 'OUT' corresponds to when the RPD is underlined on the Duplicate Report. See this report for supporting data.
 - * If the MDA column is labeled 'MAX MDA', there was more than one result measured by the reported method and the MDA shown is the largest MDA. If not all these results have the same RDL, the MAX MDA reflects only those results with RDL equal to the smallest one.
- MDAs are underlined if greater than the printed RDL.
- * Aliquots are underlined if less than the nominal value specified for the method.
 - * Preparation factors are underlined if greater than the nominal value specified for the method.
 - * Dilution factors are underlined if greater than the nominal value specified for the method.
 - * Residues are underlined if outside the range specified for the method. Residues are not printed if yields are.
 - * Yields, which may be gravimetric, radiometric or some type of recovery depending on the method, are underlined if outside the range specified for the method.
 - * Efficiencies are underlined if outside the range specified for the method. Efficiencies are detector and geometry dependent so this test is only approximate.

REPORT GUIDES

Page 13

SUMMARY DATA SECTION

Page 29

Lab id EBRLNE
 Protocol CHPRC
 Version Ver 1.0
 Form DVD-RG
 Version 3.06
 Report date 01/04/11

EBERLINE SERVICES / RICHMOND

SAMPLE DELIVERY GROUP H4460

SDG 7311
 Contact N. Joseph Verville

GUIDE, cont.

Client CHPRC
 Contract No. 33677
 Case no SDG H4460

METHOD SUMMARY

- * Count times are underlined if less than the nominal value specified for the method.
- * Resolutions (as FWHM; Full Width at Half Max) are underlined if greater than the method specified limit.
- * Tracer drifts are underlined if their absolute values are greater than the method specified limit. Tracer drifts are not printed if percent moistures are.
- * Days Held are underlined if greater than the holding time specified in the protocol.
- * Analysis dates are underlined if before their planchet's preparation date or, if a limit is specified, too far after it.

For some methods, ratios as percentages and error estimates for them are computed for pairs of results. A ratio column header like '1+3' means the ratio of the first result column and the third result column.

Ratios are not computed for Lab Control Sample, Method Blank or Matrix Spike results since their matrices are not necessarily similar to client samples'.

The error estimate for a ratio of results from one planchet reflects only counting errors since other errors should be correlated. For a ratio involving different planchets, if QC limits are computed based on total errors, the error for the ratio allows for the preparation errors for the planchets.

The ratio is underlined (out of spec) if the absolute value of its difference from the nominal value is greater than its error estimate. If no nominal value is specified, this test is not done.

For Gross Alpha or Gross Beta results, there may be a column showing the sum of other Alpha or Beta emitters. This sum includes all relevant

REPORT GUIDES

Page 14

SUMMARY DATA SECTION

Page 30

Lab id EBRLNE
 Protocol CHPRC
 Version Ver 1.0
 Form DVD-RG
 Version 3.06
 Report date 01/04/11

EBERLINE SERVICES / RICHMOND

SAMPLE DELIVERY GROUP H4460

SDG 7311
Contact N. Joseph Verville

GUIDE, cont.

Client CHPRC
Contract No. 33677
Case no SDG H4460

METHOD SUMMARY

results in the DVD database, whether reported or not. Results in the sum are weighted by a particles/decay value specified by the lab for each relevant analyte. Results less than their MDA are not included. No sums are computed for Lab Control, Method Blank or Matrix Spike samples since their various planchets may not be physically related.

If a ratio of total isotopic to Gross Alpha or Beta is shown, the error for the ratio reflects both the error in the Gross result and the sum, as square root of sum of squares, of the errors in the isotopic results.

For total elemental uranium or thorium results, there may be a column showing the total weight computed from associated isotopic results. Ignoring results less than their MDAs, this is a weighted sum of the isotopic results. The weights depend on the molecular weight and half-life of each isotope so as to convert activities (decays) to weight (atoms).

If a ratio of total computed to measured elemental uranium or thorium is shown, the error for the ratio reflects the errors in all the measurements.

REPORT GUIDES

Page 15

SUMMARY DATA SECTION

Page 31

Lab id EBRLNE
Protocol CHPRC
Version Ver 1.0
Form DVD-RG
Version 3.06
Report date 01/04/11

CHPRC	CHAIN OF CUSTODY/SAMPLE ANALYSIS REQUEST	C.O.C. # X11-005-1
		Page 1 of 1

Collector CA Snyder CHPRC	Contact/Requester Karen Waters-Husted H4460 (7311)	Telephone No. 376-4650
SAF No. X11-005	Sampling Origin Hanford Site	Purchase Order/Charge Code 300118ES20
Project Title IU2 IU6DURA OCTOBER 2010	Logbook No: HNF-N-506 25790	Ice Chest No. 6WS-018
Shipped To (Lab) Eberline Services	Method of Shipment Commercial Carrier	Bill of Lading/Air Bill No. 7965 30479280
Protocol CERCLA	Priority: 30 Days PRIORITY	Offsite Property No. 02511

POSSIBLE SAMPLE HAZARDS/REMARKS ** ** Contains Radioactive Material at concentrations that are not regulated for transportation per 49 CFR but are not releasable per DOE Order 5400.5 (1990/1993)	SPECIAL INSTRUCTIONS Hold Time Site Wide Area Generator Knowledge Information Form applies. The CACN for all analytical work at WSCF is 401922. Please report all TICs.
--	---

Total Activity Exemption: Yes No

Sample No.	Filter	*	Date	Time	No/Type Container	Sample Analysis	Holding Time	Preservative
B27WL6	N	W	12/07/10	0928	1x20-mL P	Activity Scan	6 Months	None
B27WL6	N	W	↓	↓	1x1000-mL G/P	RAISO_SEP_GPC {Radium-228}	6 Months	HNO3 to pH <2

35 of 40

Relinquished By CA Snyder CHPRC	Date/Time DEC 07 2010 1525	Received By SSU- 1	Date/Time DEC 07 2010 1525	
Relinquished By SSU- 1	Date/Time DEC 08 2010 0845	Received By L.D. Wall CHPRC	Date/Time DEC 08 2010 0845	Matrix * S = Soil DS = Drum Solid SF = Sediment DI = Drum Liquid SO = Solid T = Tissue SL = Sludge WI = Wine W = Water L = Liquid O = Oil V = Vegetation A = Air X = Other
Relinquished By L.D. Wall CHPRC	Date/Time DEC 08 2010 1400	Received By FED EX	Date/Time	
Relinquished By FED EX	Date/Time	Received By Alex Keenston	Date/Time 12/9/10 10:00	
FINAL SAMPLE DISPOSITION	Disposal Method (e.g., Return to customer, per lab procedure, used in process)		Disposed By	Date/Time

CHPRC **CHAIN OF CUSTODY/SAMPLE ANALYSIS REQUEST** C.O.C. # **X11-005-11**

Page 1 of 1

Collector JOSHARTZER CHPRC	Contact/Requester Karen Waters-Husted H2460 (9311)	Telephone No. 376-4650
SAF No. X11-005	Sampling Origin Hanford Site	Purchase Order/Charge Code 300118ES20
Project Title IU2 IUGDURA OCTOBER 2010	Logbook No: HNF-N-506 34189	Ice Chest No. 6WS-018
Shipped To (Lab) Eberline Services	Method of Shipment Commercial Carrier	Bill of Lading/Air Bill No. 7965 3047 9280
Protocol CERCLA	Priority: 30 Days PRIORITY	Offsite Property No. 02511

POSSIBLE SAMPLE HAZARDS/REMARKS ** ** Contains Radioactive Material at concentrations that are not regulated for transportation per 49 CFR but are not releasable per DOE Order 5400.5 (1990/1993)	SPECIAL INSTRUCTIONS Hold Time Site Wide Area Generator Knowledge Information Form applies. The CACN for all analytical work at WSCF is 401922. Please report all TICs.
--	---

Total Activity Exemption: Yes No

Sample No.	Filter	*	Date	Time	No/Type Container	Sample Analysis	Holding Time	Preservative
B27WM8	N	W	12-7-10	1257	1x20-mL P	Activity Scan	6 Months	None
B27WM8	N	W	↓	↓	1x1000-mL G/P	RAISO_SEP_GPC (Radium-228)	6 Months	HNO3 to pH <2

36 of 40

Relinquished By JOSHARTZER <i>[Signature]</i>	Date/Time DEC 07 2010 ¹⁴³⁰	Received By SSU- 1	Date/Time DEC 07 2010 ¹⁴³⁰	Matrix * S = Soil DS = Drum Solid SF = Sediment DI = Drum Limb SO = Solid T = Tissue SL = Sludge WI = Wine W = Water L = Liquid O = Oil V = Vegetation A = Air X = Other
Relinquished By SSU- 1	Date/Time DEC 08 2010 ⁰⁸⁴⁵	Received By L.D. Wall <i>[Signature]</i>	Date/Time DEC 08 2010 ⁰⁸⁴⁵	
Relinquished By L.D. Wall <i>[Signature]</i>	Date/Time DEC 08 2010 ¹⁴⁰⁰	Received By FEDEX	Date/Time	
Relinquished By FEDEX	Date/Time	Received By flex kelentun <i>[Signature]</i>	Date/Time 12/9/10 10:00	
FINAL SAMPLE DISPOSITION	Disposal Method (e.g., Return to customer, per lab procedure, used in process)		Disposed By	Date/Time

Collector JOHARTZER CHPRC	Contact/Requester Karen Waters-Husted H4460 (7311)	Telephone No. 376-4650
SAF No. X11-005	Sampling Origin Hanford Site	Purchase Order/Charge Code 300118ES20
Project Title IIJ2 II6DURA OCTOBER 2010	Logbook No: HNF-N-506 34189	Ice Chest No. 6WS-018
Shipped To (Lab) Eberline Services	Method of Shipment Commercial Carrier	Bill of Lading/Air Bill No. 7965 3047 9280
Protocol CERCLA	Priority: 30 Days PRIORITY	Offsite Property No. 02511

POSSIBLE SAMPLE HAZARDS/REMARKS ** ** Contains Radioactive Material at concentrations that are not regulated for transportation per 49 CFR but are not releasable per DOE Order 5400.5 (1990/1993)	SPECIAL INSTRUCTIONS Hold Time Site Wide Area Generator Knowledge Information Form applies. The CACN for all analytical work at WSCF is 401922. Please report all TICs.
--	--

Sample No.	Filter	*	Date	Time	No/Type Container	Sample Analysis	Holding Time	Preservative
B27WY2	N	W	12-7-10	1002	1x20-mL P	Activity Scan	6 Months	None
B27WY2	N	W	↓	↓	1x1000-mL G/P	RAISO_SEP_GPC (Radium-228)	6 Months	HNO3 to pH <2

37 of 40

Relinquished By JOHARTZER CHPRC	Print <i>[Signature]</i>	Sign <i>[Signature]</i>	Date/Time DEC 07 2010 1430	Received By SSU- 1	Print SSU- 1	Sign SSU- 1	Date/Time DEC 07 2010 1430	Matrix * S = Soil DS = Drum Solid SF = Sediment DI = Drum Liquid SO = Solid T = Tissue SL = Sludge WI = Wine W = Water L = Liquid O = Oil V = Vegetation A = Air X = Other
Relinquished By SSU- 1			Date/Time DEC 08 2010 0845	Received By LB. Wall CHPRC			Date/Time DEC 08 2010 0845	
Relinquished By LD. Wall CHPRC			Date/Time DEC 08 2010 1400	Received By FEDEX			Date/Time	
Relinquished By FEDEX			Date/Time	Received By <i>[Signature]</i>			Date/Time KEENSON 12/9/10 10:00	
FINAL SAMPLE DISPOSITION	Disposal Method (e.g., Return to customer, per lab procedure, used in process)			Disposed By			Date/Time	

CHPRC	CHAIN OF CUSTODY/SAMPLE ANALYSIS REQUEST	C.O.C. # X11-005-86
		Page 1 of 1

Collector JOSHARTZER CHPRC	Contact/Requester Karen Waters-Husted H4460 (7311)	Telephone No. 376-4650
SAF No. X11-005	Sampling Origin Hanford Site	Purchase Order/Charge Code 300118ES20
Project Title IIJ2 IIJ6DURA, OCTOBER 2010	Logbook No: HNF-N-506 34189	Ice Chest No. 6WS-018
Shipped To (Lab) Eberline Services	Method of Shipment Commercial Carrier	Bill of Lading/Air Bill No. 7965 3047 9280
Protocol CERCLA	Priority: 30 Days PRIORITY	Offsite Property No. 02511

POSSIBLE SAMPLE HAZARDS/REMARKS ** ** Contains Radioactive Material at concentrations that are not regulated for transportation per 49 CFR but are not releasable per DOE Order 5400.5 (1990/1993)	SPECIAL INSTRUCTIONS Hold Time Site Wide Area Generator Knowledge Information Form applies. The CACN for all analytical work at WSCF is 401922. Please report all TICs.
Total Activity Exemption: Yes <input checked="" type="checkbox"/> No <input type="checkbox"/>	

Sample No.	Filter	*	Date	Time	No/Type Container	Sample Analysis	Holding Time	Preservative
B27WY3	N	W	12-7-10	0730	1x20-mL P	Activity Scan	6 Months	None
B27WY3	N	W	↓	↓	1x1000-mL G/P	RAISO_SEP_GPC (Radium-228)	6 Months	HNO3 to pH <2

38 of 40

Relinquished By JOSHARTZER CHPRC	Print <i>[Signature]</i>	Sign <i>[Signature]</i>	Date/Time 1430 DEC 07 2010	Received By SSU- 1	Print SSU- 1	Sign SSU- 1	Date/Time 1430 DEC 07 2010	Matrix * S = Soil DS = Drum Solid SE = Sediment DI = Drum Limi SO = Solid T = Tissue SL = Sludge WI = Wine W = Water L = Liquid O = Oil V = Vegetation A = Air X = Other
Relinquished By SSU- 1	Date/Time DEC 08 2010 0845	Received By L.D. Wall CHPRC	Date/Time DEC 08 2010 0845	Received By L.D. Wall	Date/Time DEC 08 2010 0845			
Relinquished By L.D. Wall CHPRC	Date/Time DEC 08 2010 1400	Received By FEDEX	Date/Time	Received By FEDEX	Date/Time			
Relinquished By FEDEX	Date/Time	Received By flex kelenson	Date/Time 12/9/10 10:00	Received By KELENSON	Date/Time 12/9/10 10:00			
FINAL SAMPLE DISPOSITION	Disposal Method (e.g., Return to customer, per lab procedure, used in process)			Disposed By			Date/Time	

CHPRC	CHAIN OF CUSTODY/SAMPLE ANALYSIS REQUEST	C.O.C. # X11-005-295
		Page 1 of 1

Collector CA Snyder CHPRC	Contact/Requester Karen Waters-Husted H4460 (7311)	Telephone No. 376-4650
SAF No. X11-005	Sampling Origin Hanford Site	Purchase Order/Charge Code 300118ES20
Project Title IJ2 IJ6DURA OCTOBER 2010	Logbook No: HNF-N-506 25190	Ice Chest No. 6WS-08T018 RW 12/8/10
Shipped To (Lab) Eberline Services	Method of Shipment Commercial Carrier	Bill of Lading/Air Bill No. 7965 3047 9280
Protocol CERCLA	Priority: 30 Days PRIORITY	Offsite Property No. 02511

POSSIBLE SAMPLE HAZARDS/REMARKS ** ** Contains Radioactive Material at concentrations that are not regulated for transportation per 49 CFR but are not releasable per DOE Order 5400.5 (1990/1993)	SPECIAL INSTRUCTIONS Hold Time Site Wide Area Generator Knowledge Information Form applies. The CACN for all analytical work at WSCF is 401922. Please report all TICs.
Total Activity Exemption: Yes <input checked="" type="checkbox"/> No <input type="checkbox"/>	

Sample No.	Filter	*	Date	Time	No/Type Container	Sample Analysis	Holding Time	Preservative
B27XD8	N	W	12/6/10	1105	1x20-mL P	Activity Scan	6 Months	None
B27XD8	N	W	↓	↓	1x1000-mL G/P	RAISO_SEP_GPC (Radium-228)	6 Months	HNO3 to pH <2

39 of 40

Relinquished By CA Snyder CHPRC	Date/Time DEC 07 2010 1525	Received By SSU-1	Date/Time DEC 07 2010 1525	Matrix * S = Soil DS = Drum Solid SF = Sediment DI = Drum Ligni SO = Solid T = Tar SL = Sludge WI = Wine W = Water L = Lignin O = Oil V = Vegetation A = Air X = Other
Relinquished By SSU-1	Date/Time DEC 08 2010 0845	Received By L.D. Wall CHPRC	Date/Time DEC 08 2010 0845	
Relinquished By L.D. Wall CHPRC	Date/Time DEC 08 2010 1400	Received By FEDEX	Date/Time	
Relinquished By FED EX	Date/Time	Received By flex kelley KELENOR	Date/Time 12/10/10 10:00	
FINAL SAMPLE DISPOSITION	Disposal Method (e.g., Return to customer, per lab procedure, used in process)		Disposed By	



RICHMOND, CA LABORATORY

SAMPLE RECEIPT CHECKLIST

Client: CHPRC City RICHLAND State WA

Date/Time received 12/09/10 10:00 CoC No. X11-005-11,85,86,1,295

Container I.D. No. GWS-08 Requested TAT (Days) 30 P.O. Received Yes [] No []

INSPECTION

1. Custody seals on shipping container intact? Yes [] No [] N/A []
2. Custody seals on shipping container dated & signed? Yes [] No [] N/A []
3. Custody seals on sample containers intact? Yes [] No [] N/A []
4. Custody seals on sample containers dated & signed? Yes [] No [] N/A []
5. Packing material is: Wet [] Dry [] N/A []
6. Number of samples in shipping container: 5 Sample Matrix WATER
7. Number of containers per sample: 2 (Or see CoC _____)
8. Samples are in correct container Yes [] No []
9. Paperwork agrees with samples? Yes [] No []
10. Samples have: Tape [] Hazard labels [] Rad labels [] Appropriate sample labels []
11. Samples are: In good condition [] Leaking [] Broken Container [] Missing []
12. Samples are: Preserved [] Not preserved [] pH 2 Preservative _____
13. Describe any anomalies:

14. Was P.M. notified of any anomalies? Yes [] No [] Date _____

15. Inspected by JK Date: 12/09/10 Time: 10:50

Customer Sample No.	Beta/Gamma cpm	Ion Chamber mR/hr	Wipe	Customer Sample No.	Beta/Gamma cpm	Ion Chamber mR/hr	wipe
<u>All Samples</u>	<u>< 60</u>						

Ion Chamber Ser. No. _____
Alpha Meter Ser. No. _____
Beta/Gamma Meter Ser. No. 100482

Calibration date _____
Calibration date _____
Calibration date 24 Sep. 2010